



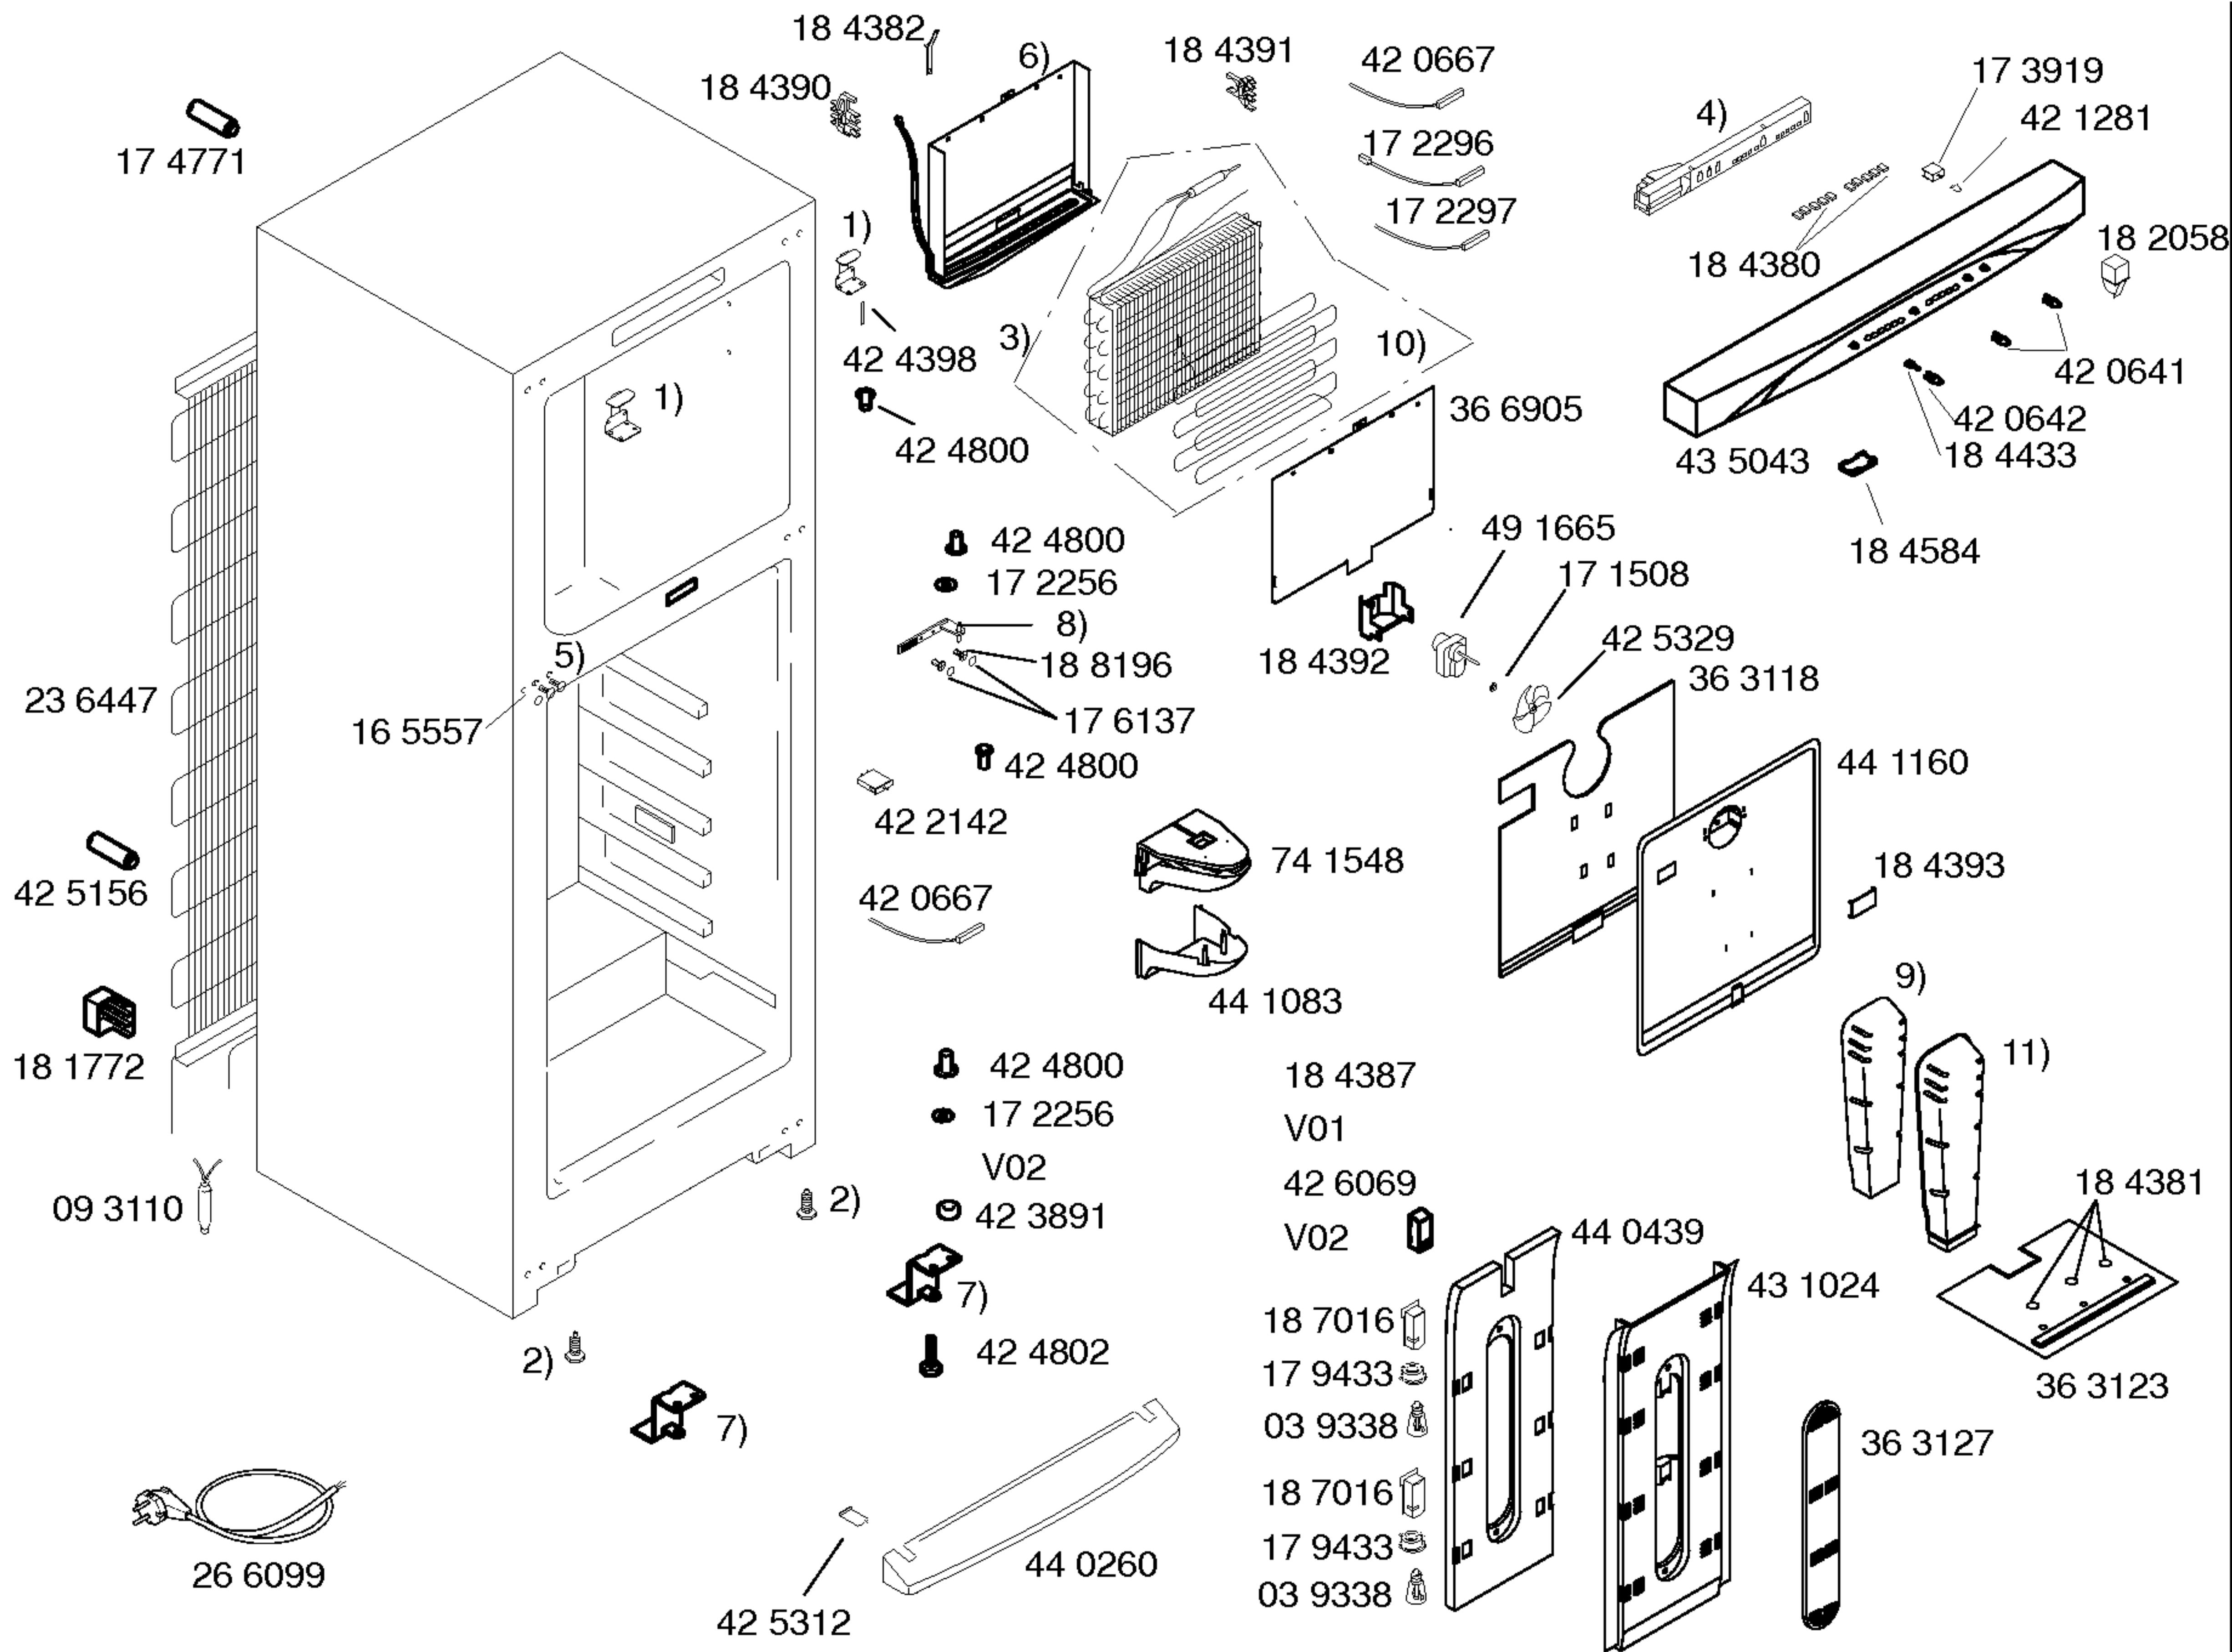

Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
59 2794
(ES,GB,FR,PT)


- 1) 17 1312
- 2) 42 4340
- 3) 43 8723
- 4) 49 4164
- V01
- 49 5511
- V02
- 5) 16 5552
- 6) 36 9906
- 7) 42 4801
- V01
- 42 8184
- V02
- 8) 42 4825
- 9) 43 7167
- V01
- 44 3698
- V02
- 10) 36 9820
- 11) 43 7164

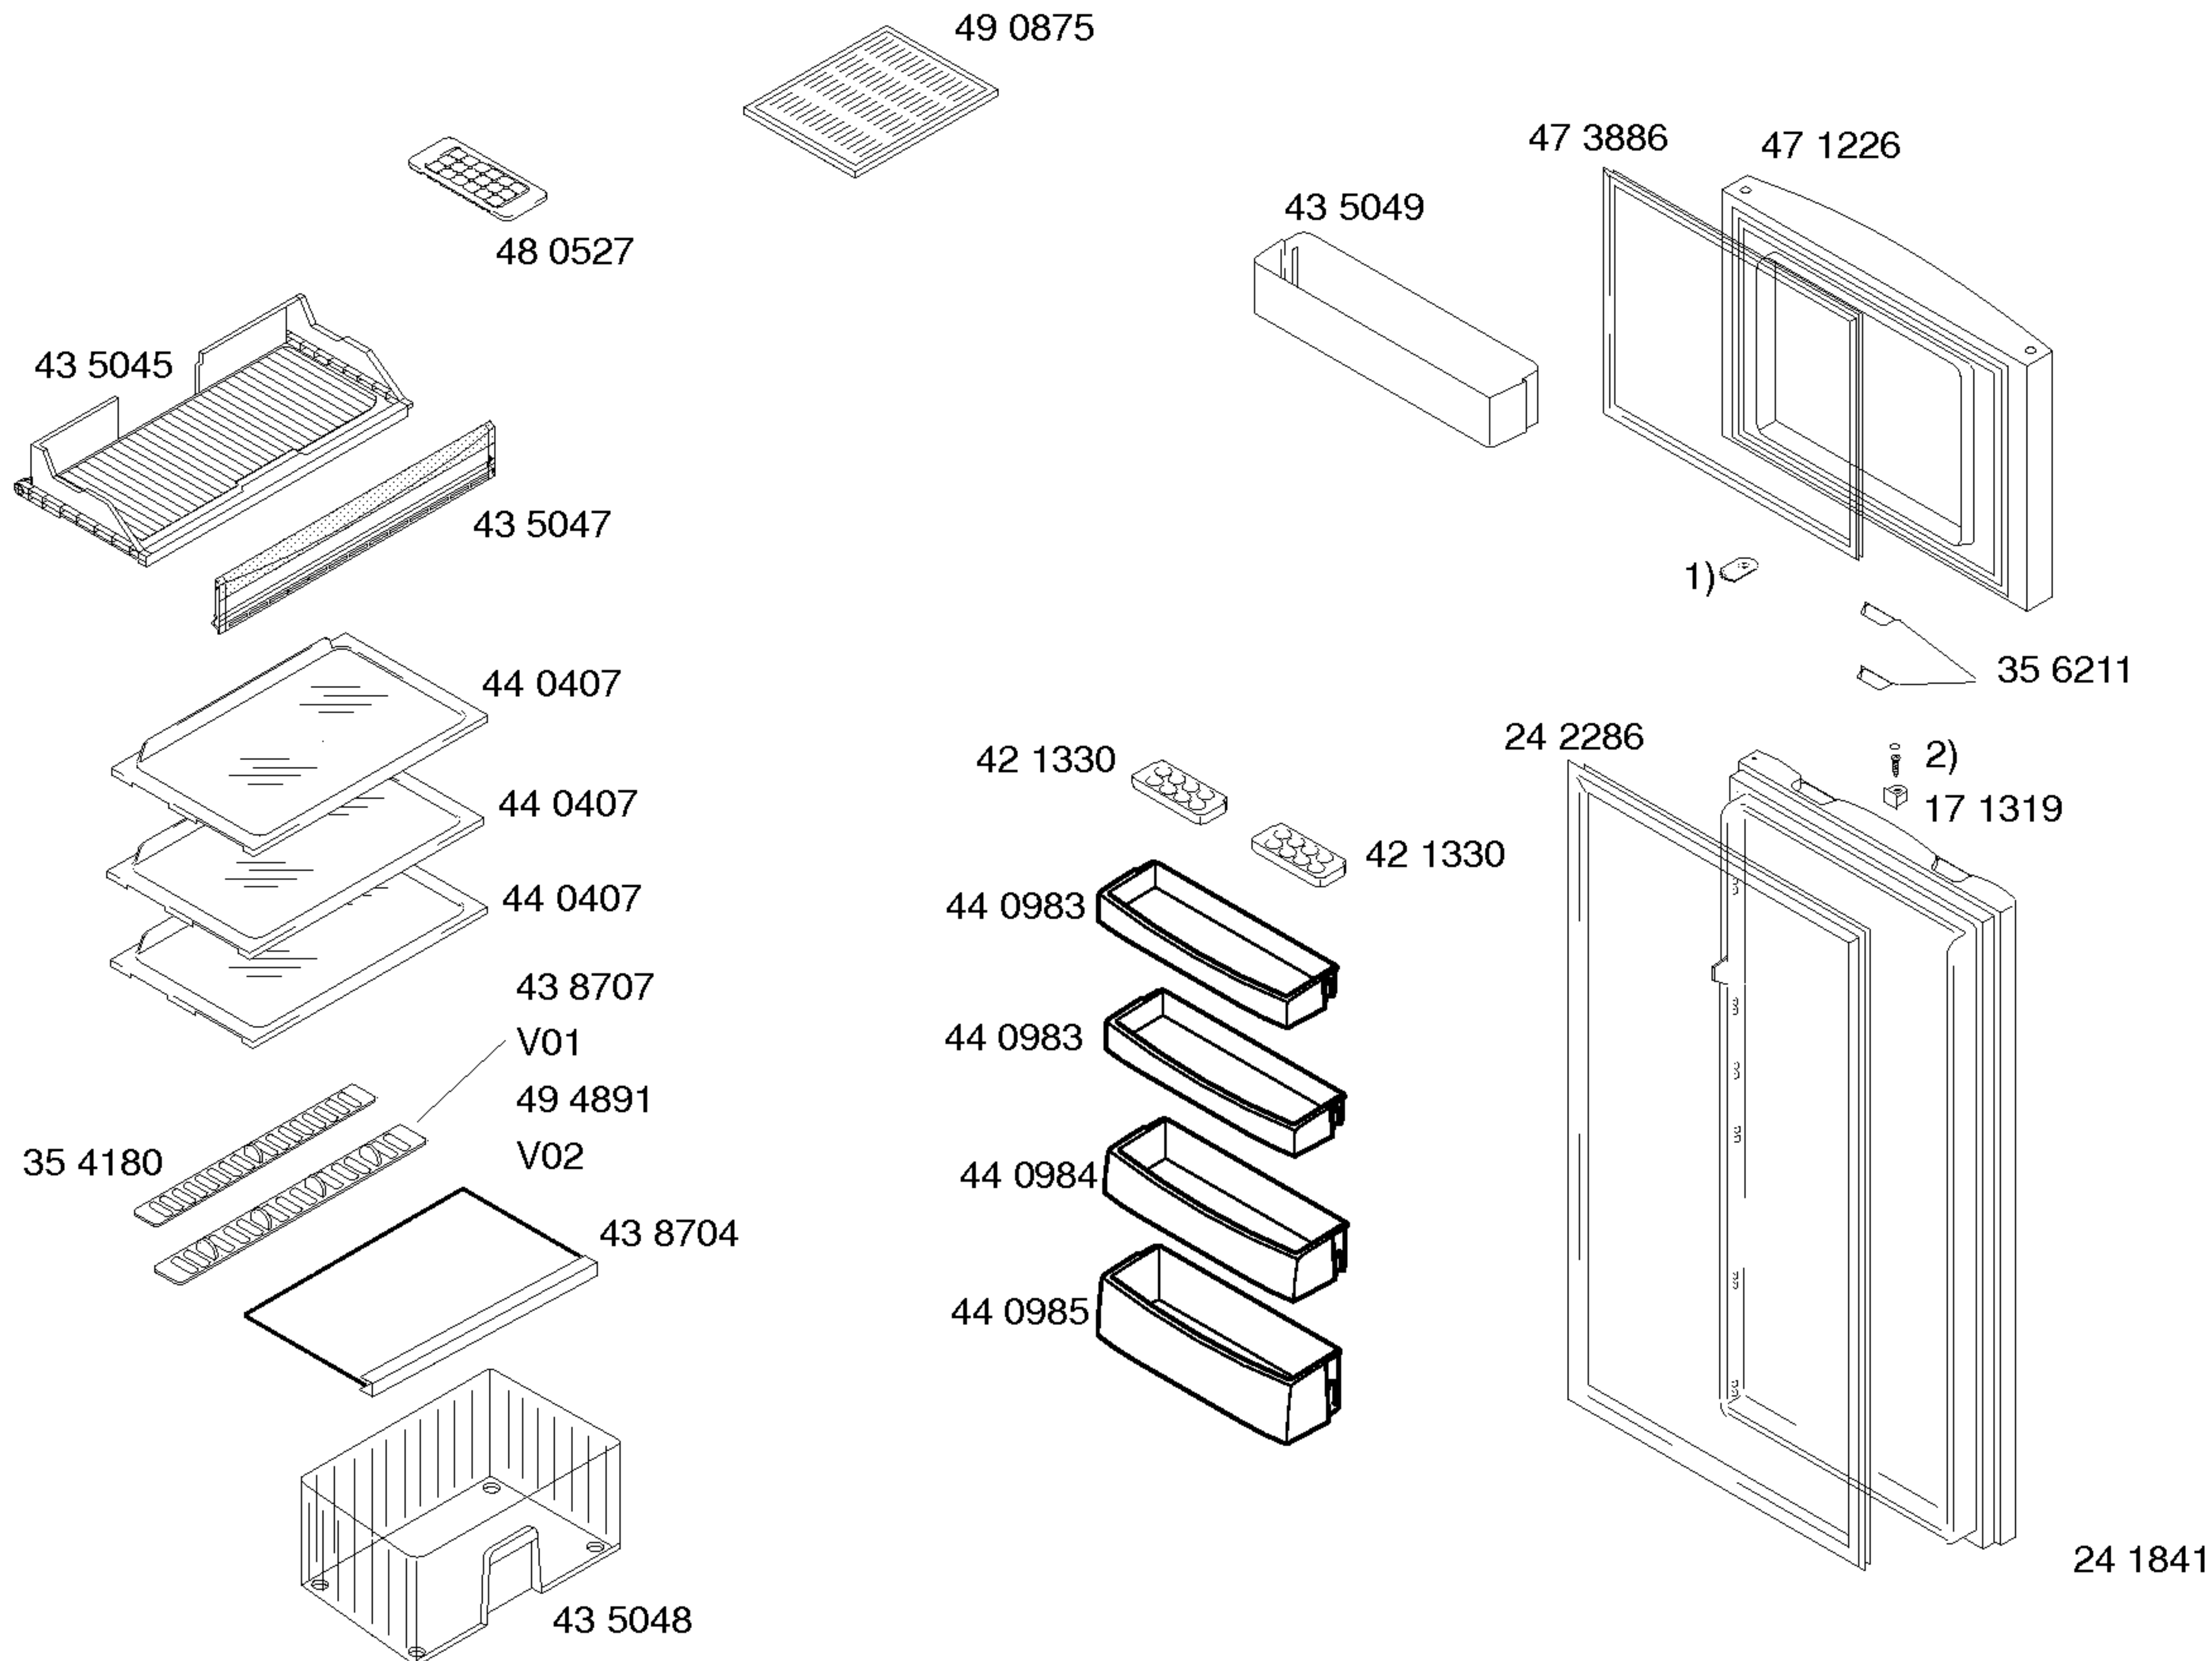

Mat. – Nr. – Konstante
3740

1) 42 6286

2) 16 5557

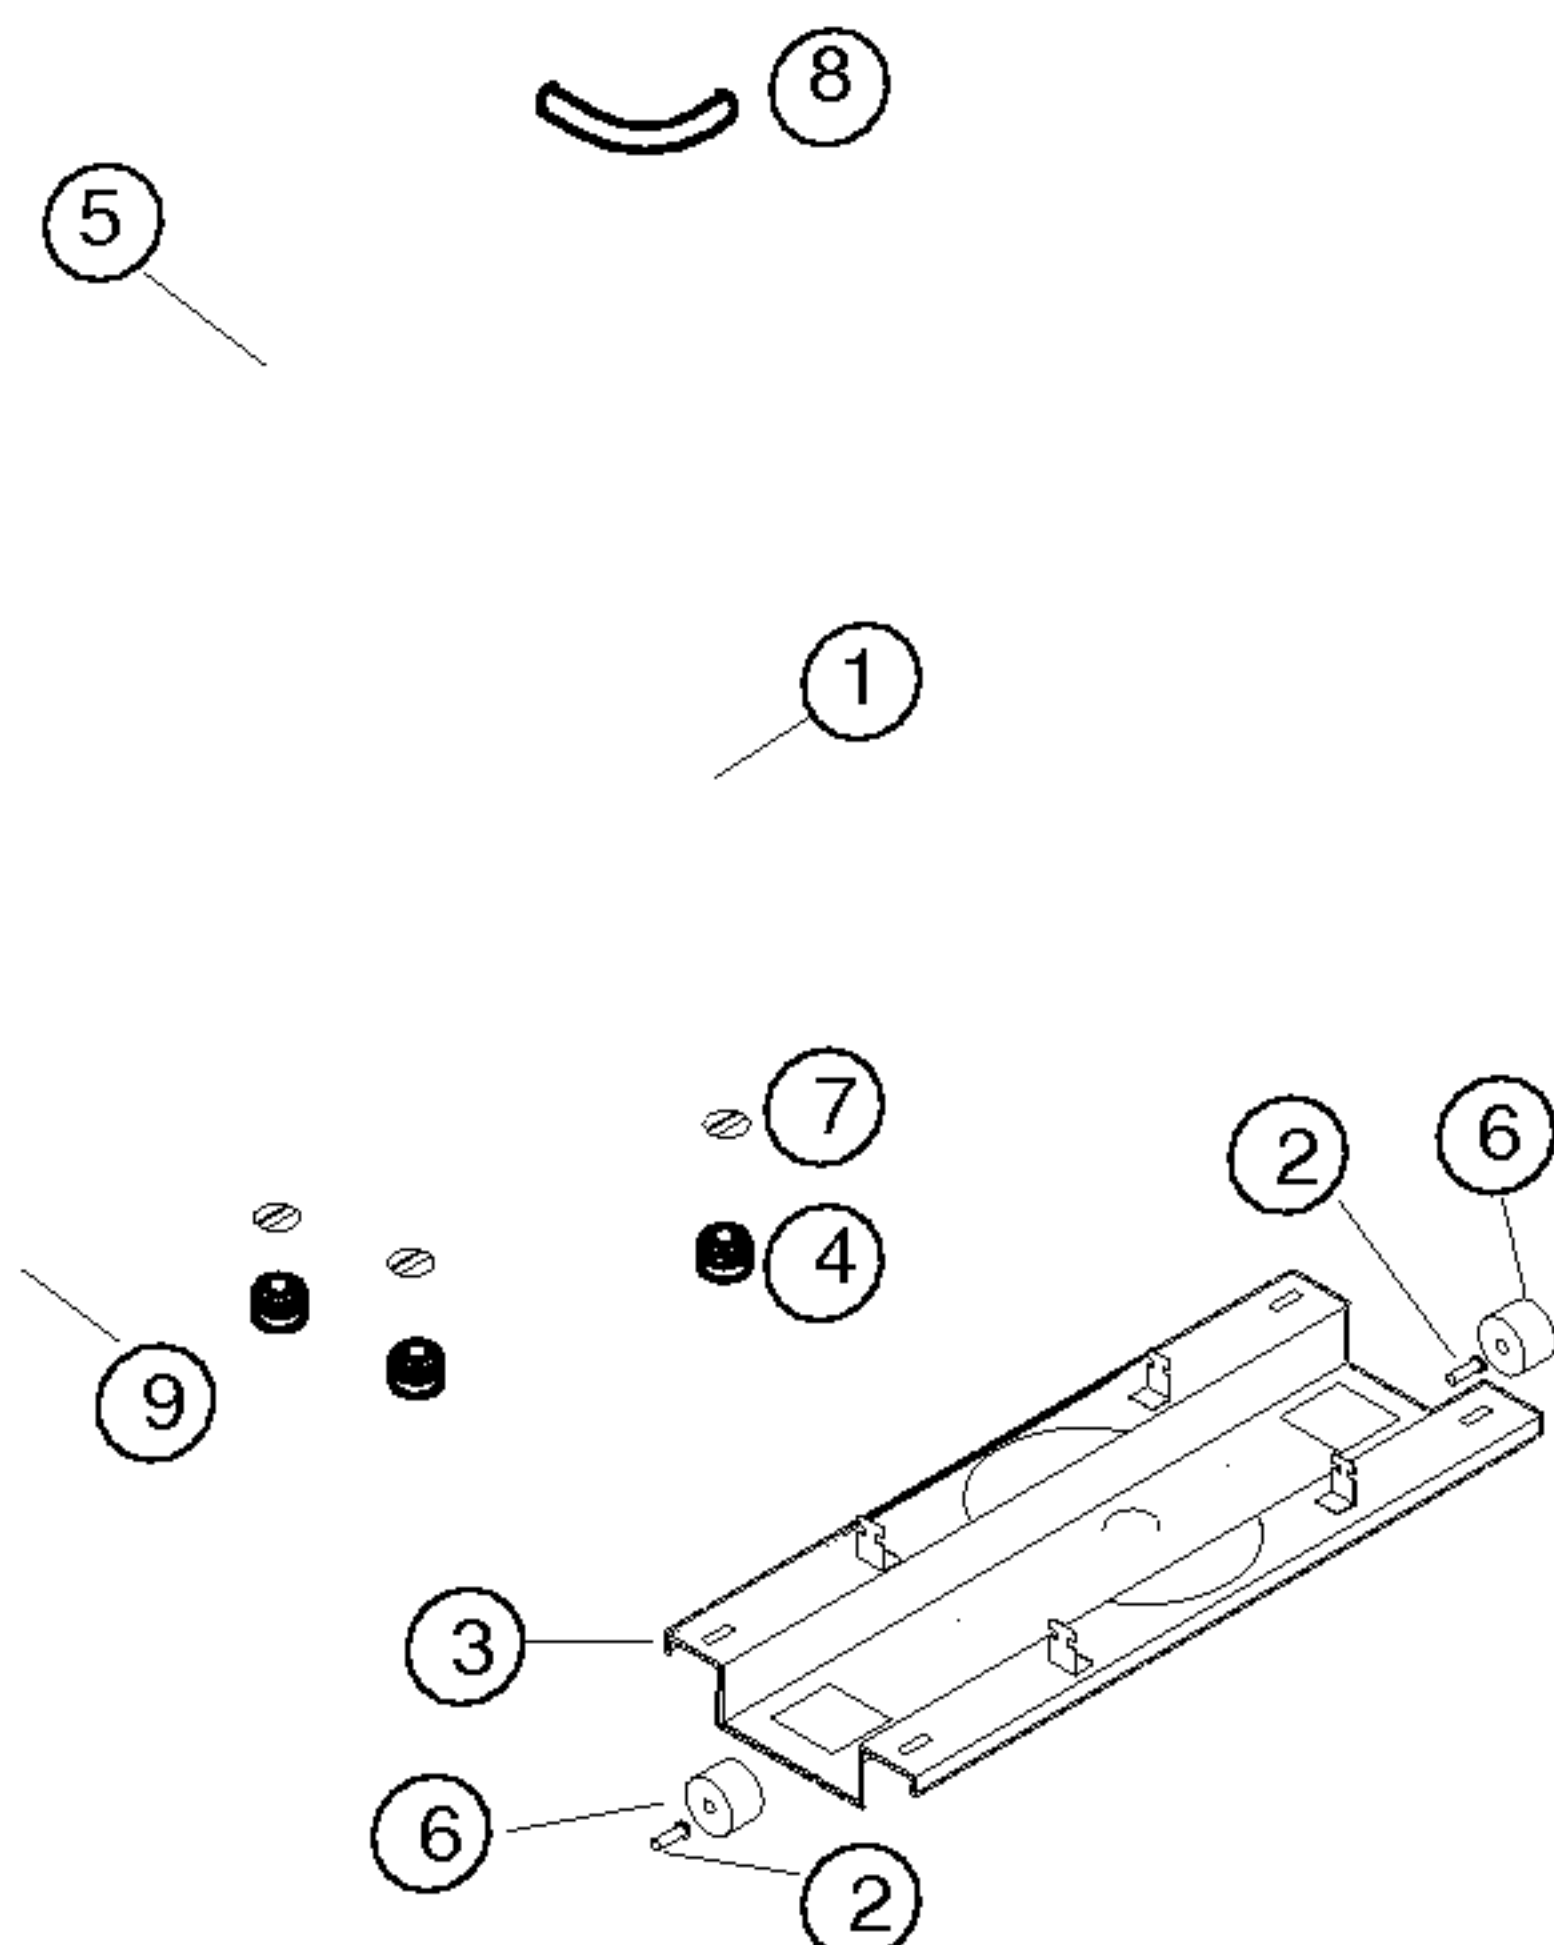

Pos.	Danfoss		
	NLE13KK3		
1	14 3864		
2	18 1014		
3	35 4158		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	42 0376		
9	42 6296		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.		Danfoss NLE13KK3 6.4 12.9 18	
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acta kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)		..ein/acma °C ..aus"/kapama ..alarm'	
Füllmenge/Fill. quantily/ Dolum miktarı R600a		g	42
Anschlusswert/Comm. load/Giris gucu		W	*
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc		Ohm W	
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans		Ohm	
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim		Ohm V	
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız