


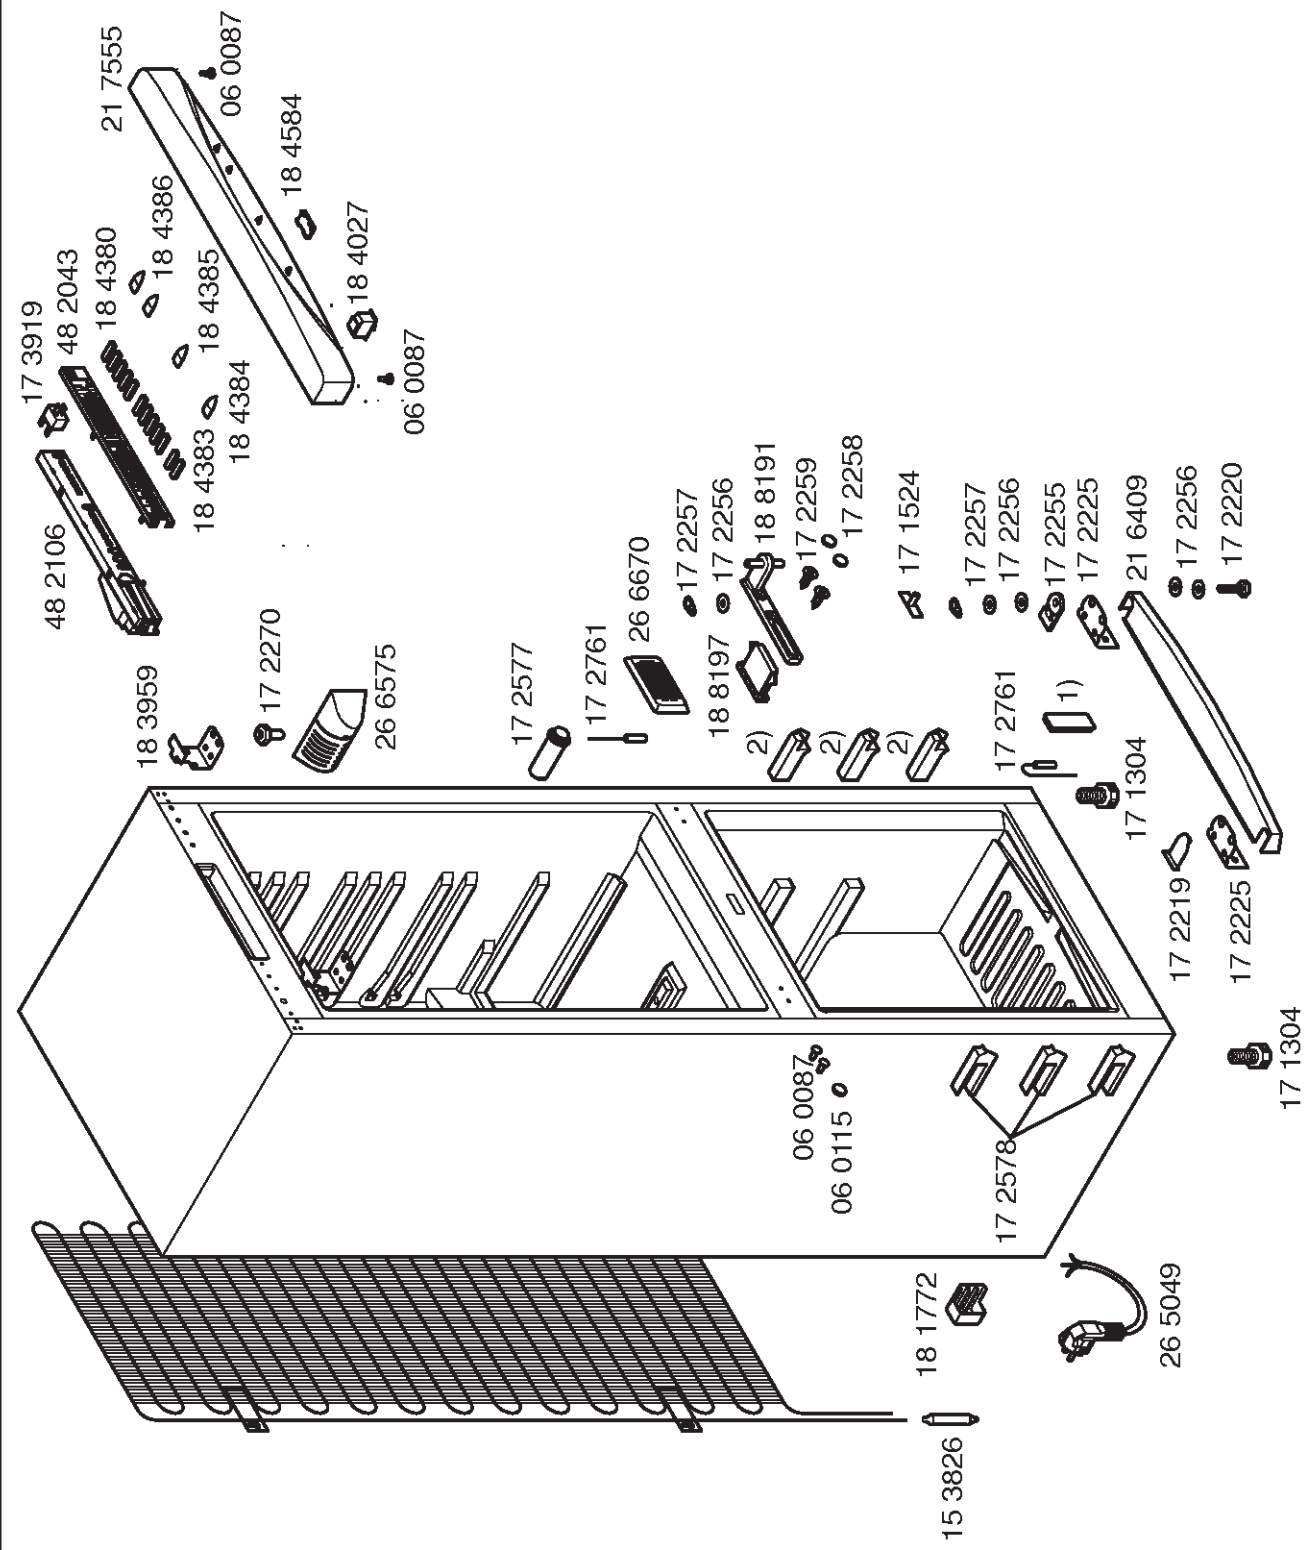


Gebrauchsanweisung


58 0155
(de,en,fr,pt,es)


1) 17 2762

2) 17 2579

- 1) 35 9217
- 2) 06 0083
- 3) 17 2274
- 4) 06 0115
- 5) 18 8194
- 6) 18 8188

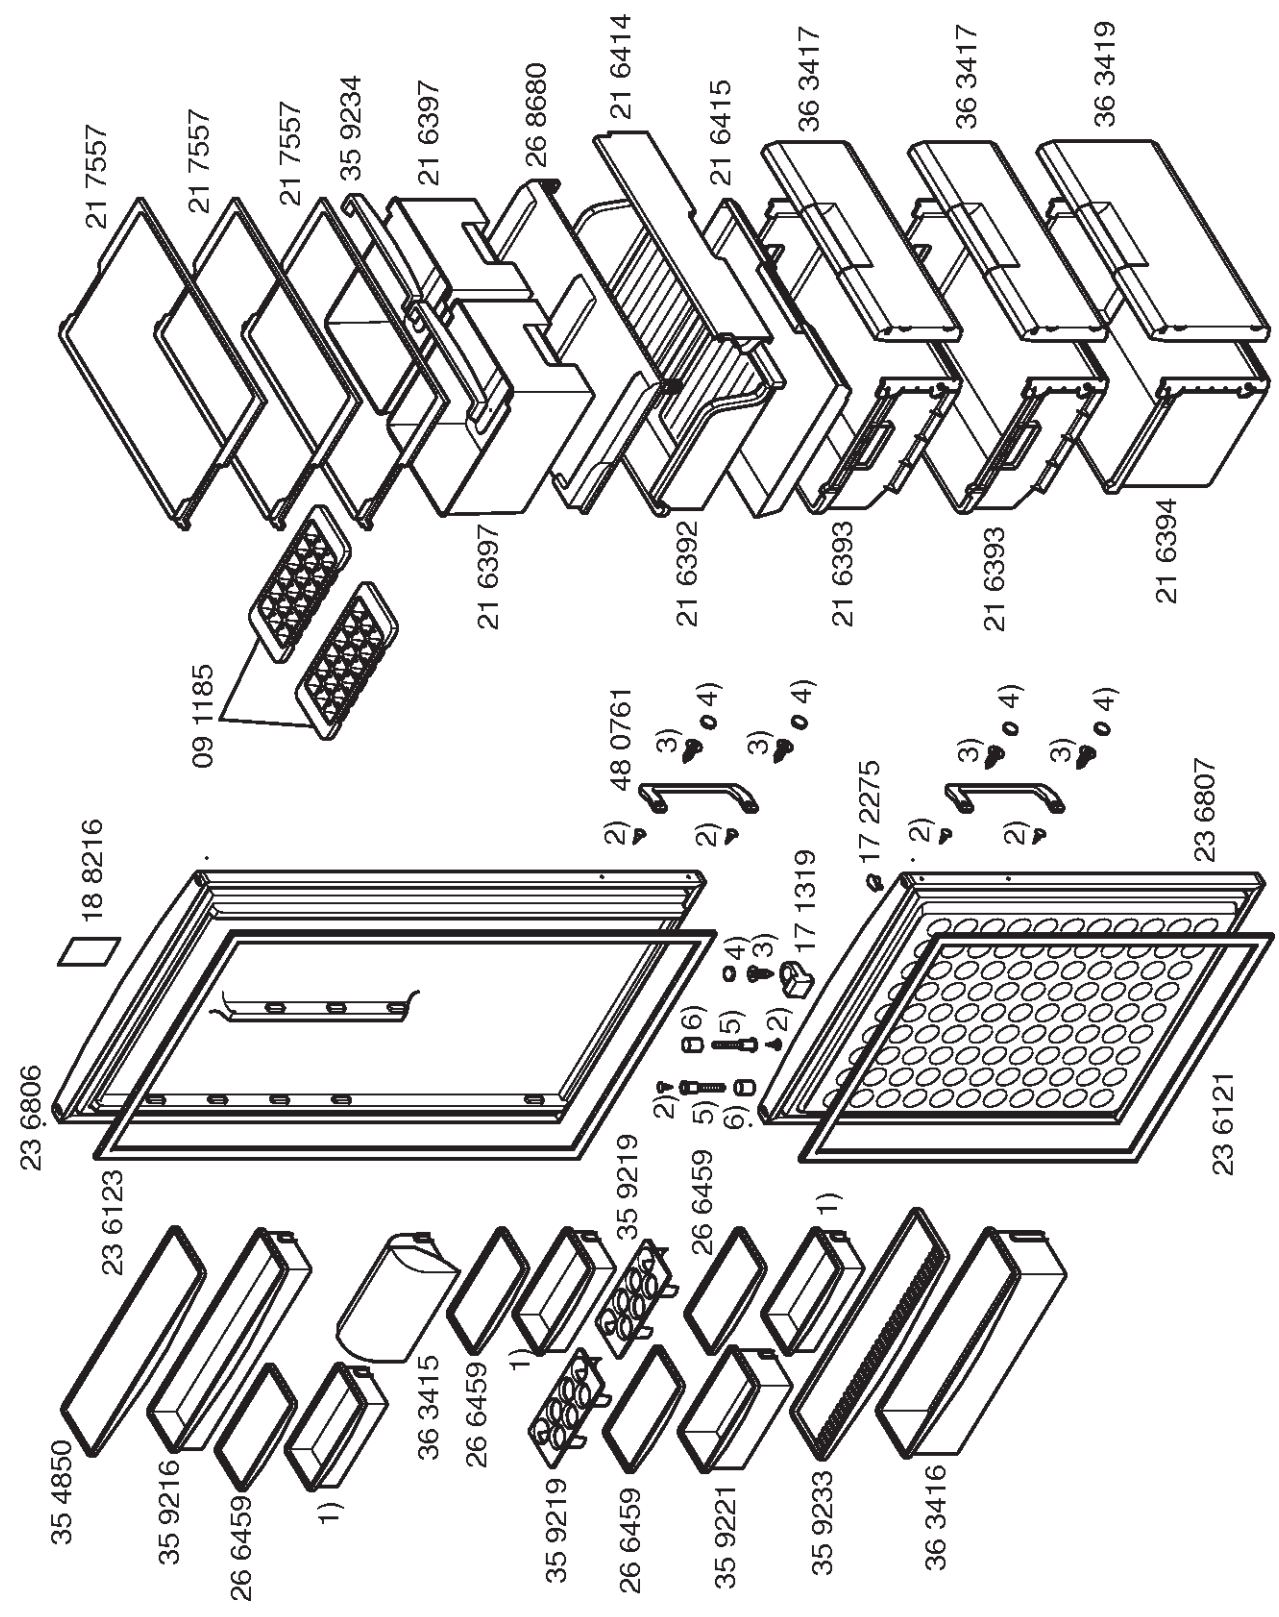

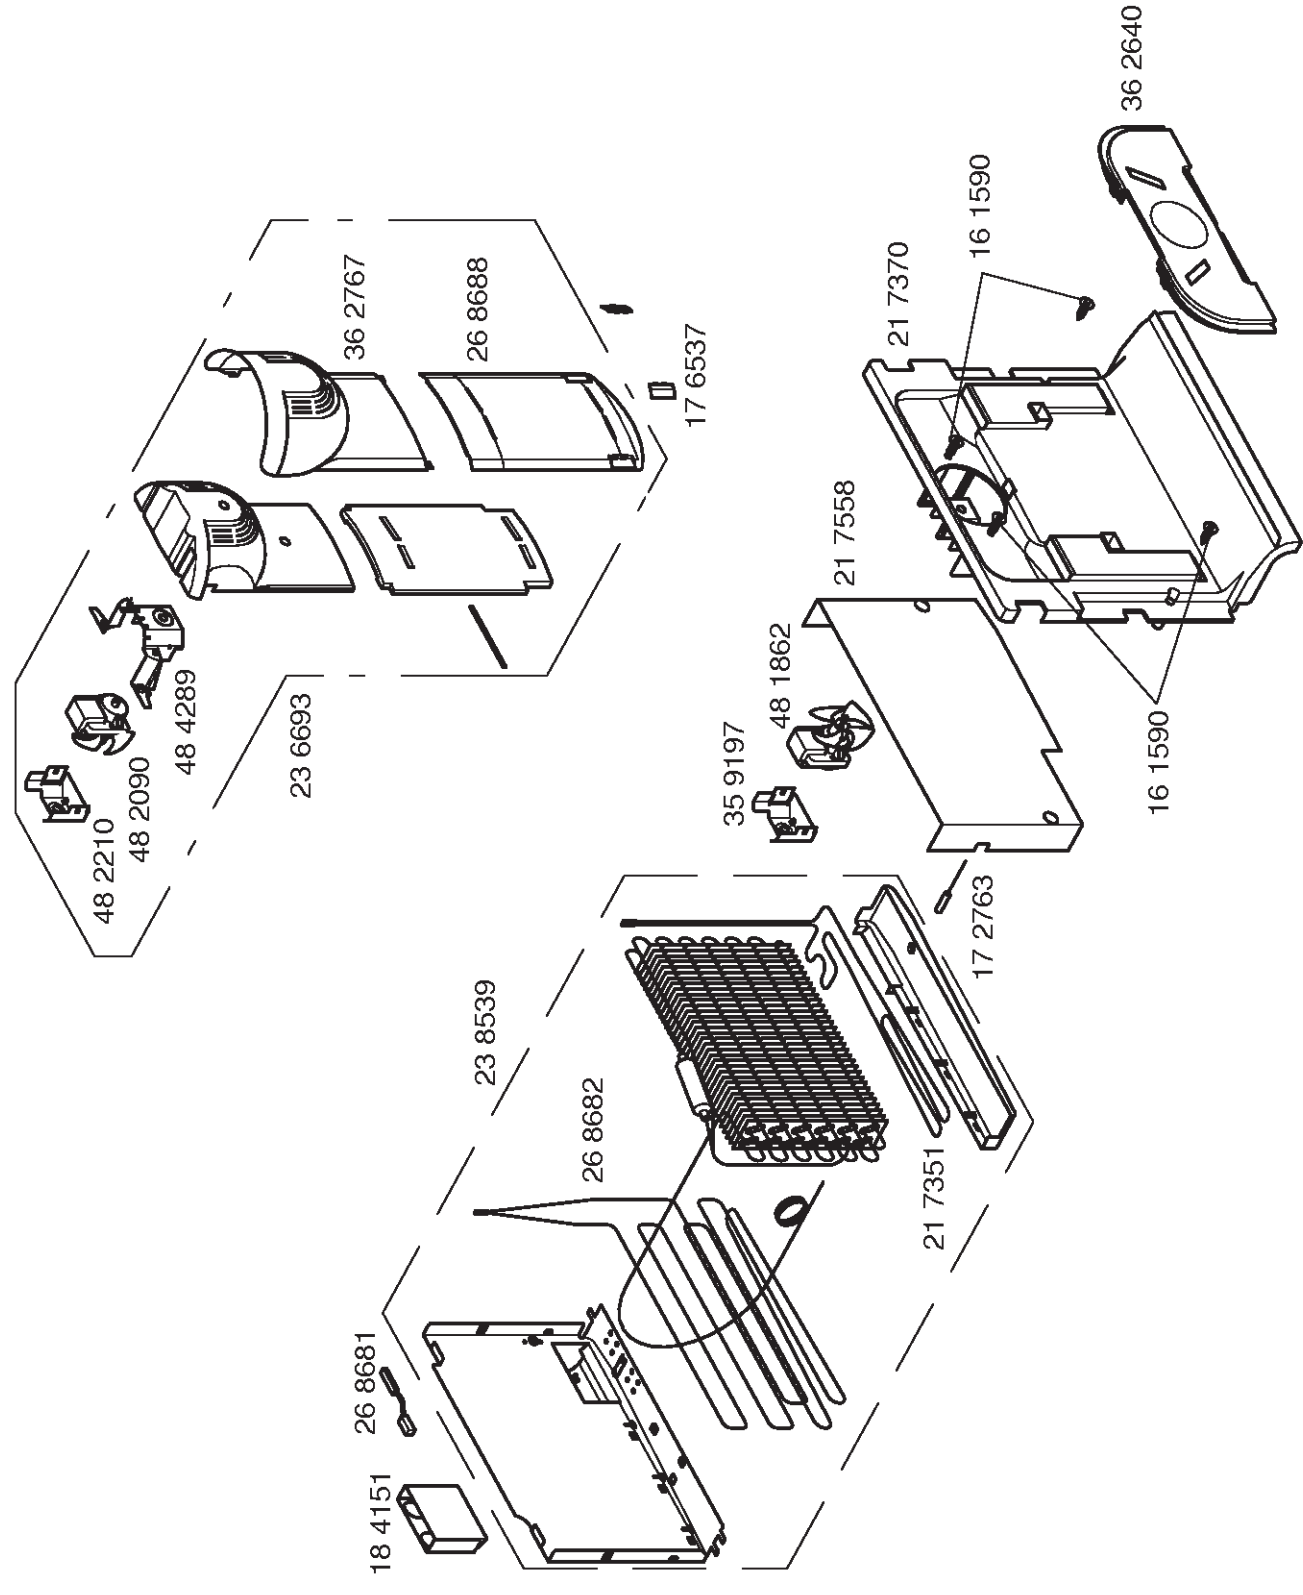

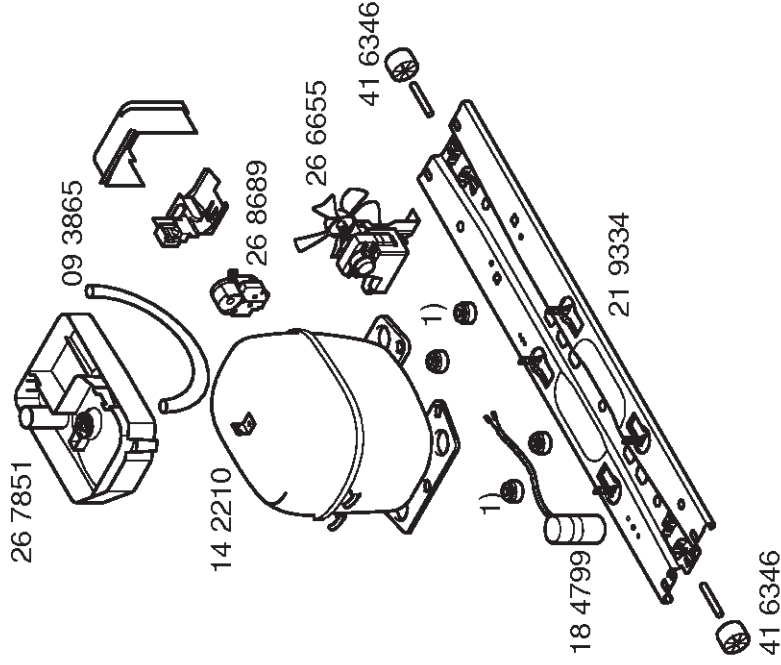

1) 06 0182

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo	ASPERA NBU 1118Y		
Förderleistung/Delivery/Debit/Aspiración l/h			
Anlaufstrom/Starting current/Cour. démarrage/Int.arranque A	–		
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	13.6		
Hi/aux.	14.7		
Klape Therm./Thermostat/Termostat Typ/Type/Tipo		kalt warm	
Reglerstellung/Position/Conexión			
Schaltwerte/Switching values/	..ein/conex. °C		
Valeurs de commutation/Desconex.	..aus"/descon.		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/Charge/Carga R600	g	45	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	150	
Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	KΩ	Verdampfer	
Leistung/Power/Puissance/Potencia	W	0.375	
		145/230V	
Ventilator/Blower/Ventilateur/Ventilador		Verdichter	
Widerstand/Resistance/Resistencia		KF 0.57	Verdampfer
			GF 0.47