 
 


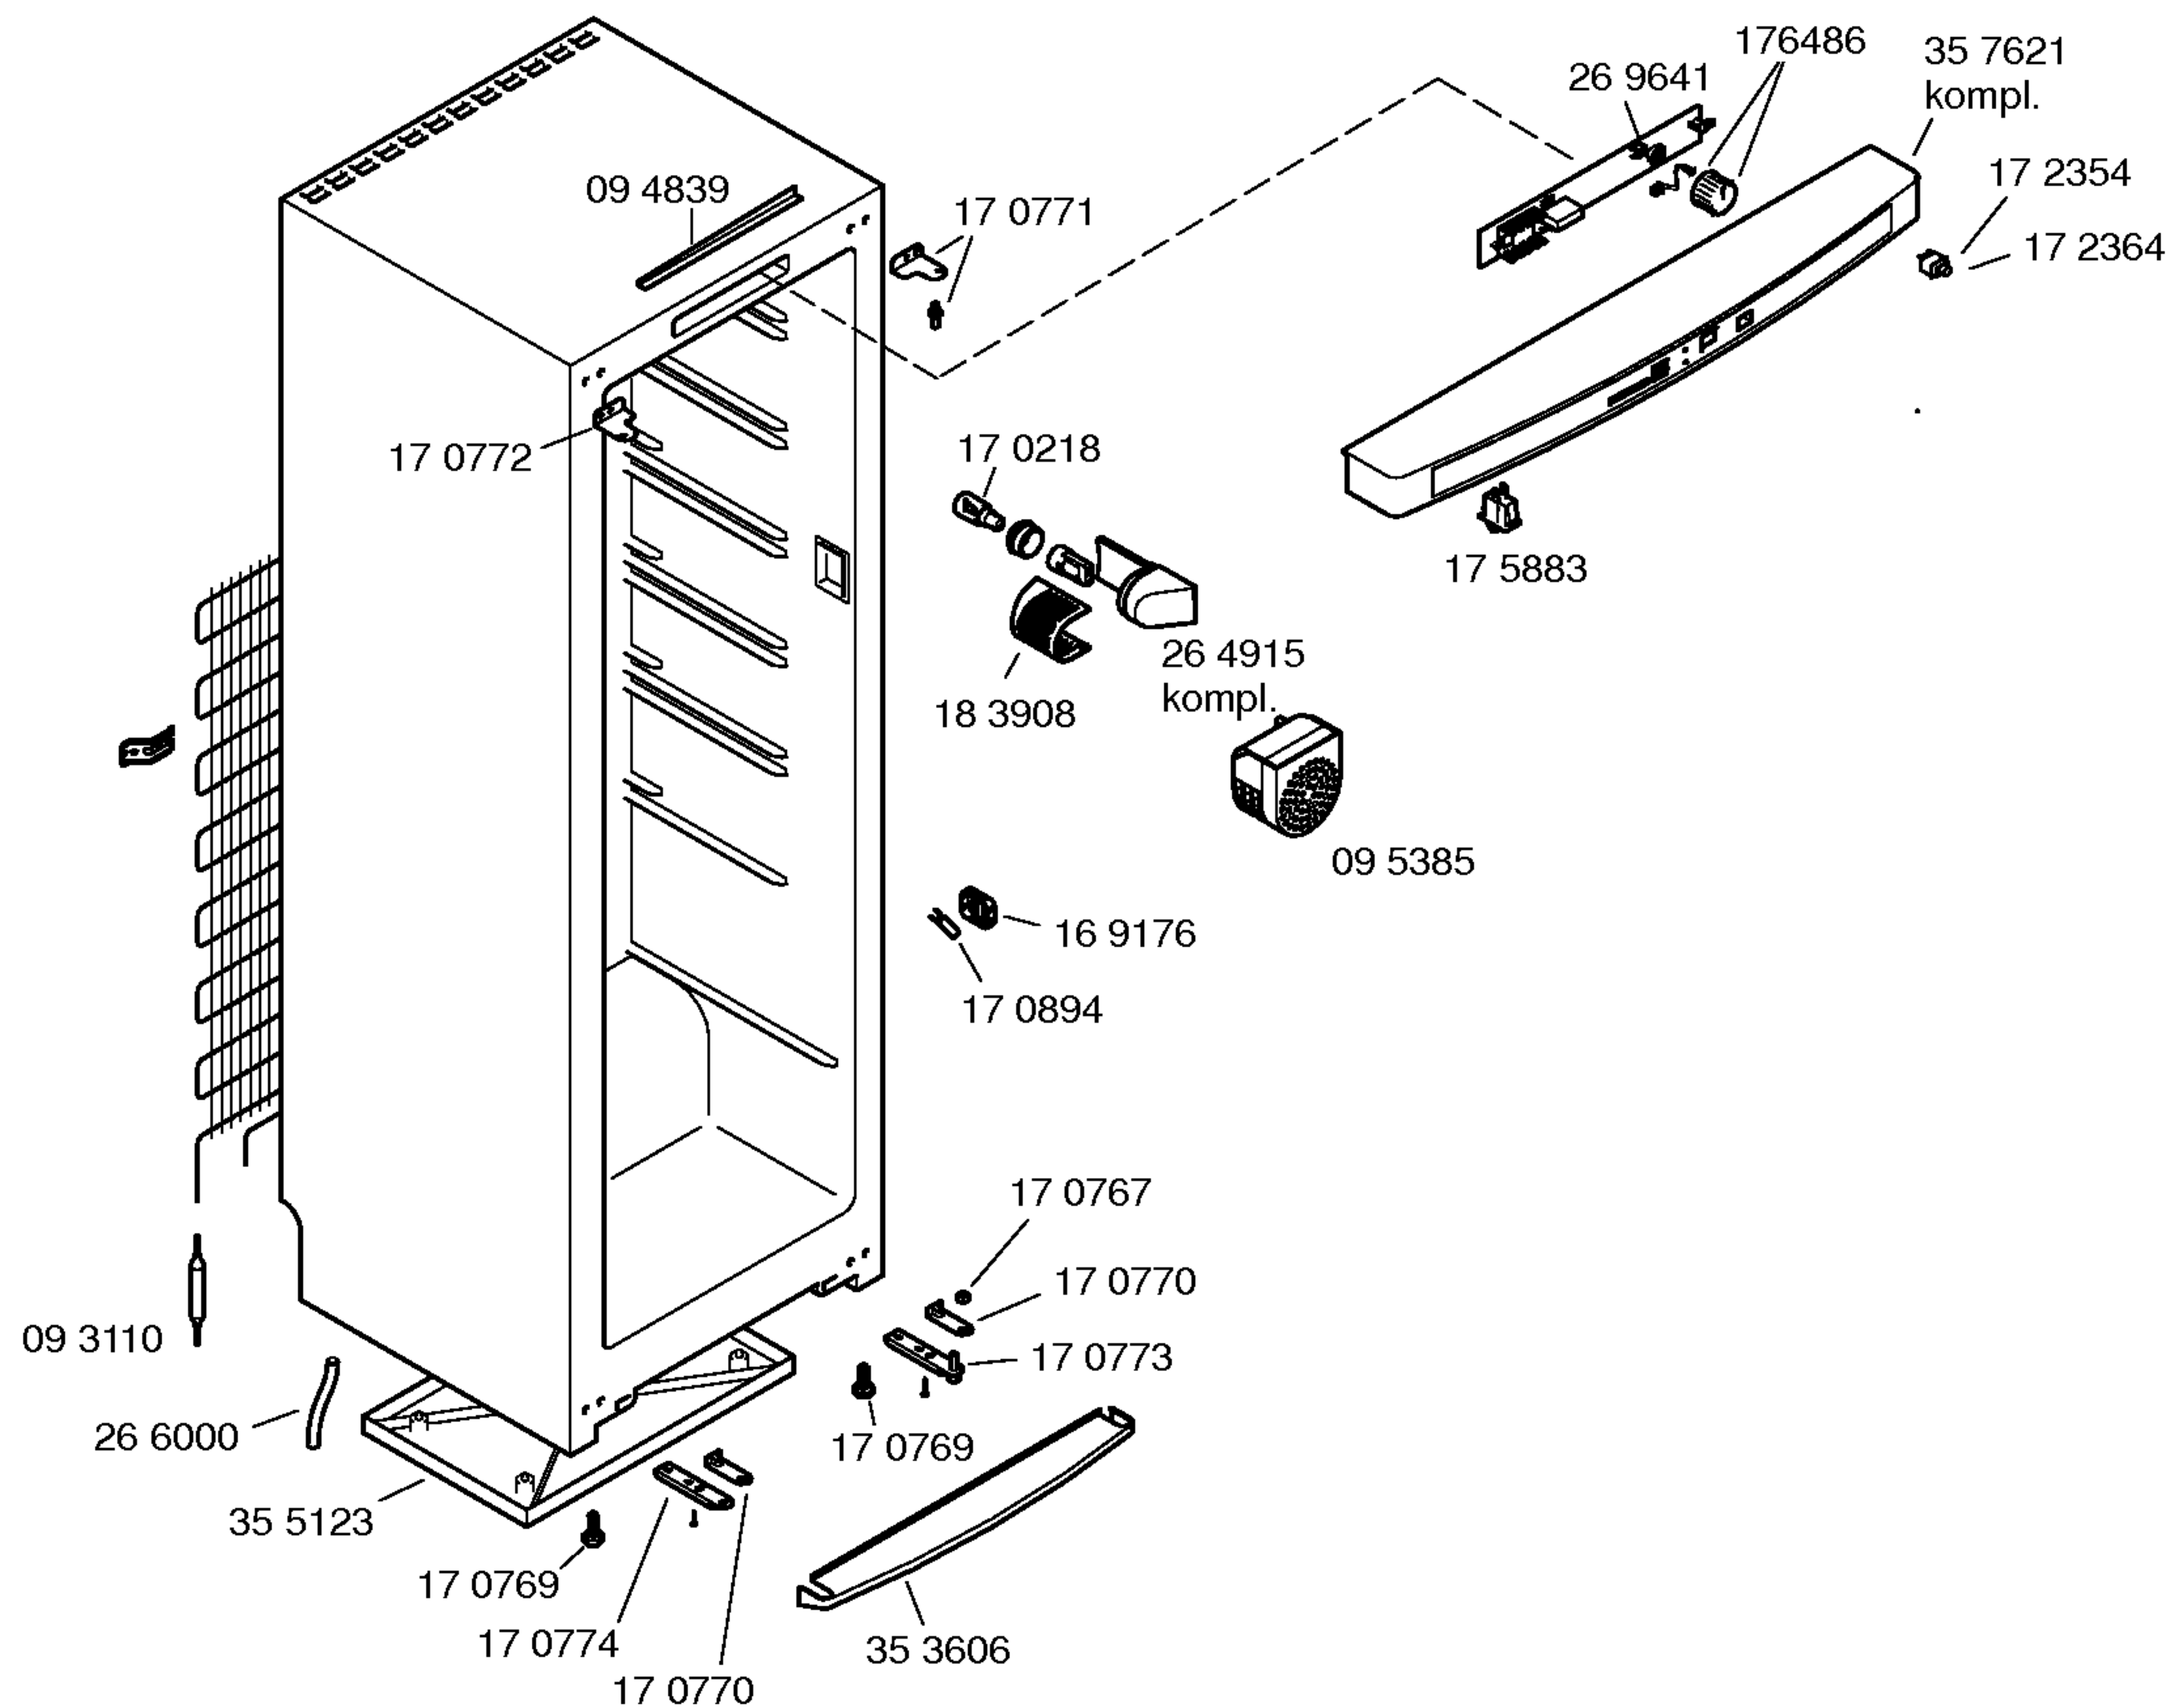 


Libro de instrucciones
52 5311

Instrucciones de
montaje
52 2772

Cjto. panelación
17 2357

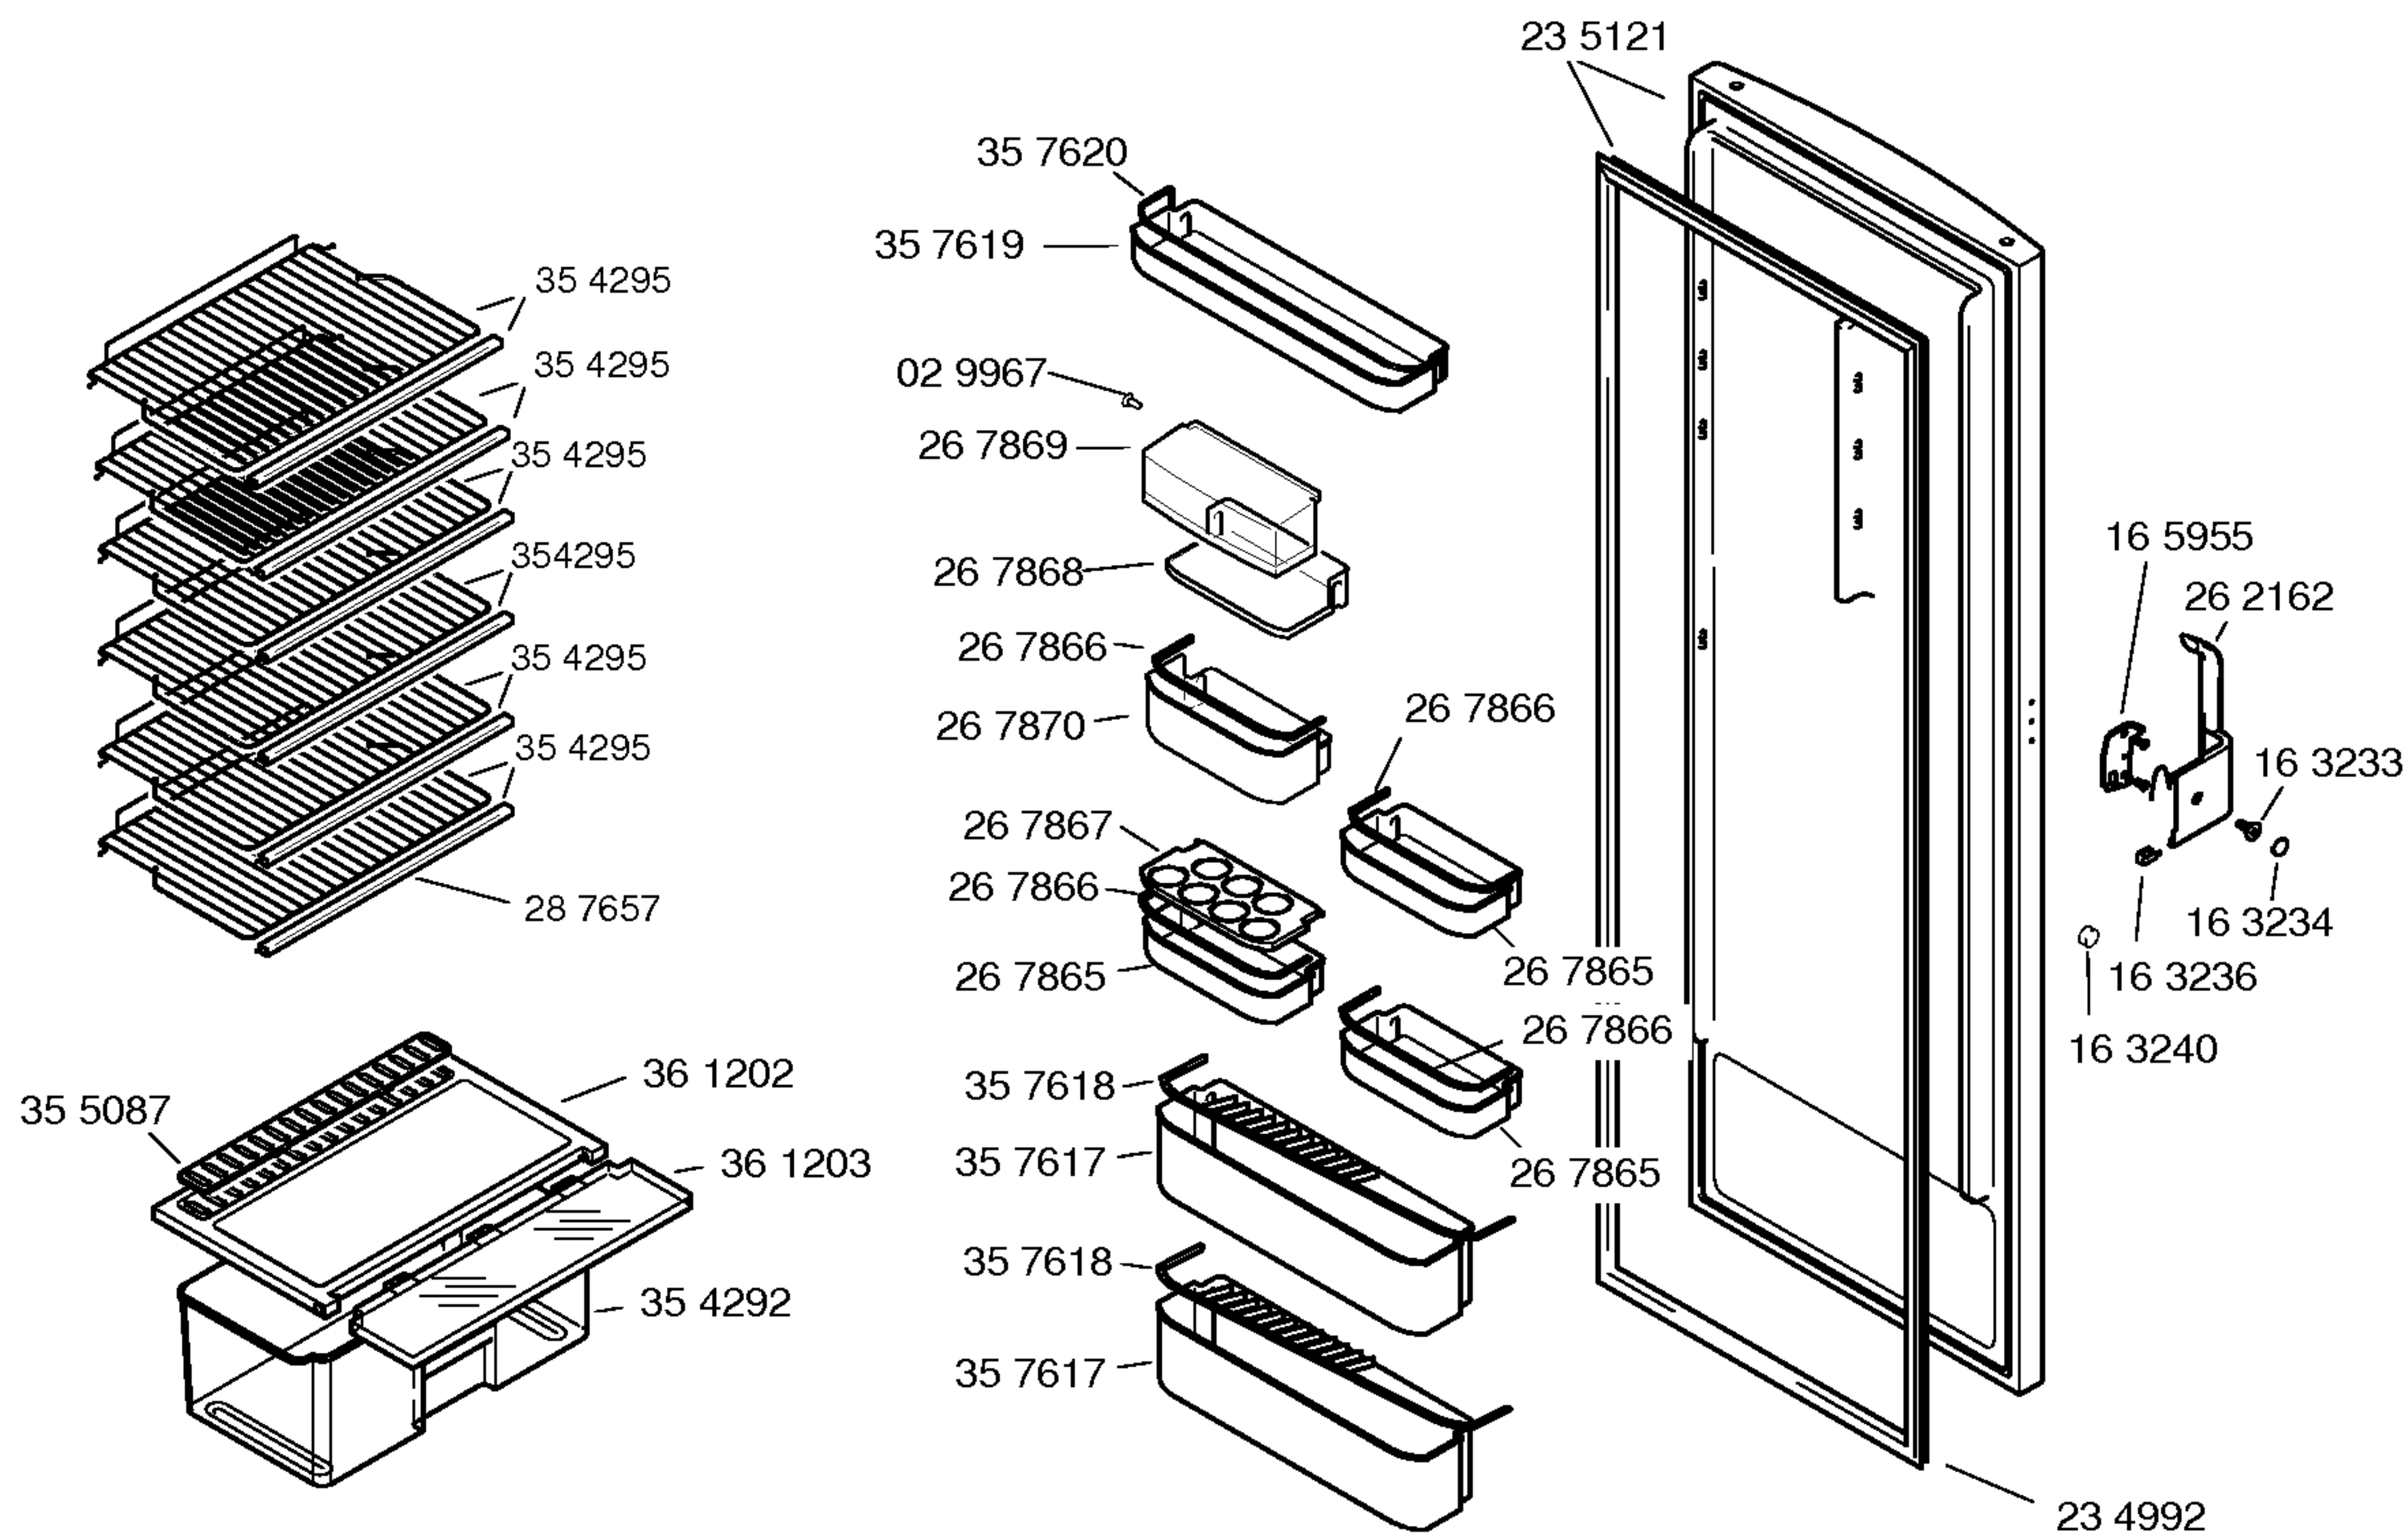

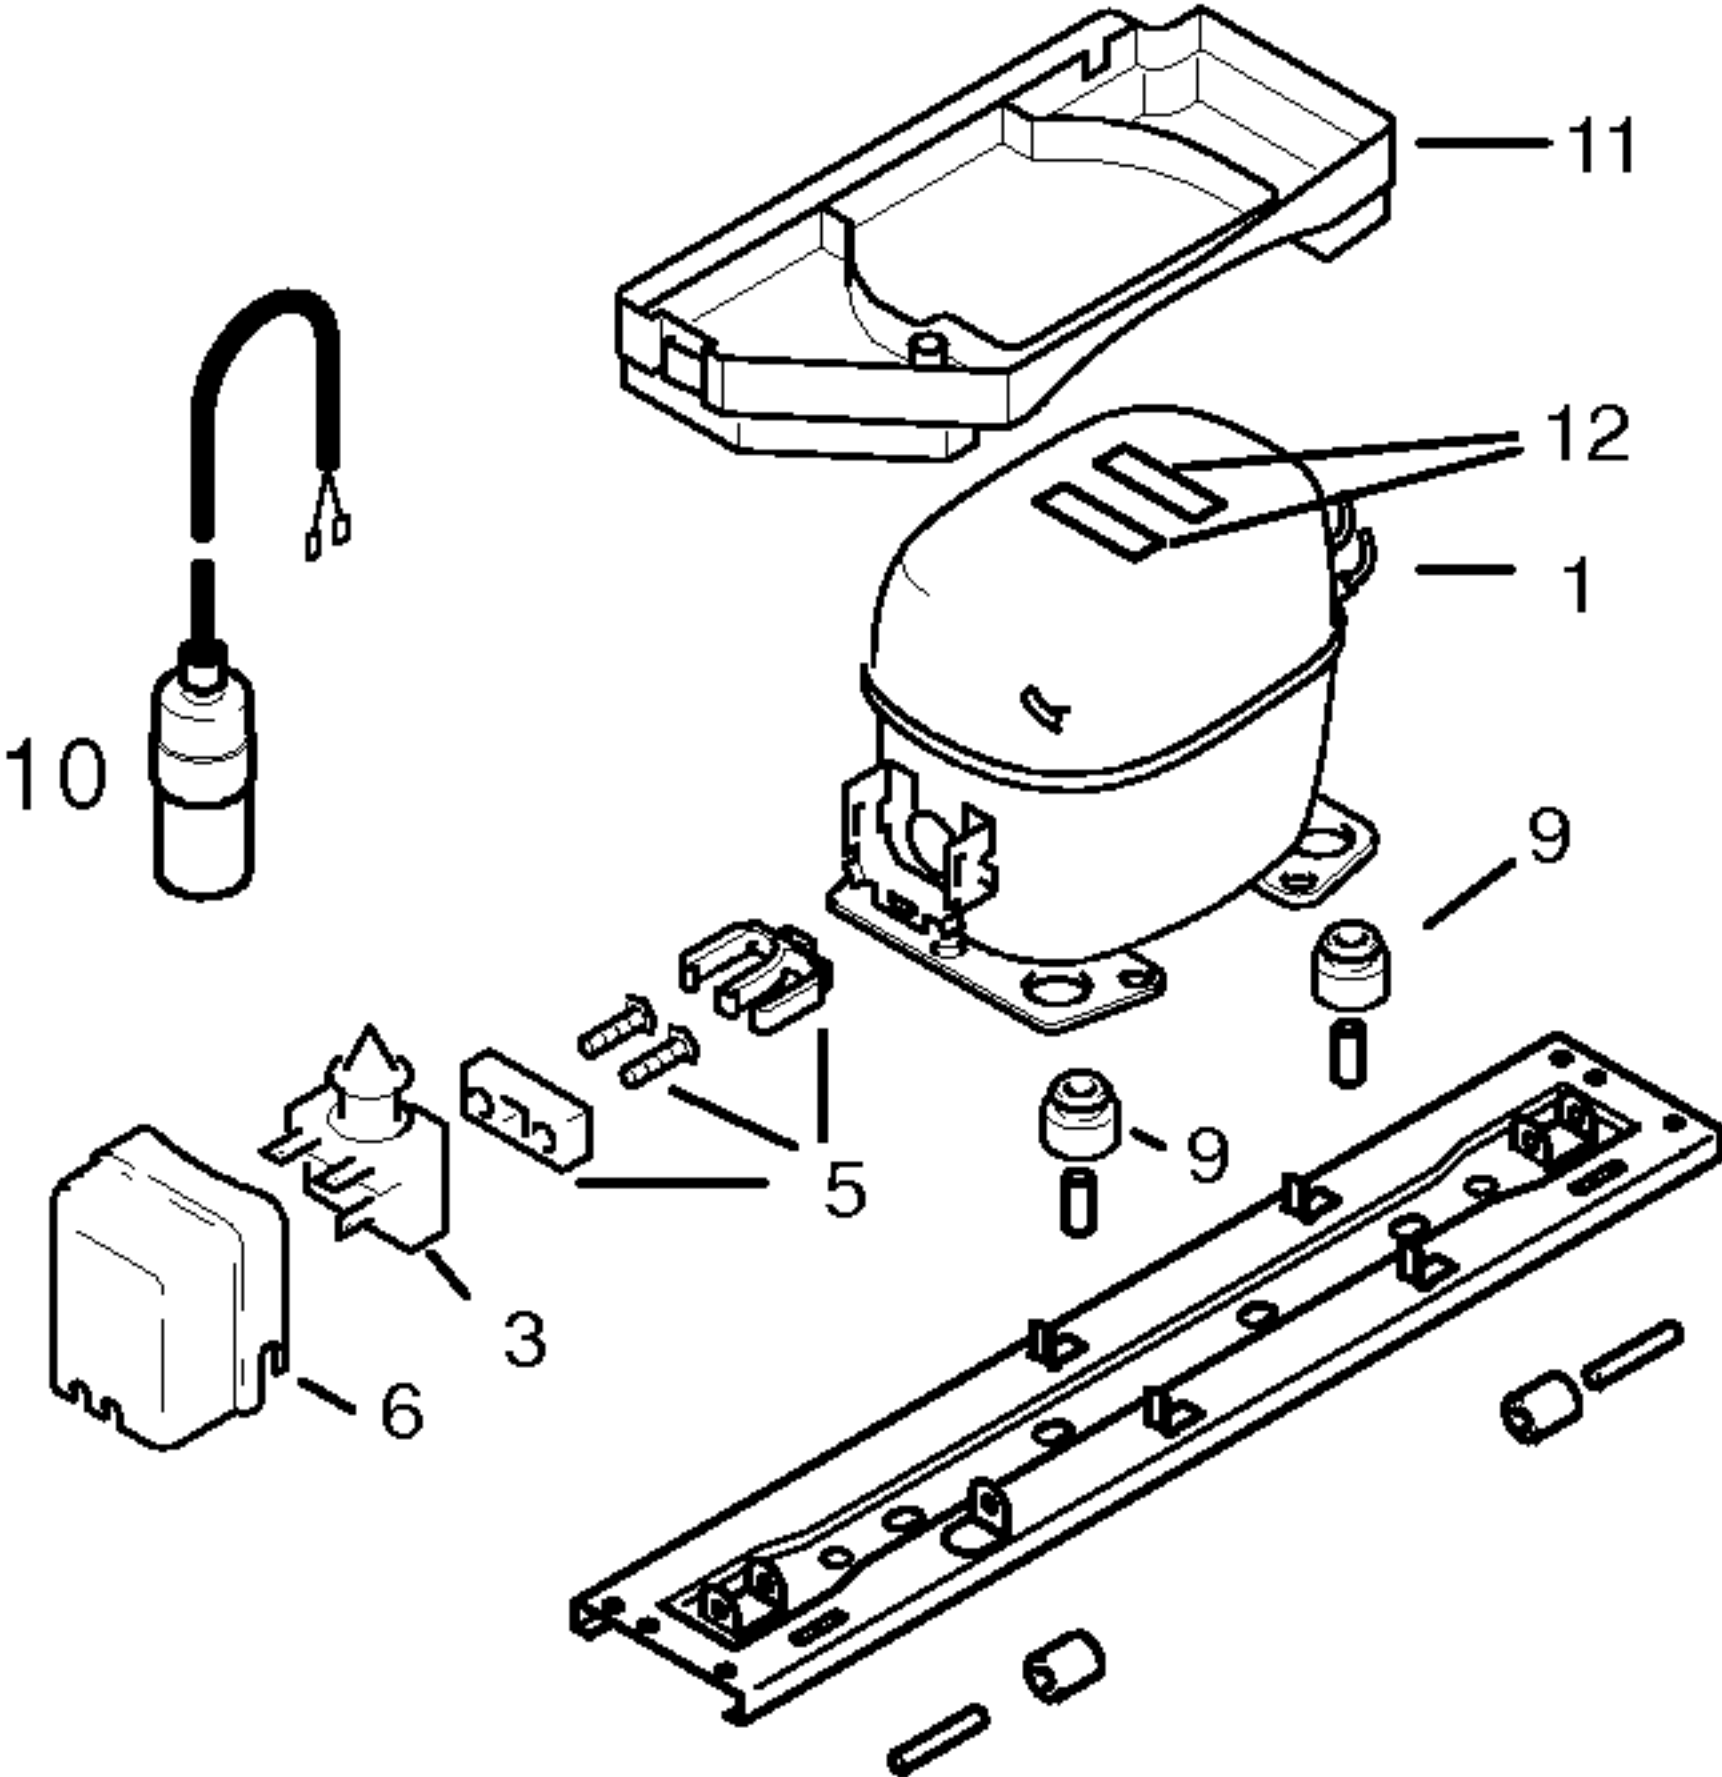

Pos.	V01		
	Danfoss TLES 5 K		
1	14 1633		
2			
3	15 1055		
4	15 1053		
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	08 4744		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES5K		
Förderleistung/Delivery/Débit		l/h	914	
Anlaufstrom/Starting current/Cour de démarrage		A	2,9	
Widerstand/Resistance/Résistance		Ha/main/prin	Ω 25,7	
		Hi/aux	Ω 15,7	
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	56	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
			43,31 ±1,10	
			54,66 ±1,59	
			69,42 ±2,29	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild