

Mat. - Nr. - Konstante
3740

Gebrauchsanweisung

52 3223

(D, GB, F, I, NL)

52 6459

(DK, N, S, SF, E, P)

Montageanleitung

52 2772

 
Beistellsatz

17 2357


Side by Side

Beistellsatz zu GS


48 1044

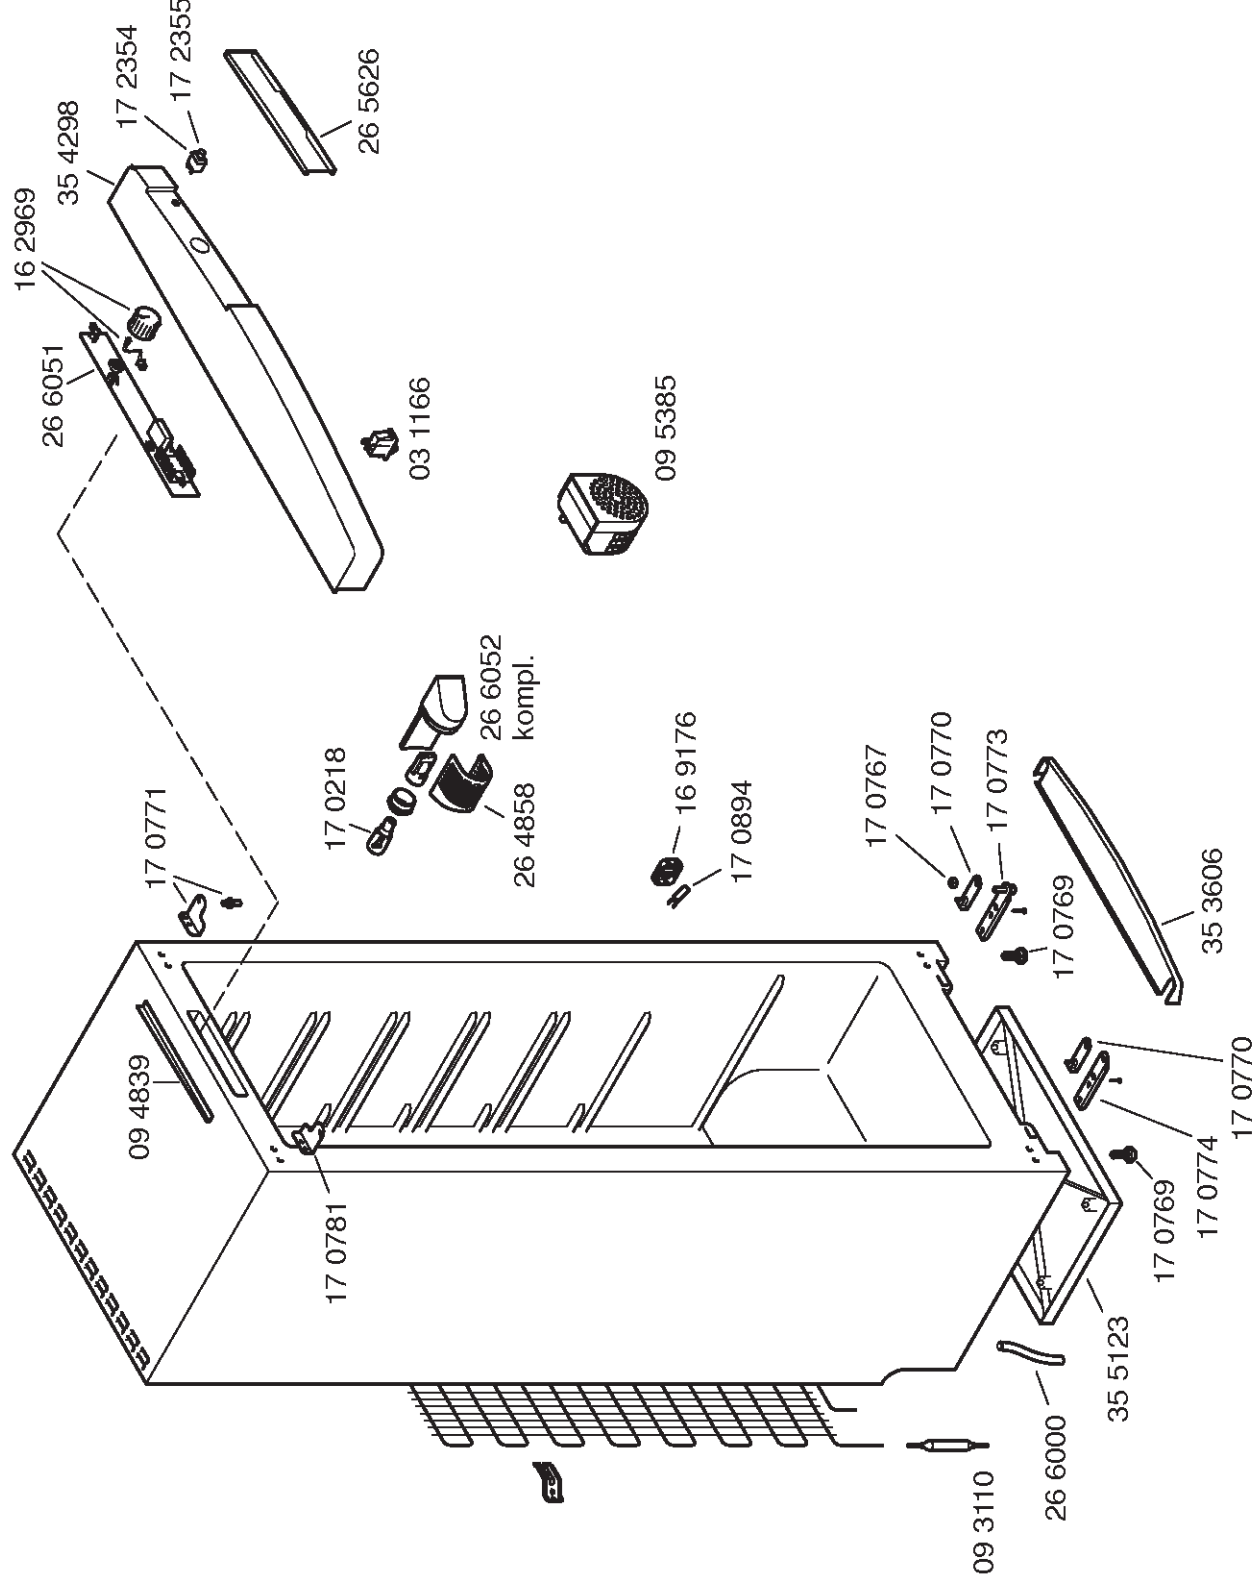

Mat. – Nr. – Konstante
3740

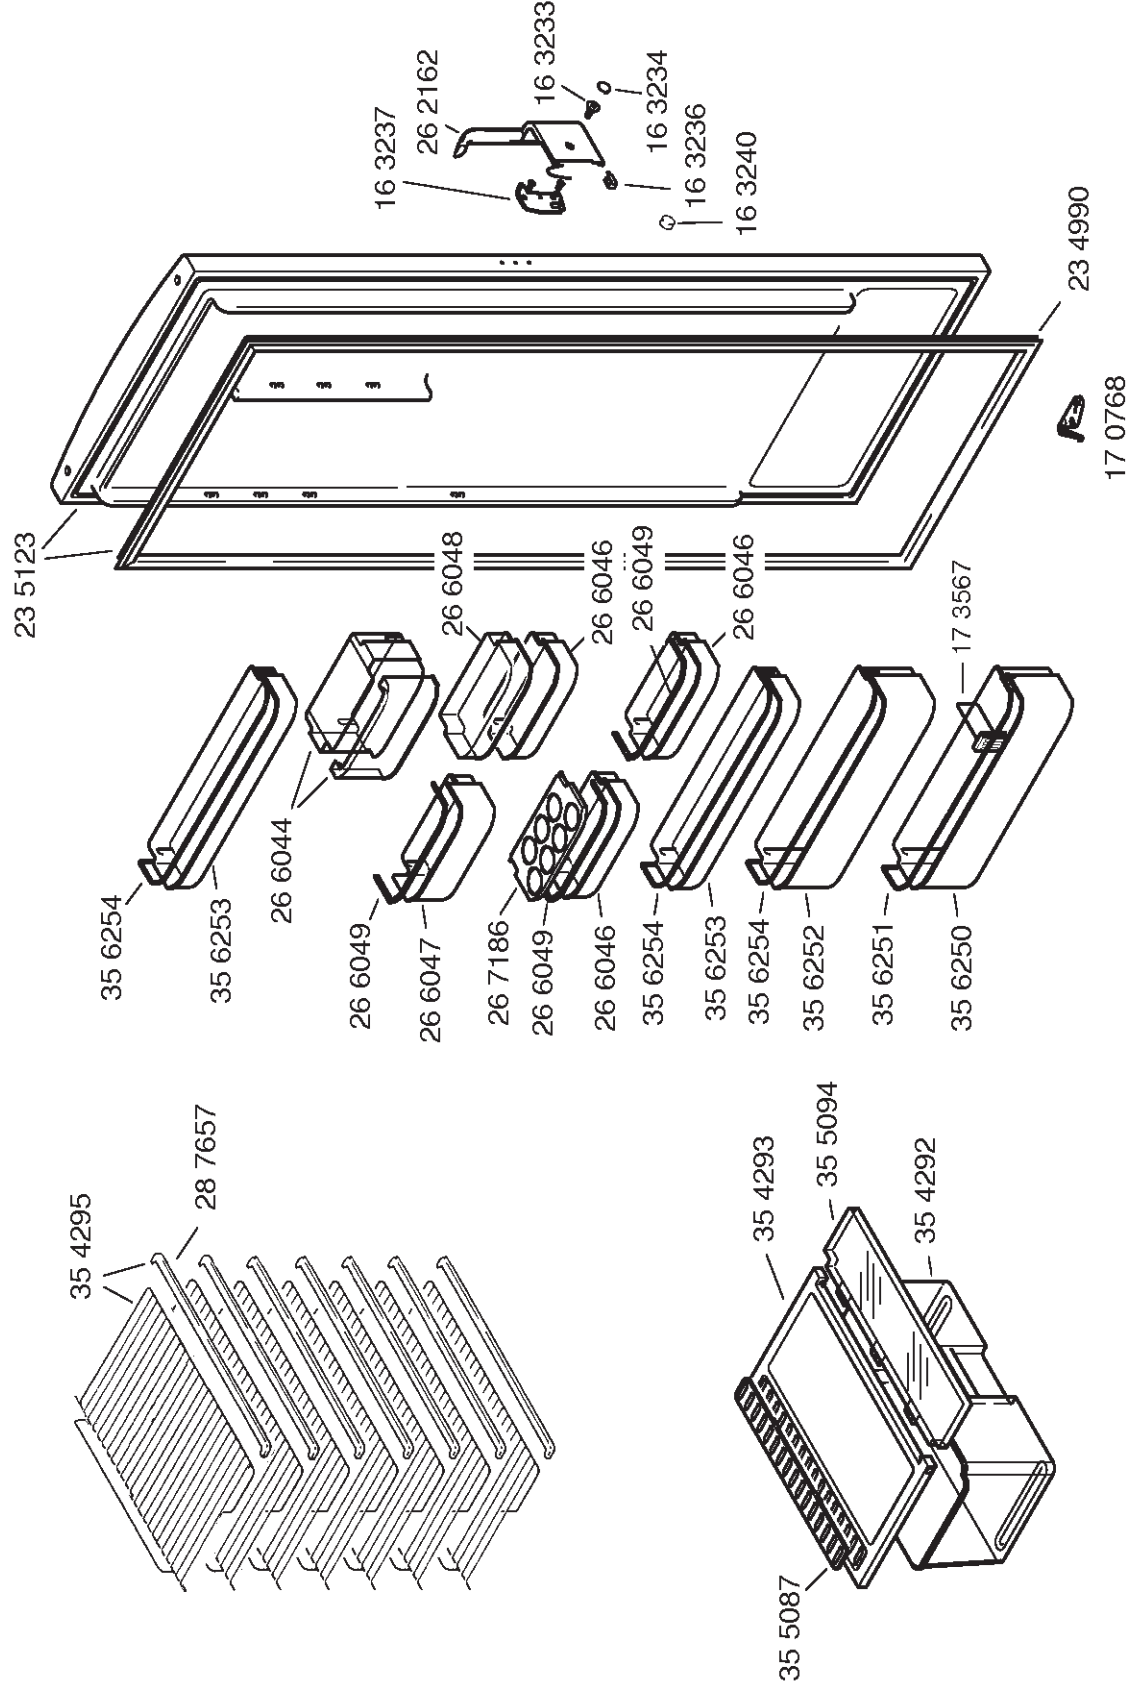 

Mat. – Nr. – Konstante
3740

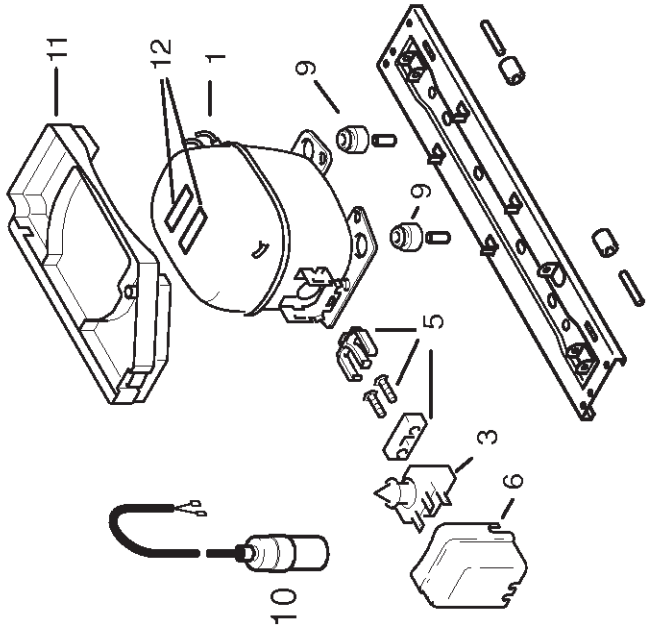 

	V01		
Pos.	Danfoss		
	TLES 5 K		
1	14 1633		
2			
3	15 1055		
4	15 1053		
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	08 4744		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance Ha/main/pin Hi/aux	l/h A Ω Ω	Danfoss TLES 5 K 914 2,9 25,7 15,7	
Temp.-Regler/Thermostat Typ/Type Regelstellung/Position Schaltwerte/Switching values Valeurs de commutation			
Füllmenge/Fill quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W	59	
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω		
NTC-Fühler / Sensor	°C kΩ °C kΩ	+10 9,95 -18 43,31 +5 12,70 -22 54,66 0 16,33 -26 69,42 ±1,10 ±1,59 ±2,29	
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V		

* siehe Typenschild