Service Service Service



**HQ 8845** 

**SENSOTEC** 

**Philips Domestic Appliances and Personal Care** 

# ServiceManual

SAP coding HQ 8845

### HINTS FOR REPAIR:


- Remove shaving unit, to prevent damages during repairing.
- Remove screws A1 (2x).
- Take cover from housing (trimmer must be opened).
- Remove bracket large (17).



- The PCB-board can now be removed out of the housing.
- Remove the connecting strip from the motor by dis soldering.
- Remove screws B1 (2 x), now the motor and hairchamber can be removed out of the housing.
- Detach the motor springs (14) from the gearwheel unit with a small screwdriver.

## **ASSEMBLY:**

 Think by assembly on the hooks from the connecting strip assy.

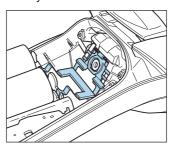

## **GENERAL:**

- Rechargeable / Main shaver
- Constant motor voltage
- Electronic push on/off
- Washable

# TECHNICAL DATA:

Voltage : 100 - 240 Volt 50 - 60 Hz

Motor voltage : 2,4 Volt Speed of cutters : > 2100 r.p.m.

Shaving heads : HQ6 - 4222 036 05821

Battery full indication : LED
Battery low indication : LED (red)
Charge indication : LED (green)
Battery : AA pack NiCd

This product meets the requirements regarding interference suppression on radio and TV.

After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

Published by Philips Domestic Appliances and Personal Care


Printed in the Netherlands

© Copyright reserved

Subject to modification





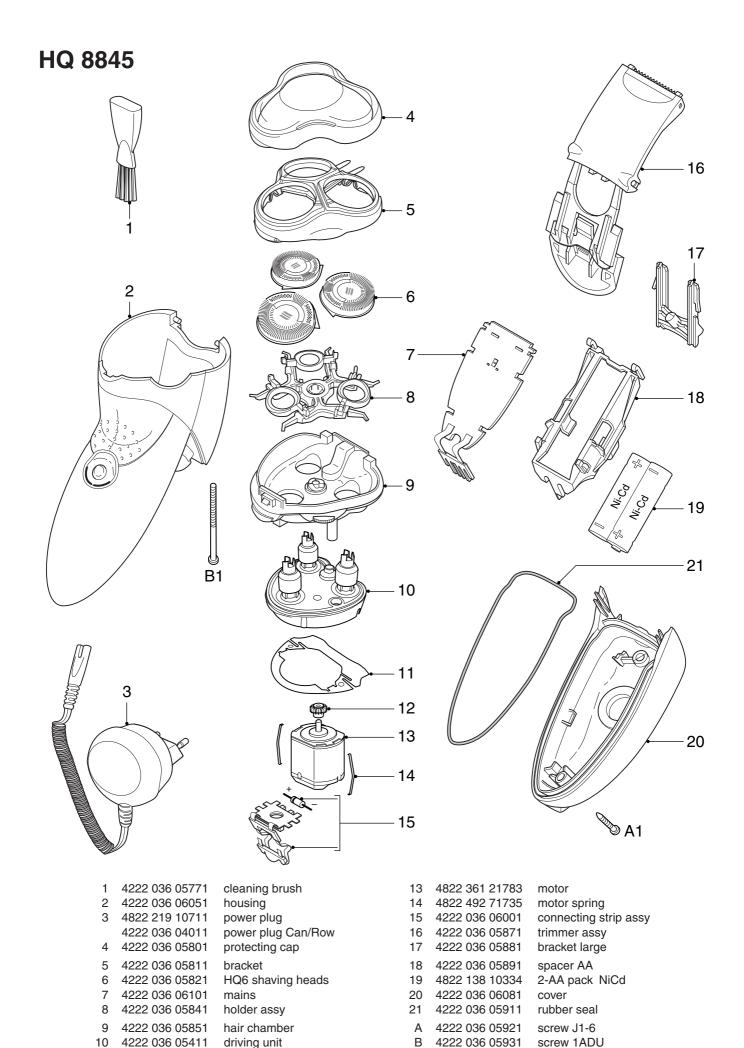

4222 036 05941

4222 036 06371

pouch

pouch Can/Row

4822 466 12233

4822 522 10763

11

dust seal

pinion