Service Service Service



HQ 8870

SENSOTEC

Philips Domestic Appliances and Personal Care

ServiceManual

SAP coding HQ 8870

HINTS FOR REPAIR:

- Remove shaving unit, to prevent damages during repairing.
- Remove screws A1 (2x).
- Take cover from housing (trimmer must be opened).
- Remove bracket large (17).




- The PCB-board can now be removed out of the housing.
- Remove the connecting strip from the motor by dis soldering.
- Remove screws B1 (2 x), now the motor and hairchamber can be removed out of the housing.
- Detach the motor springs (14) from the gearwheel unit with a small screwdriver.

This product meets the requirements regarding interference suppression on radio and TV.

After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

ASSEMBLY:

 Think by assembly on the hooks from the connecting strip assv.

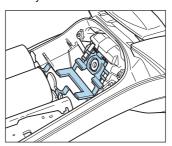

GENERAL:

- Rechargeable / Main shaver
- Constant motor voltage
- Electronic push on/off
- Washable

TECHNICAL DATA:

Voltage : 100 - 240 Volt 50 - 60 Hz

Motor voltage : 2,4 Volt Speed of cutters : > 2100 r.p.m.

Shaving heads : HQ6 - 4222 036 05821

Battery capacity indication : 5 LED
Battery full indication : LED
Battery low indication : LED (red)
Charge indication : LED (green)

Battery : AA pack NiMH (green)

Published by Philips Domestic Appliances and Personal Care

Printed in the Netherlands

© Copyright reserved

Subject to modification





