 


Service
Service
Service



Philips Domestic Appliances and Personal Care

Service Manual

 
PRODUCT INFORMATION

Features :

 
 
- Adjustable attachment comb for even cutting result.
- 7 hair length settings from 4 to 21 mm.
- Maintenance free cutting element; no oiling required.
- Width cutting unit 32 mm.
- Rechargeable for cordless operation.
- Mains operation possible for trimming when batteries are empty.
- AC/DC adapter.
- Charging time (empty → full) 12 hours.
- Operation time (full → empty) 30 minutes.

Product meets the requirements regarding interference suppression on radio and TV.

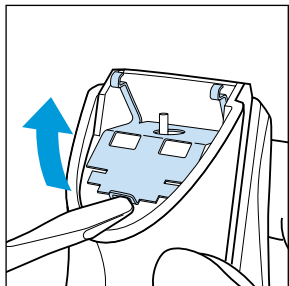 


**TO REPLACE
TRIMMER CLAMP (5)**

**TO REPLACE
BATTERY (6)**

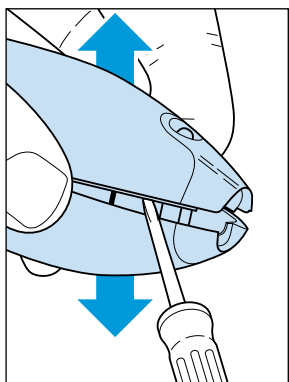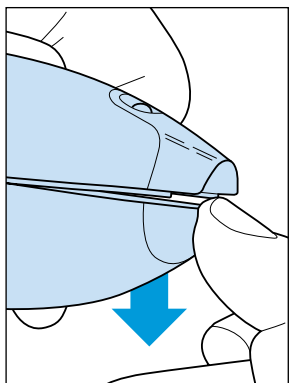- Remove **styling comb (2)**
 Remove **cutter (1)**
 Remove **trimmer clamp (5)**
 Remove **screw "A"**
 Open housing

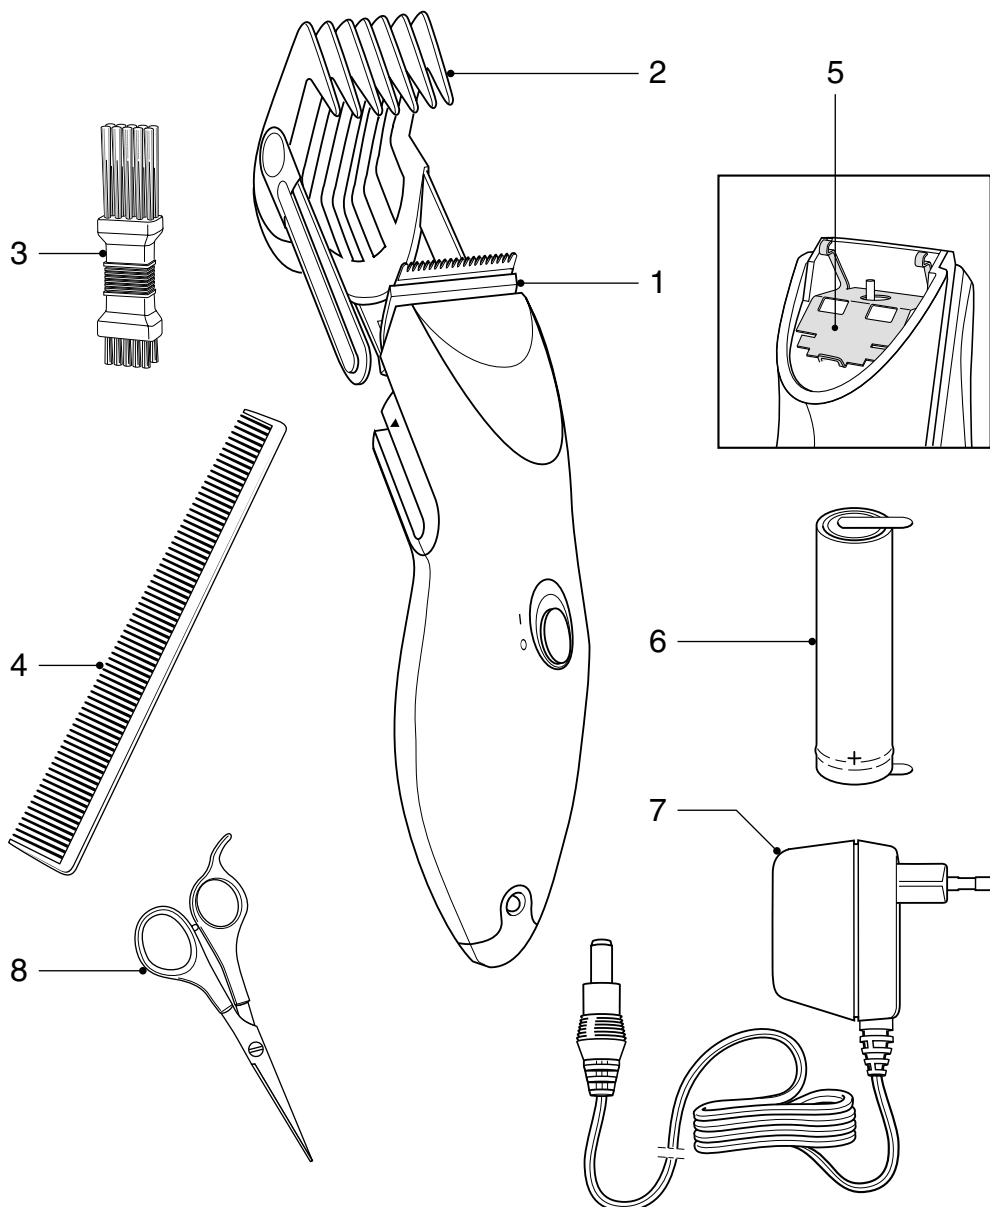

Dimensions screw A : 2.2 x 6



Pos	Description	Service code
1	Cutter	4822 690 10212
2	Adjustable comb	4822 690 10203
3	Cleaning brush	4822 479 30183
4	Styling comb	4822 690 30433
5	Trimmer clamp, cutter (1) included	4822 310 11351
6	Battery (NiCd)	4822 138 10336
7	AC/AD adapter EURO	4822 690 30441
	AC/AD adapter UK	4822 690 30442
	AC/AD adapter USA	4822 690 30443
	AC/AD adapter CDN	4822 690 30444
	AC/AD adapter JPN	4822 219 10148
	AC/AD adapter AUS	4822 219 10149
	AC/AD adapter TWN	4822 219 10151
	AC/AD adapter KOR	4822 219 10152
8	Scissors	4822 690 30434
	Dir. for use: D, I, P, UK, F	4203 035 72050
	Dir. for use: N, S, SF, DK, NL	4203 035 72060
	Dir. for use: E, P, Arab, Gr, TR	4203 035 72070