**HQ-C482** 





**Philips Domestic Appliances and Personal Care** 

SAP coding: HQC482

### **PRODUCT INFORMATION**

## General description:

# $2D \ Contour Tracking \ System^{TM}$

2D flexing guide comb offers maximum control and ensures perfect results every time.

#### Safety Lock

Safety Lock secures the selected length setting for increased accuracy and even cutting.

## 8 length settings (1-21 mm)

8 length settings allow a range of styling possibilities to suit the whole family

## Materials used:

- housing : ABS - combs : PA / PC

- others : PA / POM / SAN / steel

## Features:

lubrication for life

- Maintenance free cutting unit ensures consistent high

performance

Translucent guide comb - For maximum visibility of the

3D rounded teeth

Hygiene

- For ultimate skin protection

- Hinged cutting lid allows easy

cleaning

Ultra light design

- Efficient and compact for optimal

handling

Barber set

- Styling comb, cleaning brush,

scissors







### **TECHNICAL INFORMATION:**

Power supply : RC / AC
Charging time : 12 h
Cordless operation time : 35 min

Charging indication : yes - LED on appliance

 primary
 (EU)
 : 220-240 V - 50/60 Hz

 secondary
 (EU)
 : 1,3 V - 1500 mA

 primary
 (CDN / USA)
 : 120 V - 60 Hz


 secondary
 (CDN / USA)
 : 1,3 V - 1500 mA

Dimensions F-box : 13,9 x 6,1 x 22,4 cm

Weight F-box : 0,67 kg

Weight product (without comb) : 154 g

## **DISASSEMBLY ADVISE**

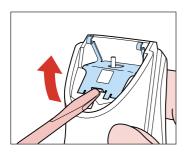

## **REPAIR INSTRUCTIONS**

- No specific issues

# **OPTIONAL (ACCESSORIES)**


- No specific issues

Product meets the requirements regarding interference suppression on radio and TV.

Never use again a deformed housing clamp (4). After the product has been repaired, it should function properly and has to meet the safety requirements as laid down and offically established at this moment.

#### NOTES:

- In order to guarantee the longest possible workinglife of the battery:
  - do not charge for more than 24 hours
  - do not keep the charging unit permanently plugged in
  - discharge the battery completely once a year by letting the motor run until it stops
- The appliance should be charged again, when not used for a long period

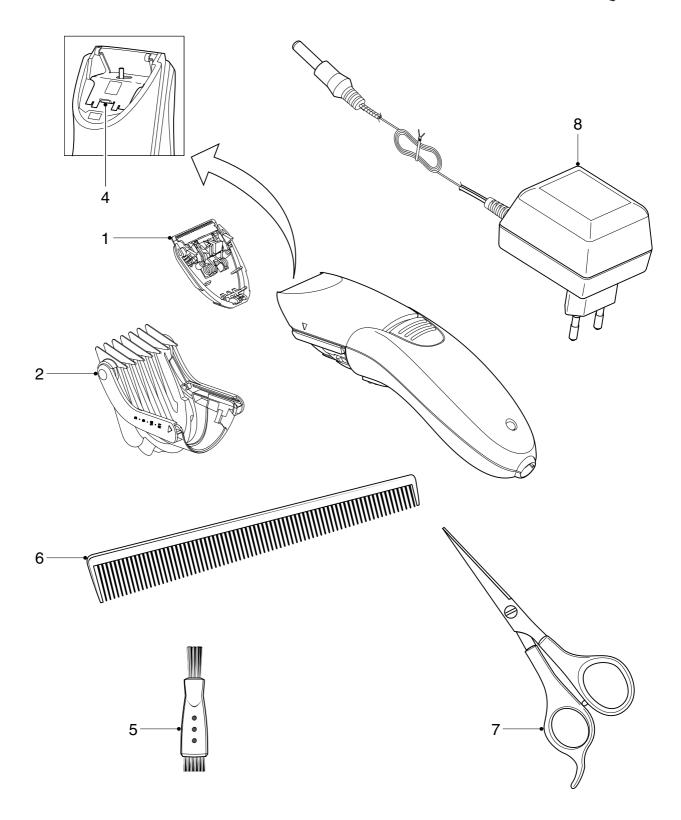

Pos	Service code	Description
1	4203 035 79340	Cutter
2	4203 035 79350	Small comb
4	4203 035 71060	Housing clamp
5	4822 479 30183	Cleaning brush
6	4822 690 30433	Barbers comb
7	4822 690 30434	Scissors

Pos	Service code	Description
8	4822 690 30441	Adapter - EU
	4822 690 30442	Adapter - GB
	4822 690 30443	Adapter - USA
	4822 690 30444	Adapter - CANADA
	4822 219 10149	Adapter - AUS