

**HR1341/00
HR1342/00
RI1341/02
RI1342/02
RI1341/03
RI1342/03****Philips Consumer Lifestyle**

Service Manual

PRODUCT INFORMATION

- Product meets the requirements regarding interference suppression on radio and television.
- After the product has been repaired, it should function properly and has to meet the safety requirements as laid down officially established at this moment.

TECHNICAL INFORMATION**HR1341/00, HR1342/00
RI1341/02, RI1342/02**

- Power consumption : 1 speed, 300 W
- Voltage and frequency : 220 - 240 V / 50 - 60 Hz
- Normal speed unloaded : 25.000 rpm
- Turbo speed loaded : 15.000 rpm

RI1341/03, RI1342/03

- Power consumption : 1 speed, 300 W
- Voltage and frequency : 110 - 120 V / 50 - 60 Hz
- Normal speed unloaded : 25.000 rpm
- Turbo speed loaded : 15.000 rpm

- Beaker Volume : 0,5 l
- Detachable bar : Yes
- Bar material : Plastic
- Beaker Material : SAN

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues.

REPAIR INSTRUCTION

- No specific issues.

OPTIONAL (accessories)

- No specific issues.

PARTS LIST & EXPLODED VIEW

HR1341/00 RI1341/02
HR1342/00 RI1342/02
 RI1341/03
 RI1342/03



Pos	Service code	Description	HR1341 RI1341	HR1342 RI1342
1	4203 035 87350	Bar	X	X
2	4203 035 87360	Beaker 0,5 l incl. Lid	X	X
3	4203 035 87370	Gearbox		X
4	4203 035 87380	Knife		X
5	4203 035 87390	Chopper Bowl		X
6	4203 035 87400	Chopper Ring		X