**HRI372** 





**Philips Consumer Lifestyle** 

# **Service Manual**

### **PRODUCT INFORMATION**

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

#### **TECHNICAL INFORMATION**

- Power consumption : 700 W

Voltage and Frequency : 220 - 240 V / 50 - 60 Hz
Vario Speed unloaded : from 8.000 rpm to 15.000 rpm

- Turbo Speed unloaded : 18.000 rpm

## **DISASSEMBLY- AND RE-ASSEMBLY ADVISE**

- No specific issues

# **OPTIONAL** (accessories)

- No specific issues




REPAIR INSTRUCTIONS HR1372

How to make "new" accessories of HR136x and HR137x compatible to older appliances of these types





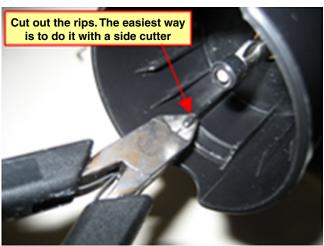



**Actual Power unit** 



**Old Power unit** 





Pos	Service code	Description
1	4203 035 84460	Blender Bar new
2	4203 065 66350	Beaker incl. Lid
3	4203 035 85600	Whisk Accessorie new
4	4203 065 66360	Wallhook (optional)
5	4203 035 85610	Chopping Interface small
6	4203 065 66380	Chopping Knife small
7	4203 065 66390	Chopping Bowl small
8	4203 035 85620	Chopping Interface large
9	4203 035 54100	Chopping Knife large
10	4203 035 54110	Ice Crushing Knife
11	4203 035 54120	Chopping Bowl large