

Service  
Service  
Service



Philips Consumer Lifestyle

# Service Manual

## PRODUCT INFORMATION

### General:

- Mains/Rechargeable operation
- World wide automatic voltage selection 100 - 240 Volt

### Safety info

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

## TECHNICAL INFORMATION

- Charging time : 10 - 12 hours
- Running time : Up to 35 minutes
- Charging indication : Yes (Continuous green LED)
- Voltage : 100 - 240 Volt
- Motor voltage : 2,4 Volt
- Cutter need no oiling

## DISASSEMBLY- AND RE-ASSEMBLY ADVICE


- No specific issues

## REPAIR INSTRUCTIONS

- No specific issues

## OPTIONAL (accessories)

- No specific issues

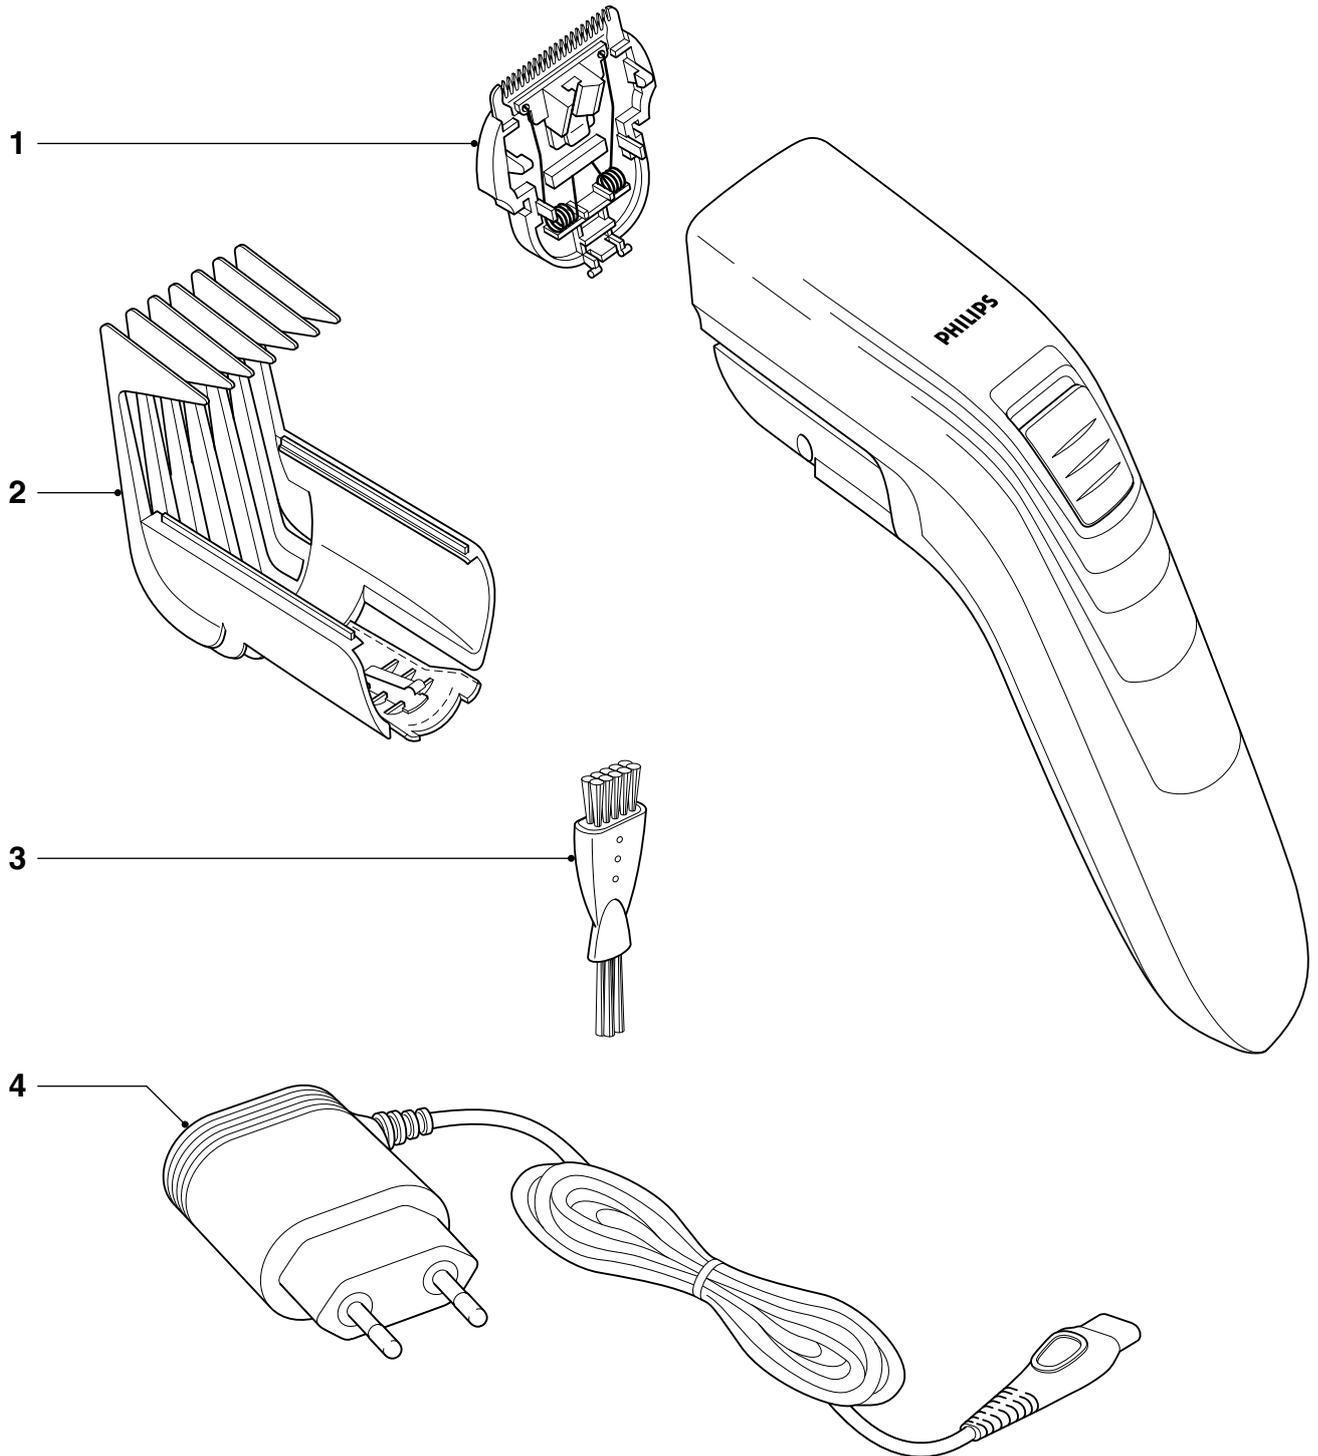

Pos	Service code	Description
1	4222 036 17510	Cutter
2	4222 036 17520	Comb
3	4222 036 02770	Brush
4	4222 036 04080	Power plug EUR
	4222 036 05160	Power plug NOR
	4222 036 05120	Power plug AUS/NZ
	4222 036 04090	Power plug GBR

Pos	Service code	Description
4	4222 036 05110	Power plug CAN/TW
	4222 036 03810	Power plug MEX
	4222 036 04850	Power plug KOR
	4222 036 03870	Power plug JAP
	4222 036 10320	Power plug PRC
	4222 036 03760	Power plug ARG