

Service  
Service  
**Service**



**Philips Consumer Lifestyle**

# Service Manual

## PRODUCT INFORMATION

### General:

- Corded and cordless use
- World wide automatic voltage selection 100 - 240 Volt
- Mains operating when battery is empty

### Safety:

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

## TECHNICAL INFORMATION

- Voltage : 100 - 240 Volt
- Battery type : NiMh
- Charging time : 8 hours
- Running time : Up to 45 minutes
- Cutter need no oiling
- Cutter width : 41 mm
- Number of length settings : 20
- Length setting : 3 - 40 mm
- Precision (size of steps) by 2 mm
- Self-sharpening stainless steel blades

## DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues


## REPAIR INSTRUCTIONS

- No specific issues

## OPTIONAL (accessories)

- Power plug:
 

2722 171 90129	Europe
2722 171 90138	USA, CA, TW, MEX, JAP
2722 171 90143	Australia/New Zealand
2722 171 90132	United Kingdom
2722 171 90145	Argentina
2722 171 90136	Brasil

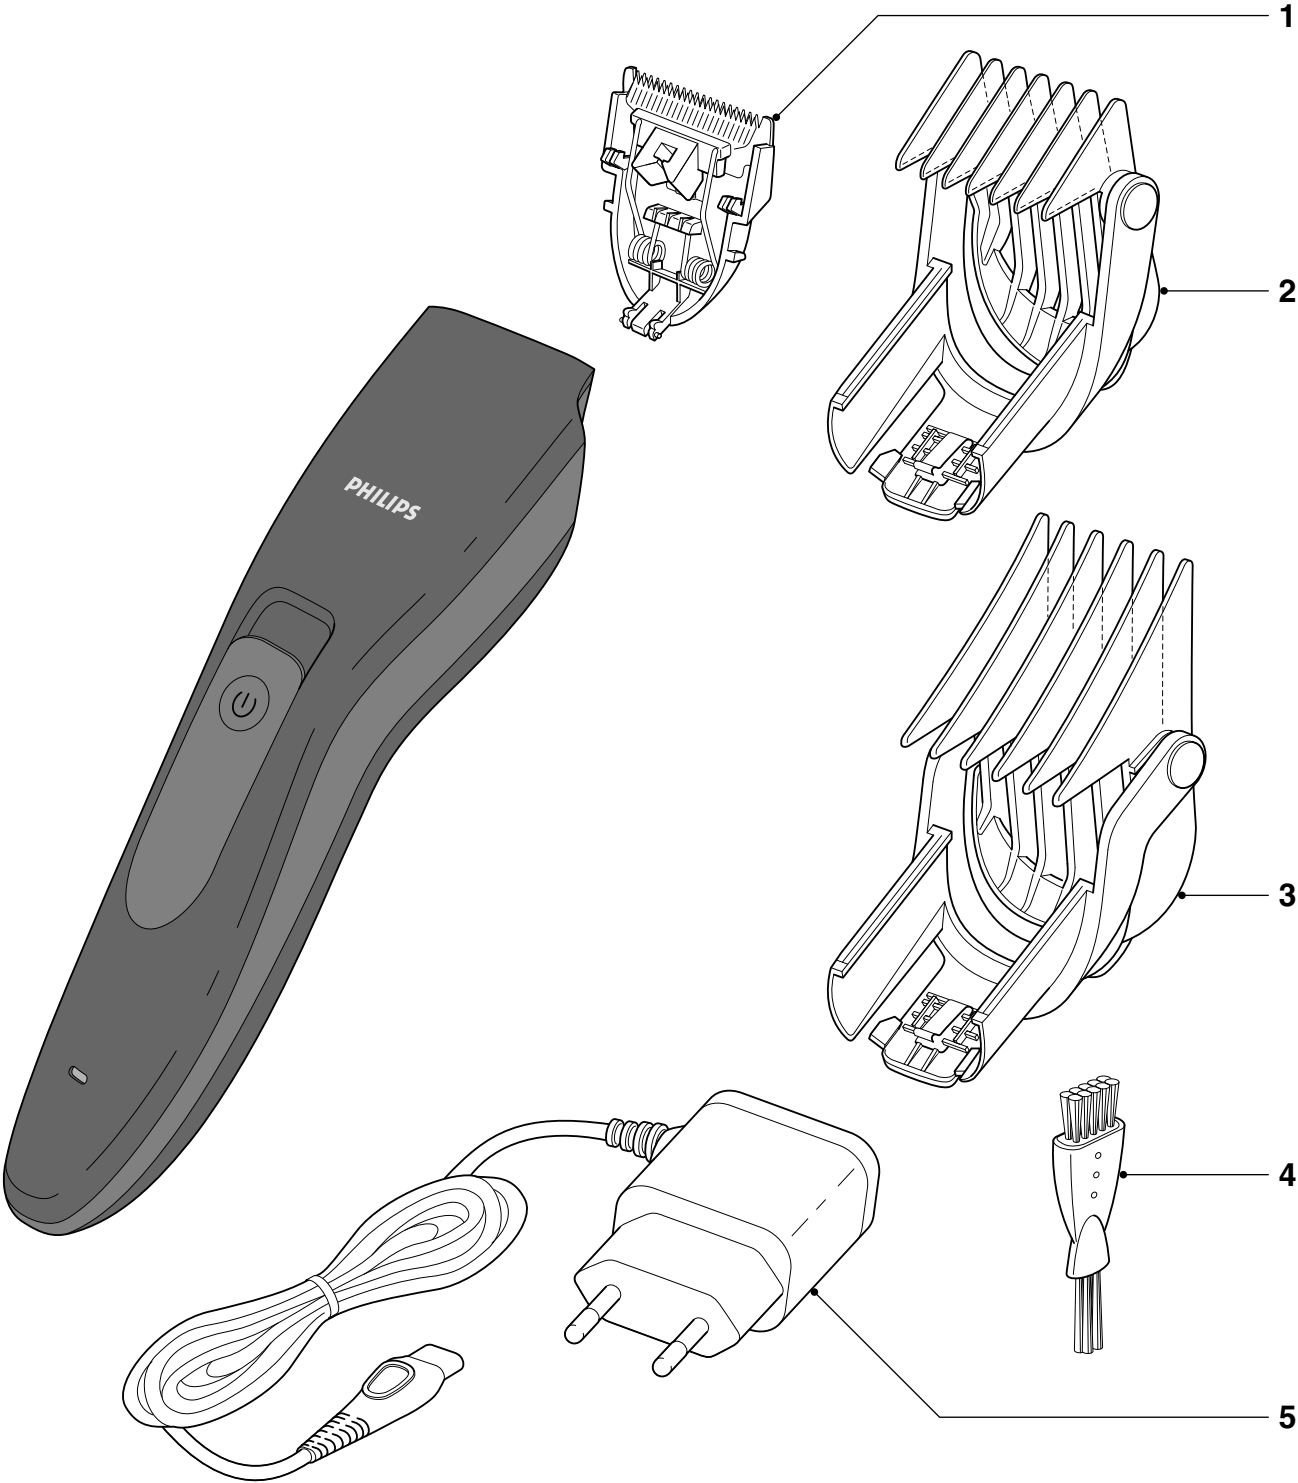

Pos	Service code	Description
1	4222 036 18521	Cutter assy
2	4222 036 18501	Small comb (push)
3	4222 036 18511	Large comb (push)
4	4222 036 02770	Brush
5	See Optional	Power plug