



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

General:

- Corded and cordless use
- World wide automatic voltage selection 100 - 240 Volt
- Mains operating when battery is empty

Safety:

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage : 100 - 240 Volt
- Battery : Li-ion
- Charging time : 1 hours
- Running time : Up to 60 minutes
- Cutter need no oiling
- Cutter width : 41 mm
- Number of length settings : 38
- Length setting : 3 - 40 mm
- Precision (size of steps) by 1 mm
- Self-sharpening stainless steel blades

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues


REPAIR INSTRUCTIONS

- No specific issues

OPTIONAL (accessories)

- Power plug:

2722 171 90129	Europe
2722 171 90138	USA, CA, TW, MEX, JAP
2722 171 90143	Australia/New Zealand
2722 171 90132	United Kingdom

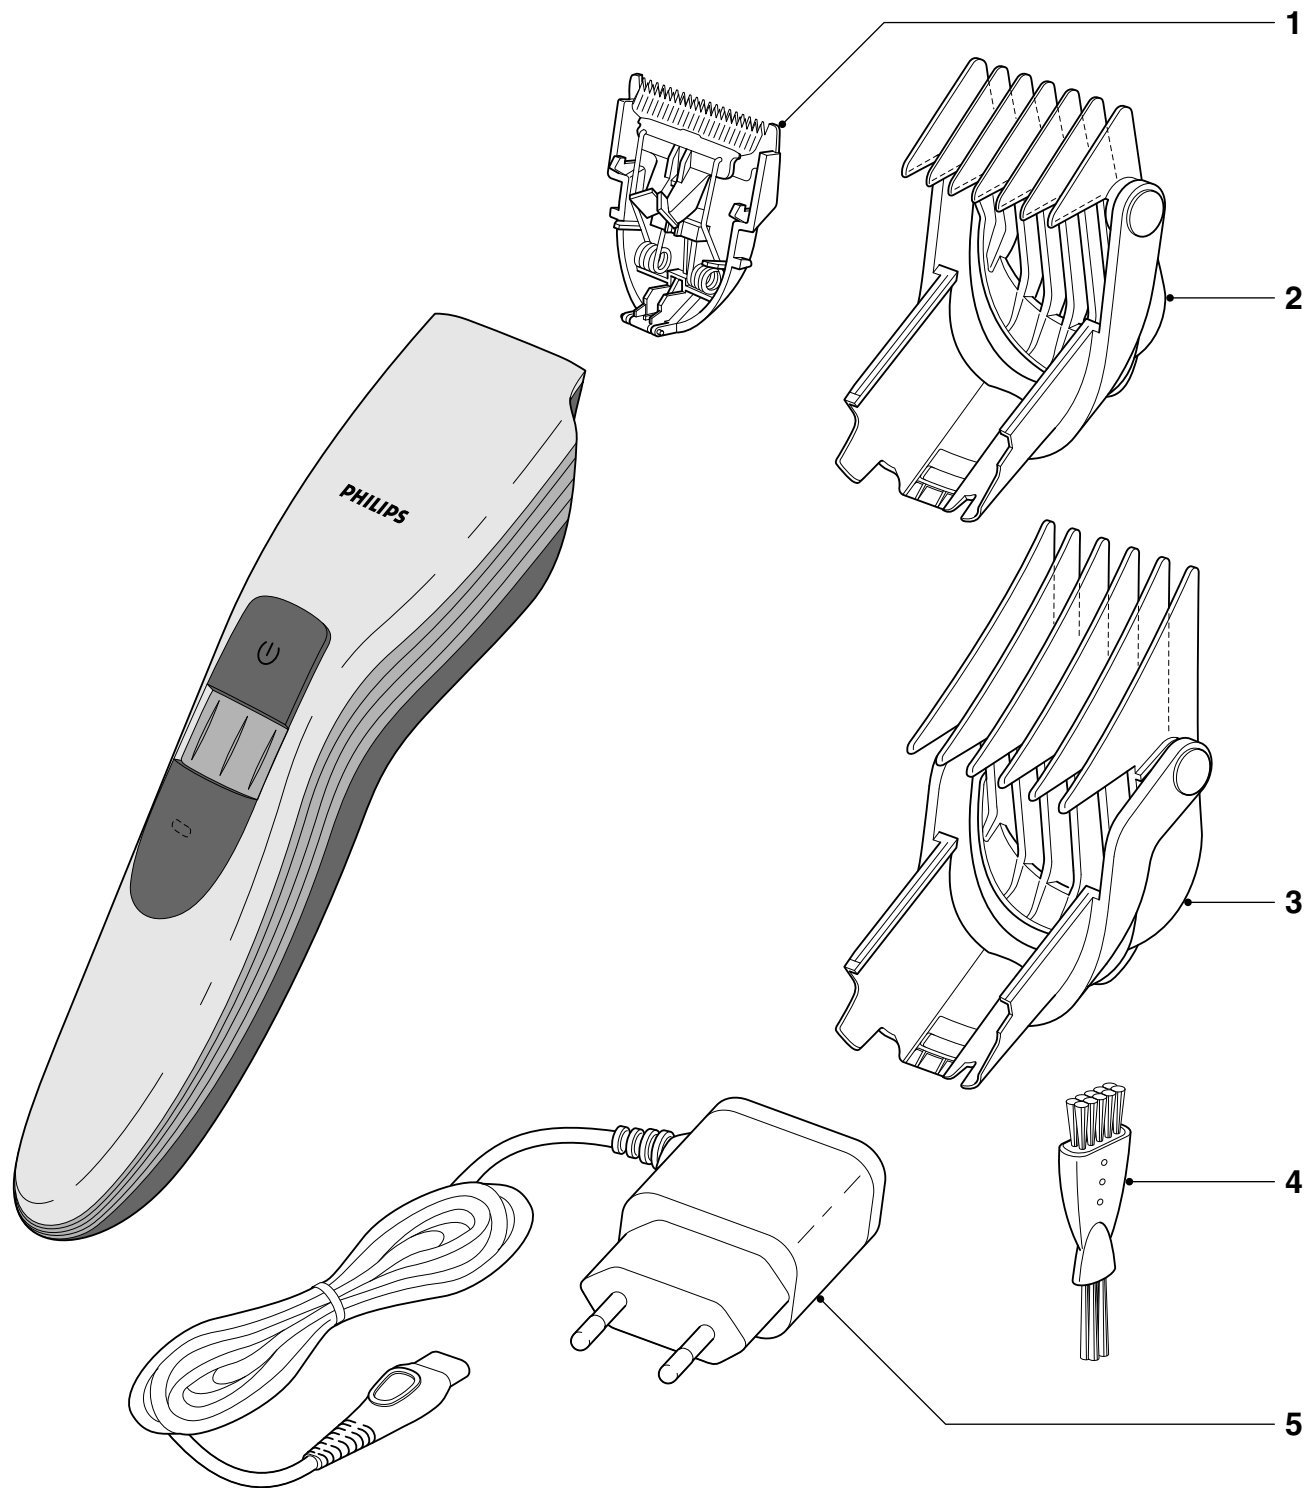

Pos	Service code	Description
1	4222 036 18571	Cutter assy
2	4222 036 18541	Small comb (zoom)
3	4222 036 18561	Large comb (zoom)
4	4222 036 02770	Brush
5	See Optional	Power plug