

Service
Service
Service



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

General:

- Washable attachments
- Full size trimmer blade 32 mm
- Mini shaver
- Precision trimmer 21 mm
- Nose, ear and eyebrow trimmer
- No oiling required

Safety:

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Power system : Rechargeable
- Batteries : NiMh
- Charging time : 10 hours
- Running time : Up to 35 minutes
- Usage : Cordless only

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- No specific issues

REPAIR INSTRUCTIONS

- No specific issues


OPTIONAL (accessories)

- 4222 036 18371 Pouch
- 2722 171 90215 Power plug Europa
- 2722 171 90219 Power plug Japan
- 2722 171 90223 Power plug United Kingdom
- 2722 171 90218 Power plug Brasil
- 2722 171 90216 Power plug Argentina
- 2722 171 90217 Power plug AUS/NZ
- 2722 171 90224 Power plug Canada

 = changed

PARTS LIST + EXPLODED VIEW

QG3250

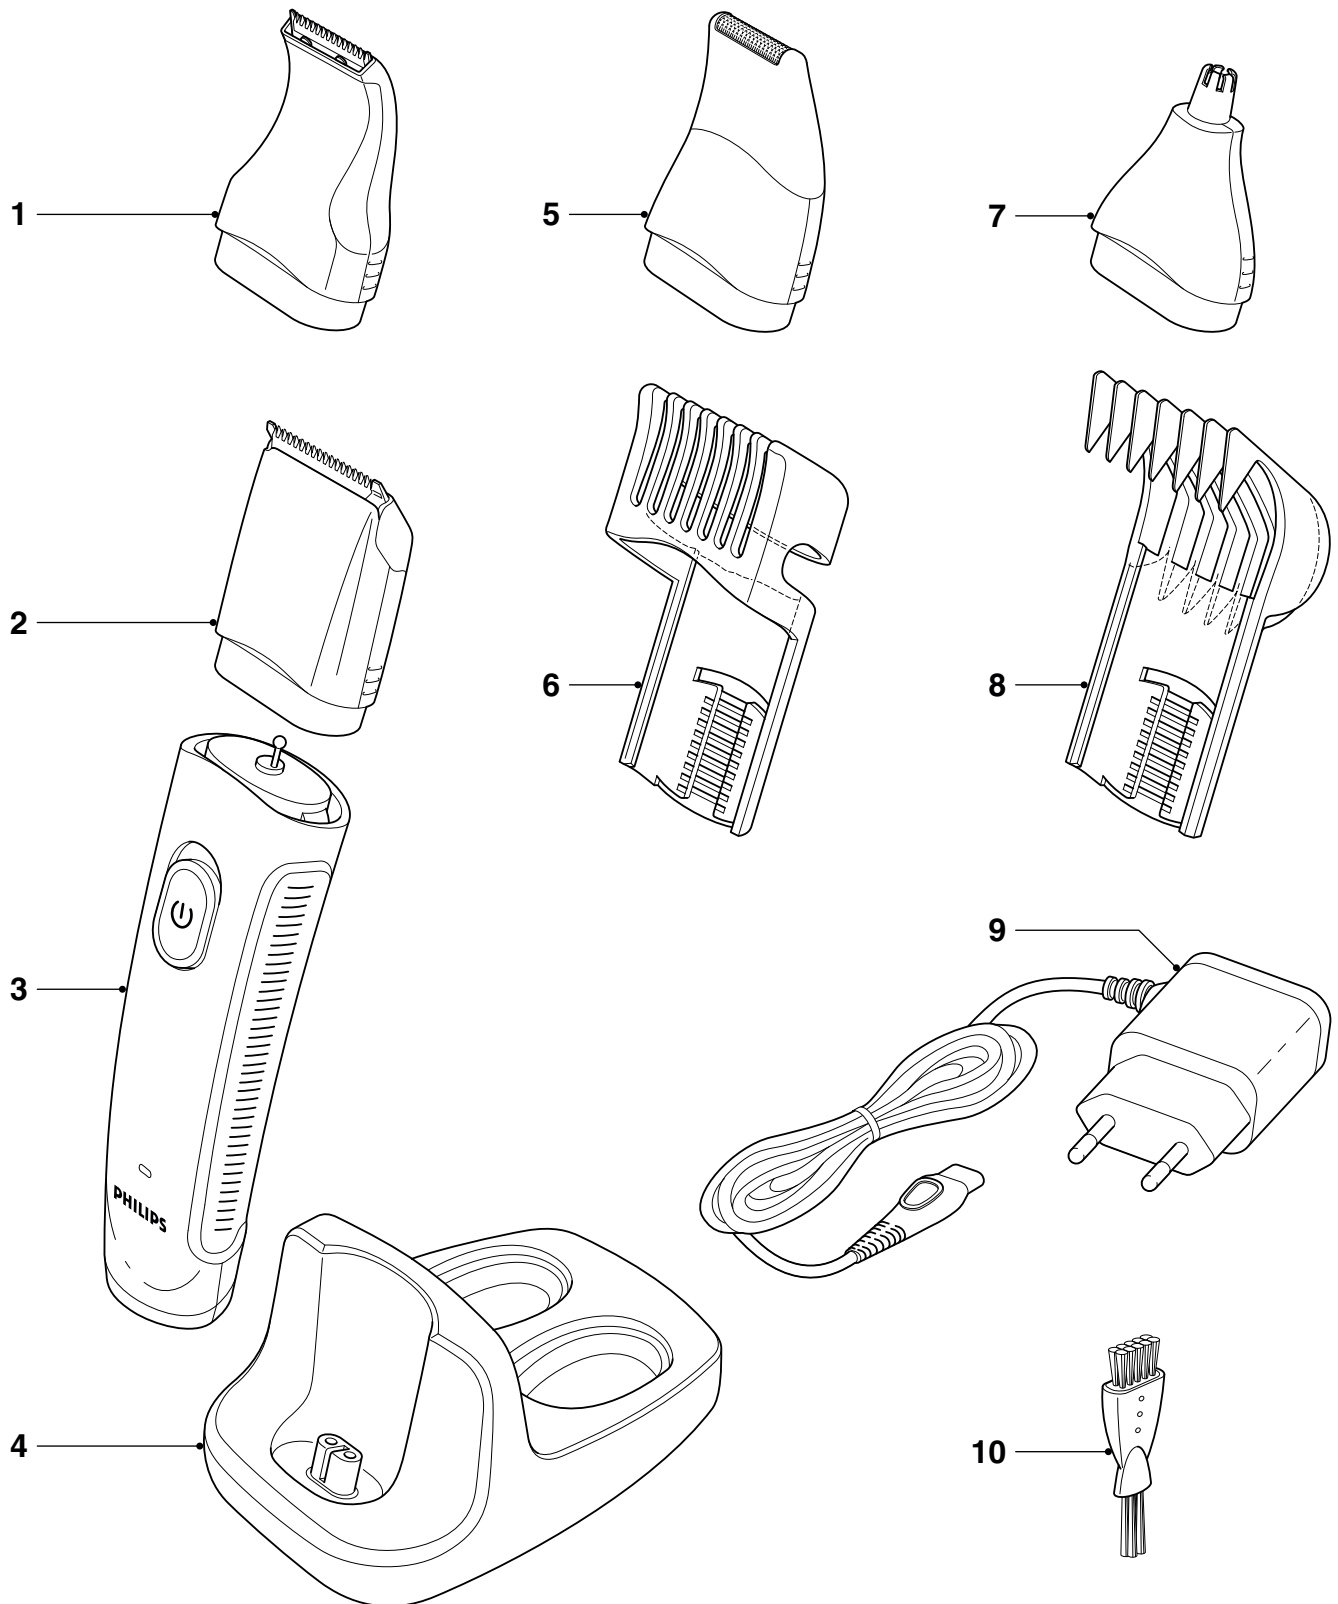

Pos	Service code	Description
1	4203 035 83680	Precision trimmer 21 mm
2	4222 036 18231	Clipper element 32 mm
3	4222 036 18391	Handle
4	4222 036 18331	Stand
5	4203 035 83700	Mini foil shaver

Pos	Service code	Description
6	4222 036 18291	Beardtrimmer comb
7	4203 035 83690	Nose trimmer
8	4222 036 18301	Hairclipper comb 32 mm
9	See Optional	Power plug
10	4222 036 02770	Brush