

**Philips Consumer Lifestyle**

# Service Manual

**PRODUCT INFORMATION****Features :**

- Corded and cordless use
- Stubble setting
- Very high precision of 0,5 mm
- Zoom wheel easily adjust length settings
- 20 secured length settings
- Non-scratching teeth

**Safety:**

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.


**TECHNICAL INFORMATION**

- Mains : Voltage - input : 100 - 240 V / 50 - 60 Hz
  - output : 15 Volt
- Power system : AC / RC
- Batteries : NiMh
- Charging time : 10 hours
- Capacity : up to 60 minutes

## DISASSEMBLY- AND RE-ASSEMBLY ADVISE

### Disassembly:

1. Remove comb.
2. Open trimmer by pushing under the teeth.
3. Pushing on the side of the trimmer and turn it out.  
(see picture)

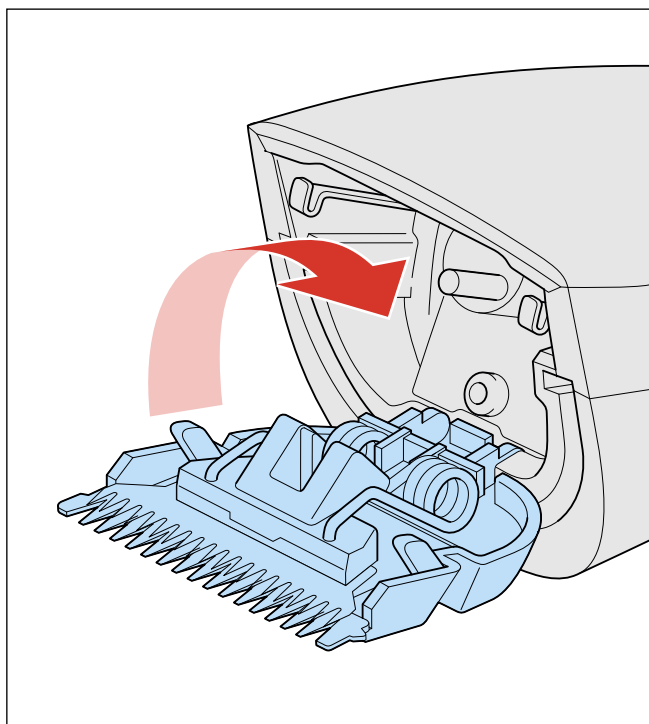

### Re-assembly:


- Do this opposite.

## REPAIR INSTRUCTIONS

- No specific issues

### OPTIONAL (accessories)

- 2722 171 90065 powerplug Europe
- 2722 171 90068 powerplug United Kingdom
- 2722 171 90073 powerplug Brasil
- 2722 171 90088 powerplug Argentina
- 2722 171 90075 powerplug USA, CA, TW, MEX, JAP
- 2722 171 90086 powerplug Australia/ New Zealand

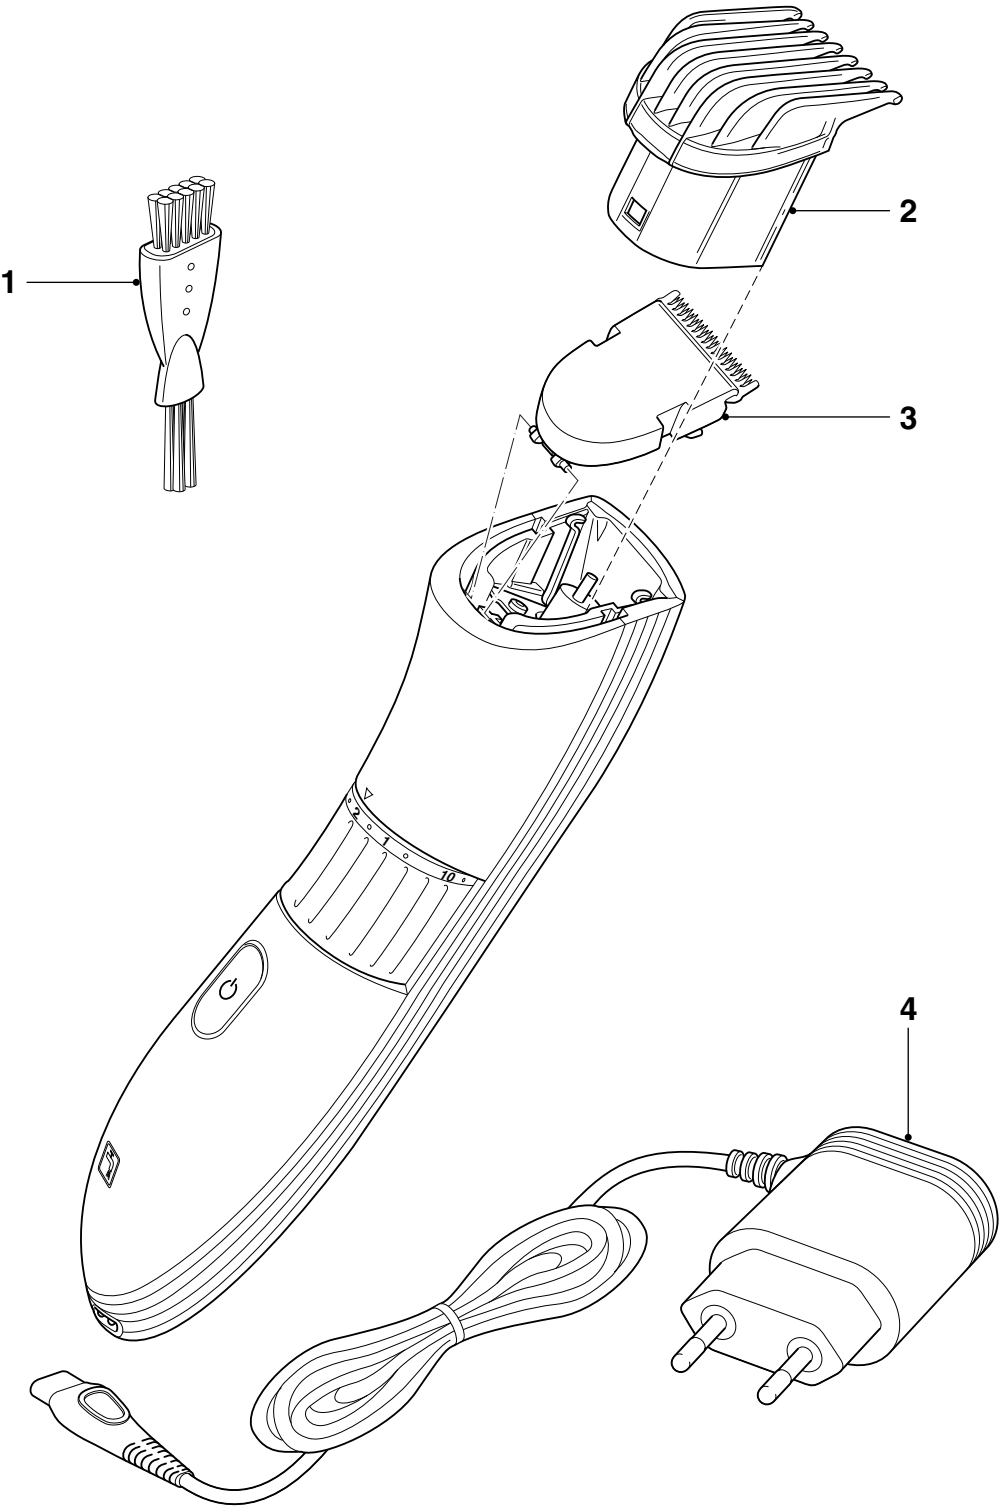

| Pos | Service code   | Description    |
|-----|----------------|----------------|
| 1   | 4222 036 02770 | Cleaning Brush |
| 2   | 4222 036 18131 | Comb           |
| 3   | 4222 036 18141 | Cutter Assy    |
| 4   | See optional   | Powerplug      |