


Gebrauchsanweisung
51 2721
(D,GB,F,I,NL,E)


Montageanweisung
51 5436
(D,GB,F,I,NL,N,S,E)

Schraubensatz
08 4136

Befestigungssatz
08 8957

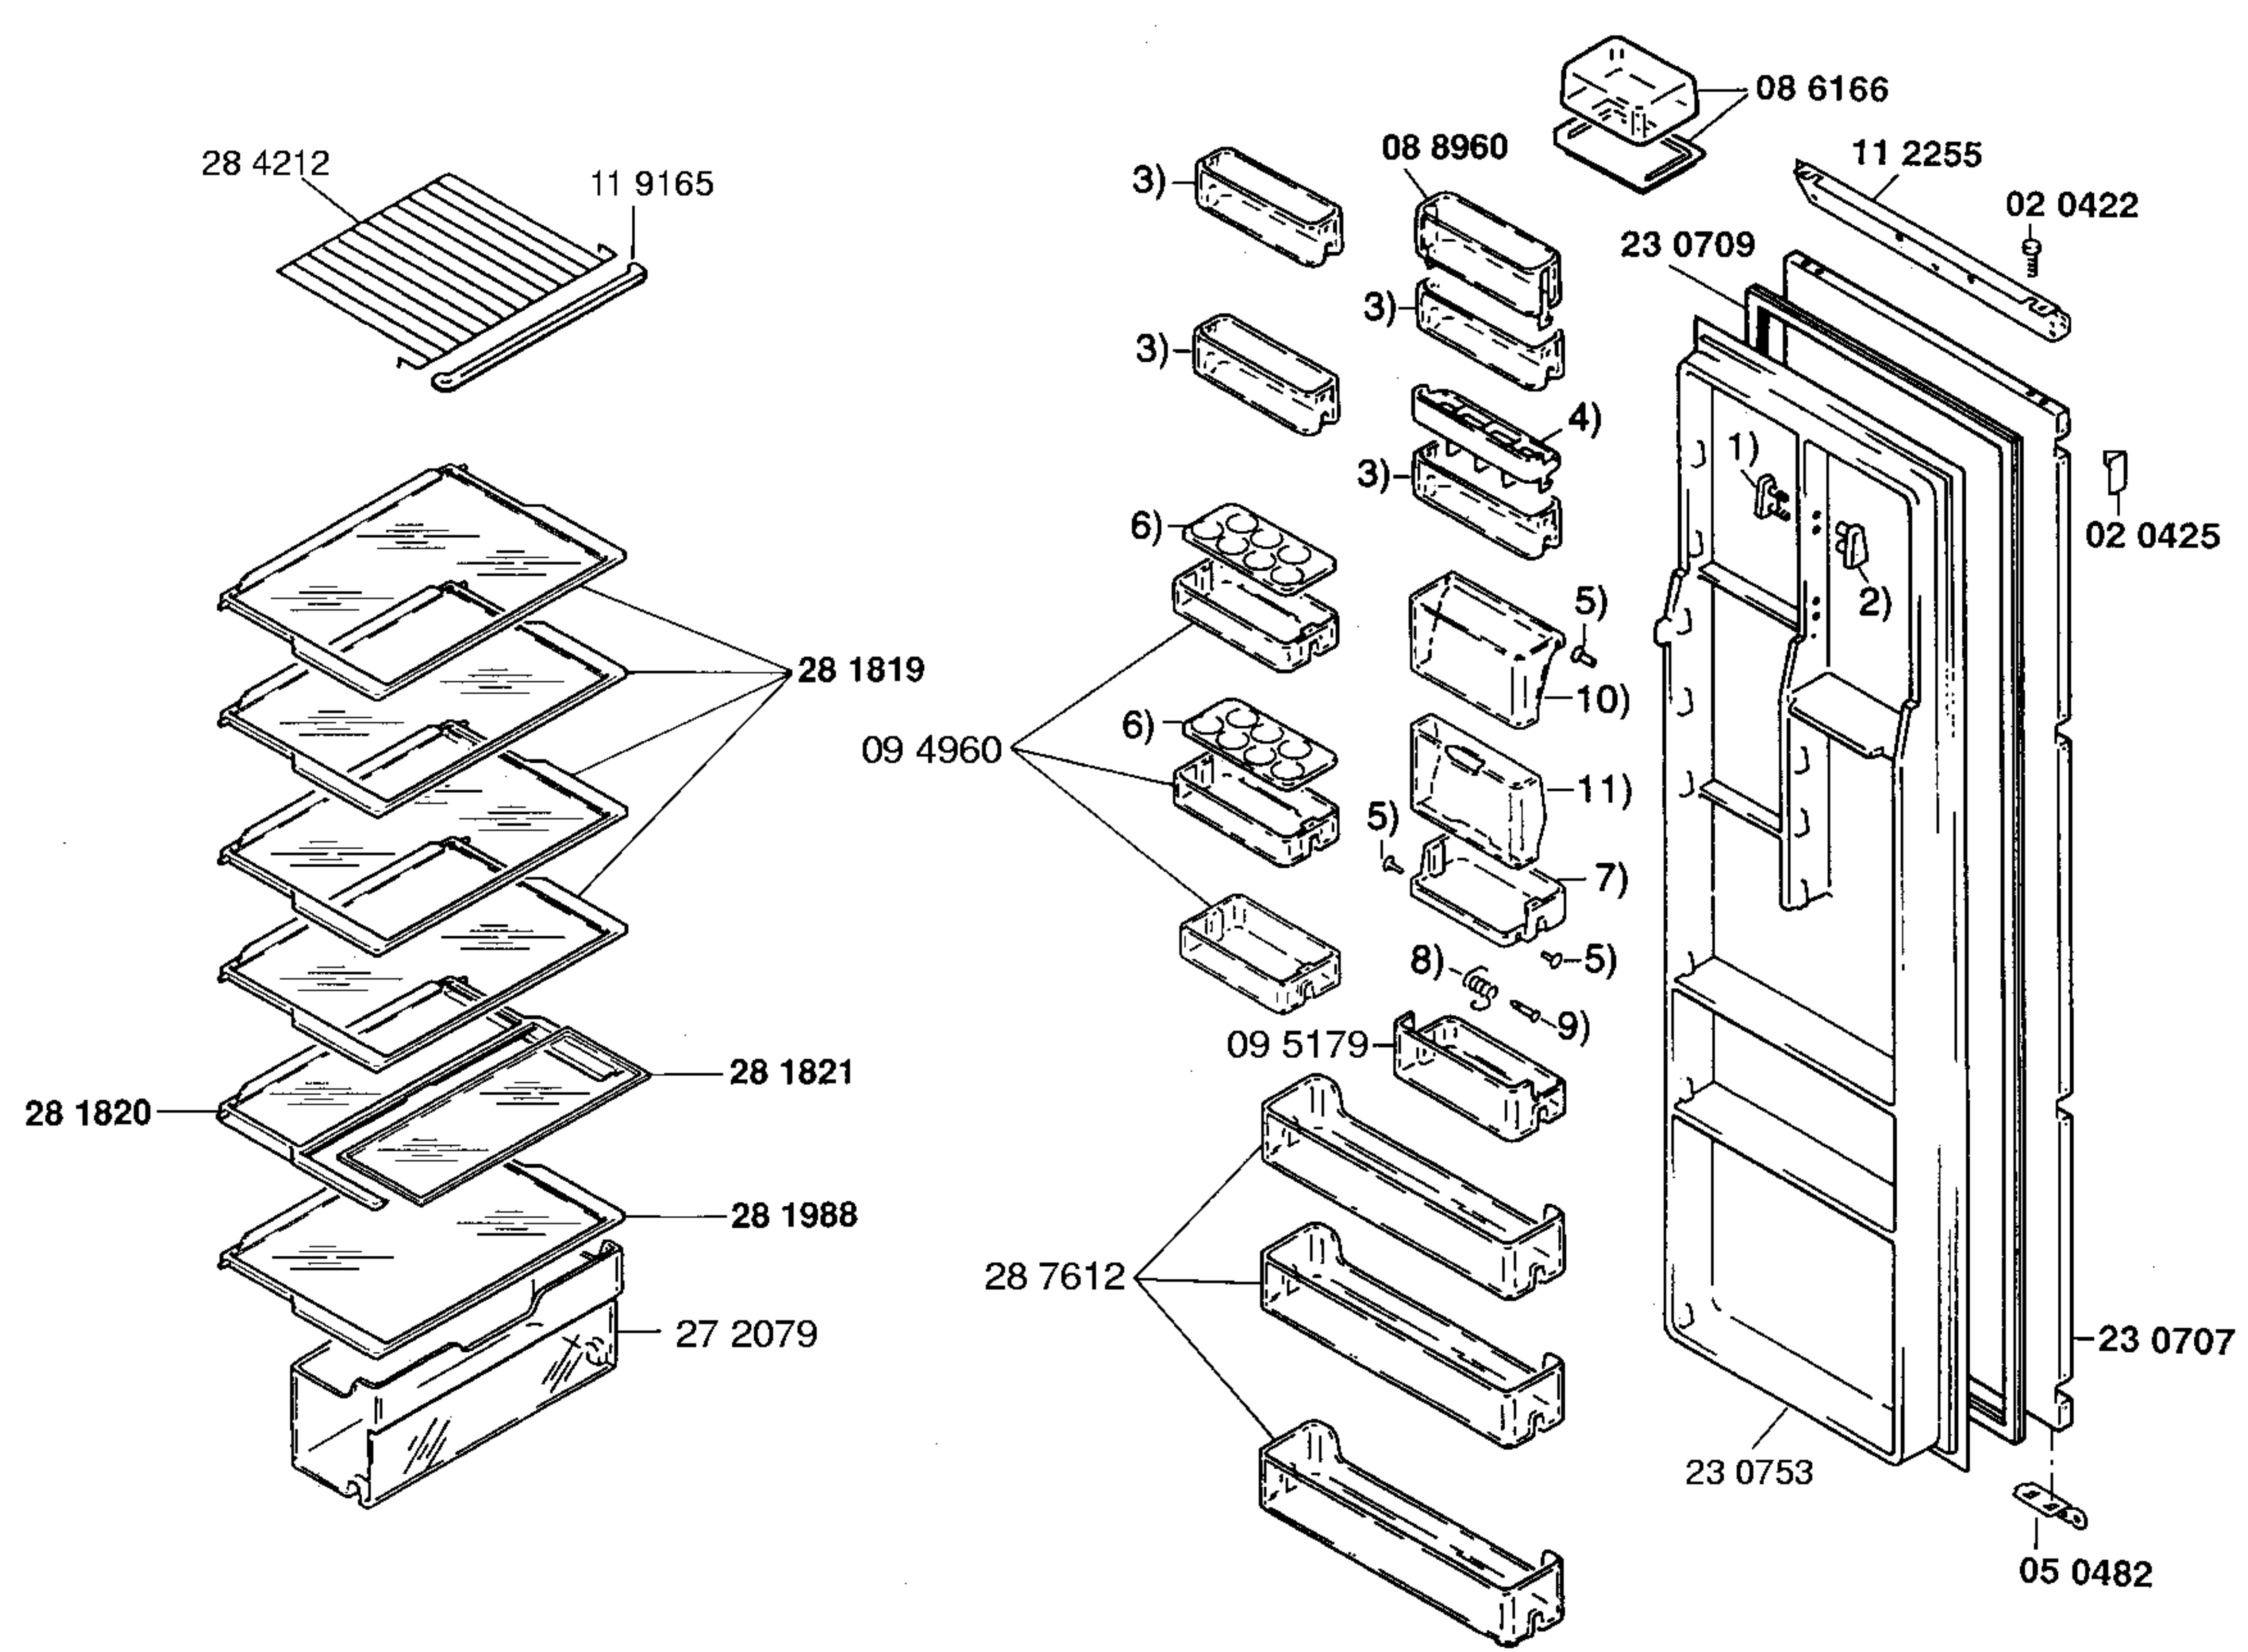

- 1) 02 2437
- 2) 02 6566
- 3) 09 5359
- 4) 08 4541
- 5) 02 9967
- 6) 08 4592
- 7) 08 4138
- 8) 02 7493
- 9) 02 7494
- 10) 09 4956
- 11) 09 4958

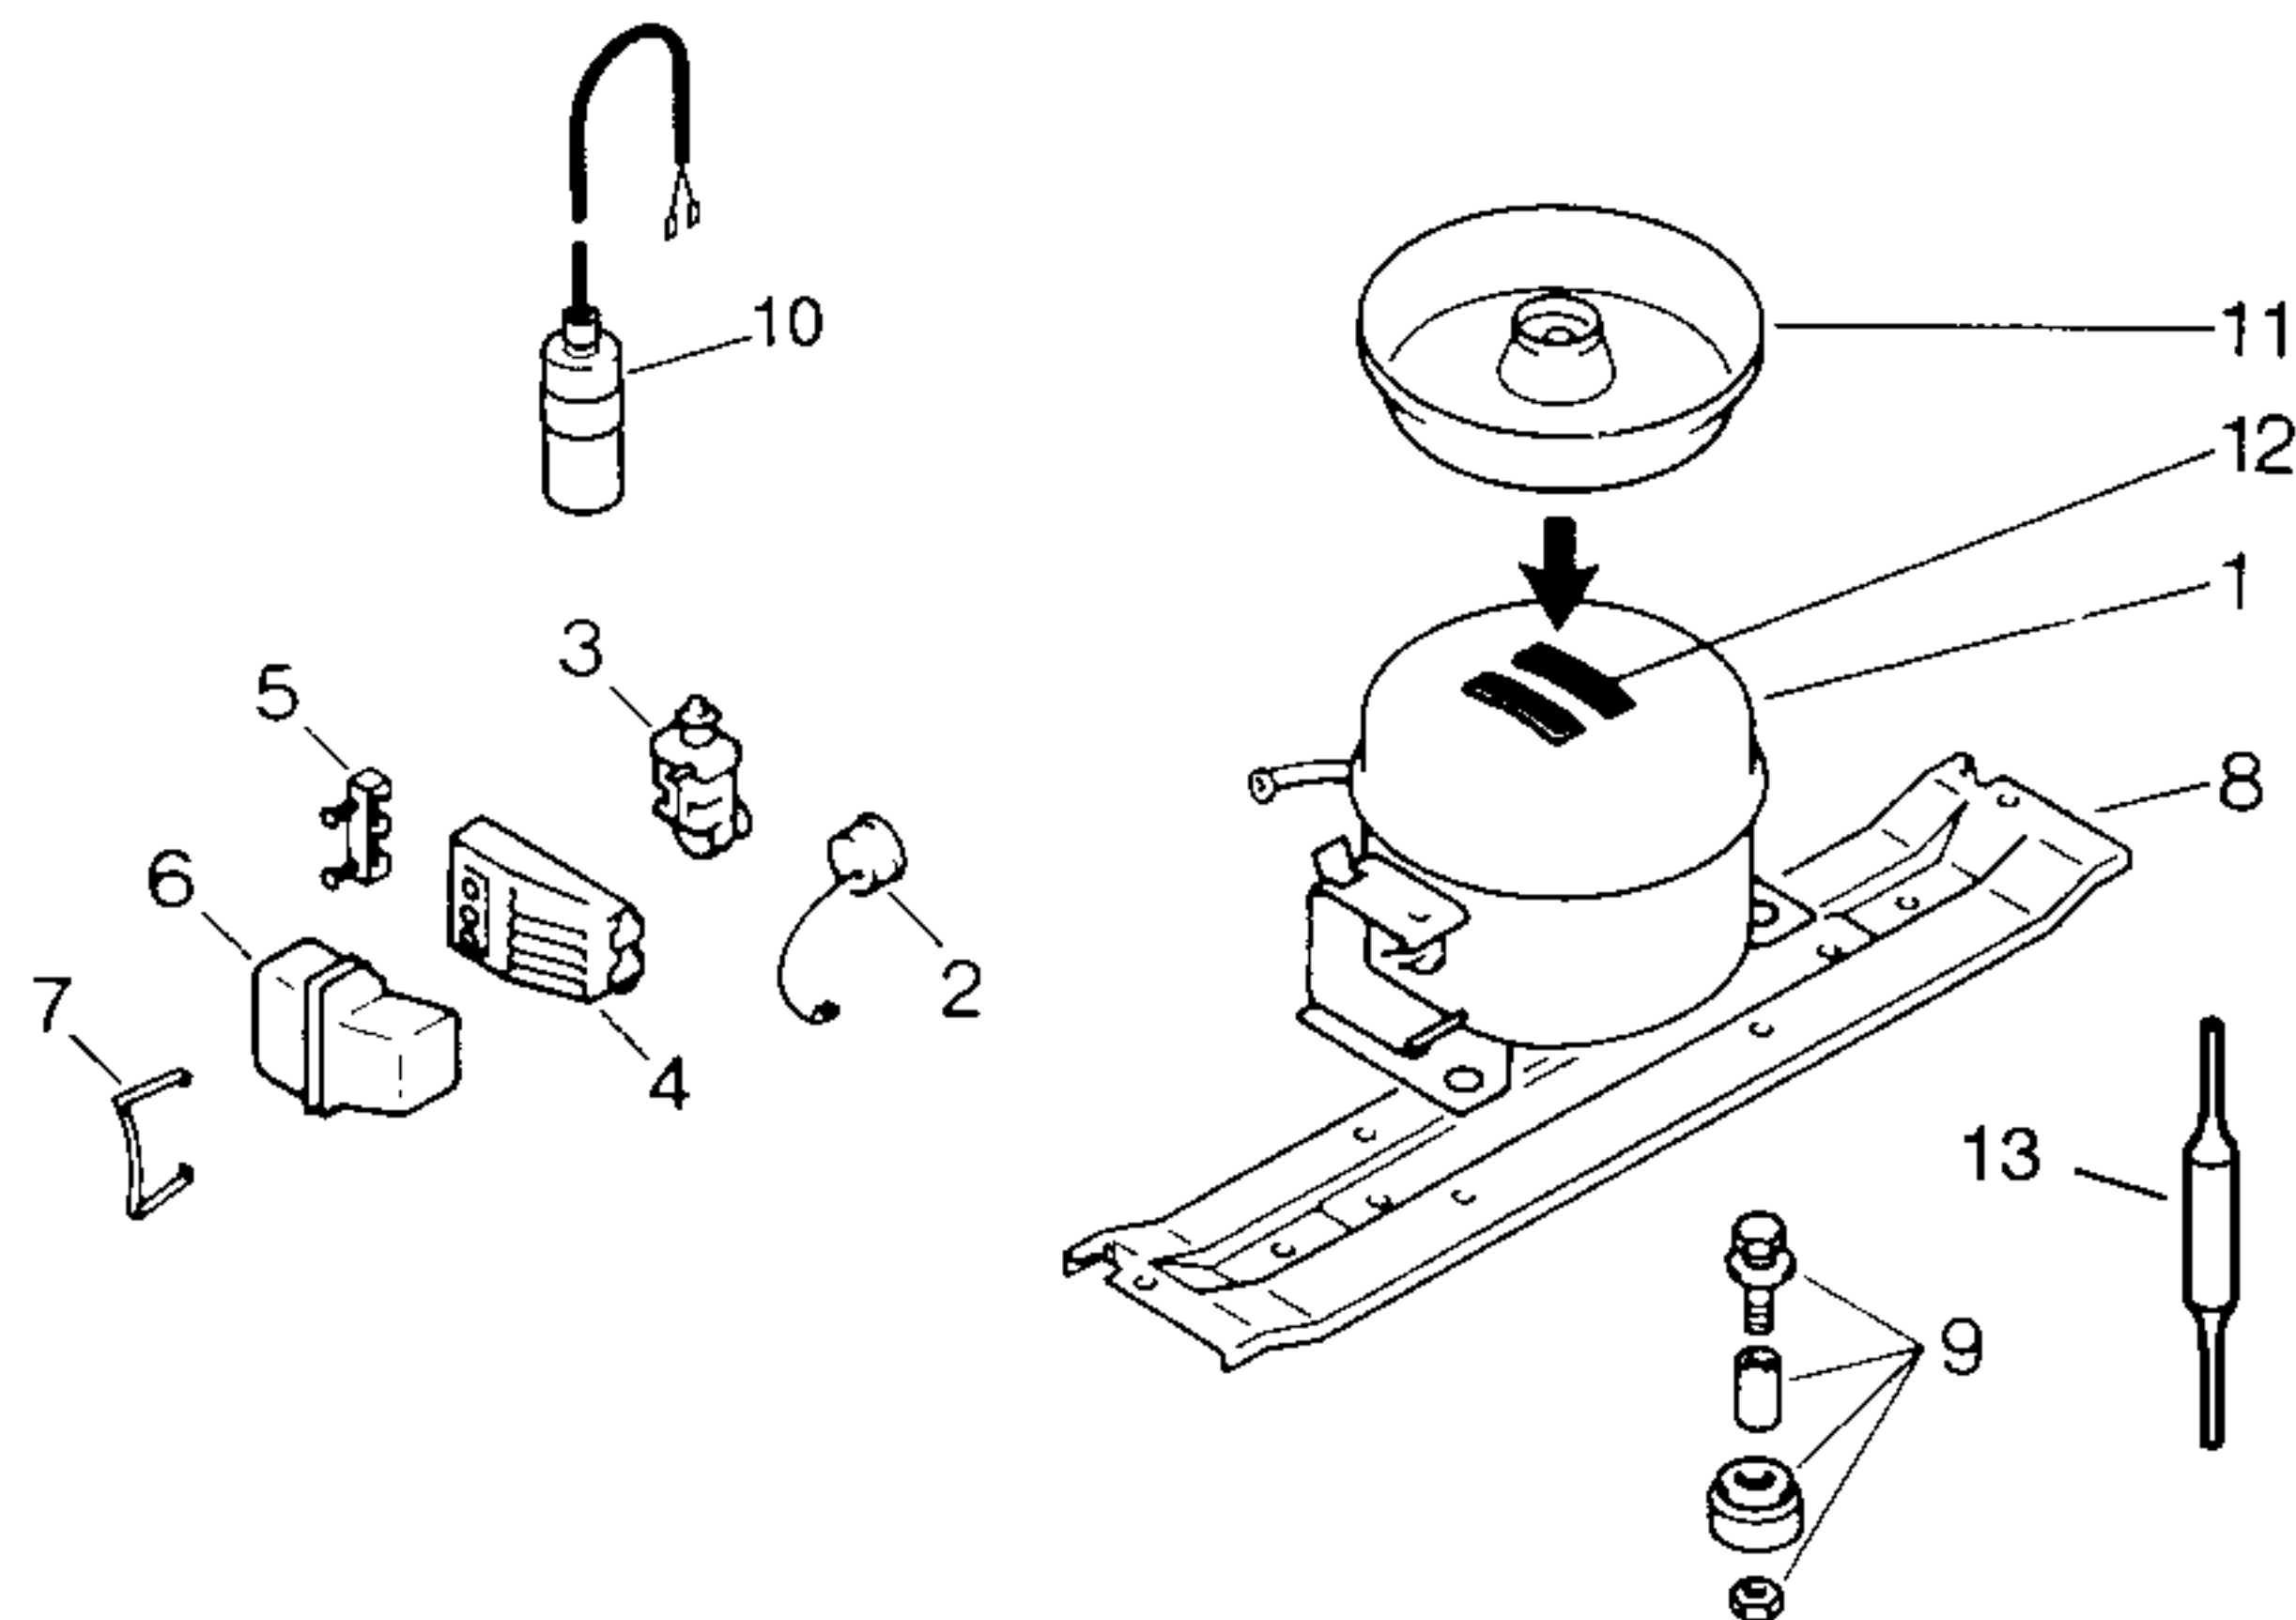

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Matsushita	
Typ/Type		D77C15RAW5	
Förderleistung/Delivery/Débit	l/h	1184	
Anlaufstrom/Starting current/Cour de démarrage	A	9,2	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	11
	Hi/aux	Ω	26,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K 59	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“	°C	+4,5
Valeurs de commutation	„aus“		+4,5
(„abtauen“ od.)	„alarm“		-31,0
Füllmenge/Fill.quantity/Charge	R134a	g	120
Anschlußwert/Conn.load/Puiss. connectée	W	150	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

Pos.			
	Matsushita		
	D77C15RAW5		
1	14 1236		
2			
3	03 2035		
4			
5			
6	05 8458		
7	02 6731		
8	28 1825		
9	05 0166		
10	05 9467		
11	08 5182		
12	05 6008		
13	35 0026		