 
 


Gebrauchsanweisung
58 0707
(D, GB, F, I, NL, DK, N, S,
SF, E, P, GR, TR)
Montageanleitung
58 0241

 
Beistellsatz
26 5627

Side by Side
Beistellsatz zu GS
48 1044
Edelstahlpflegemittel
16 6787

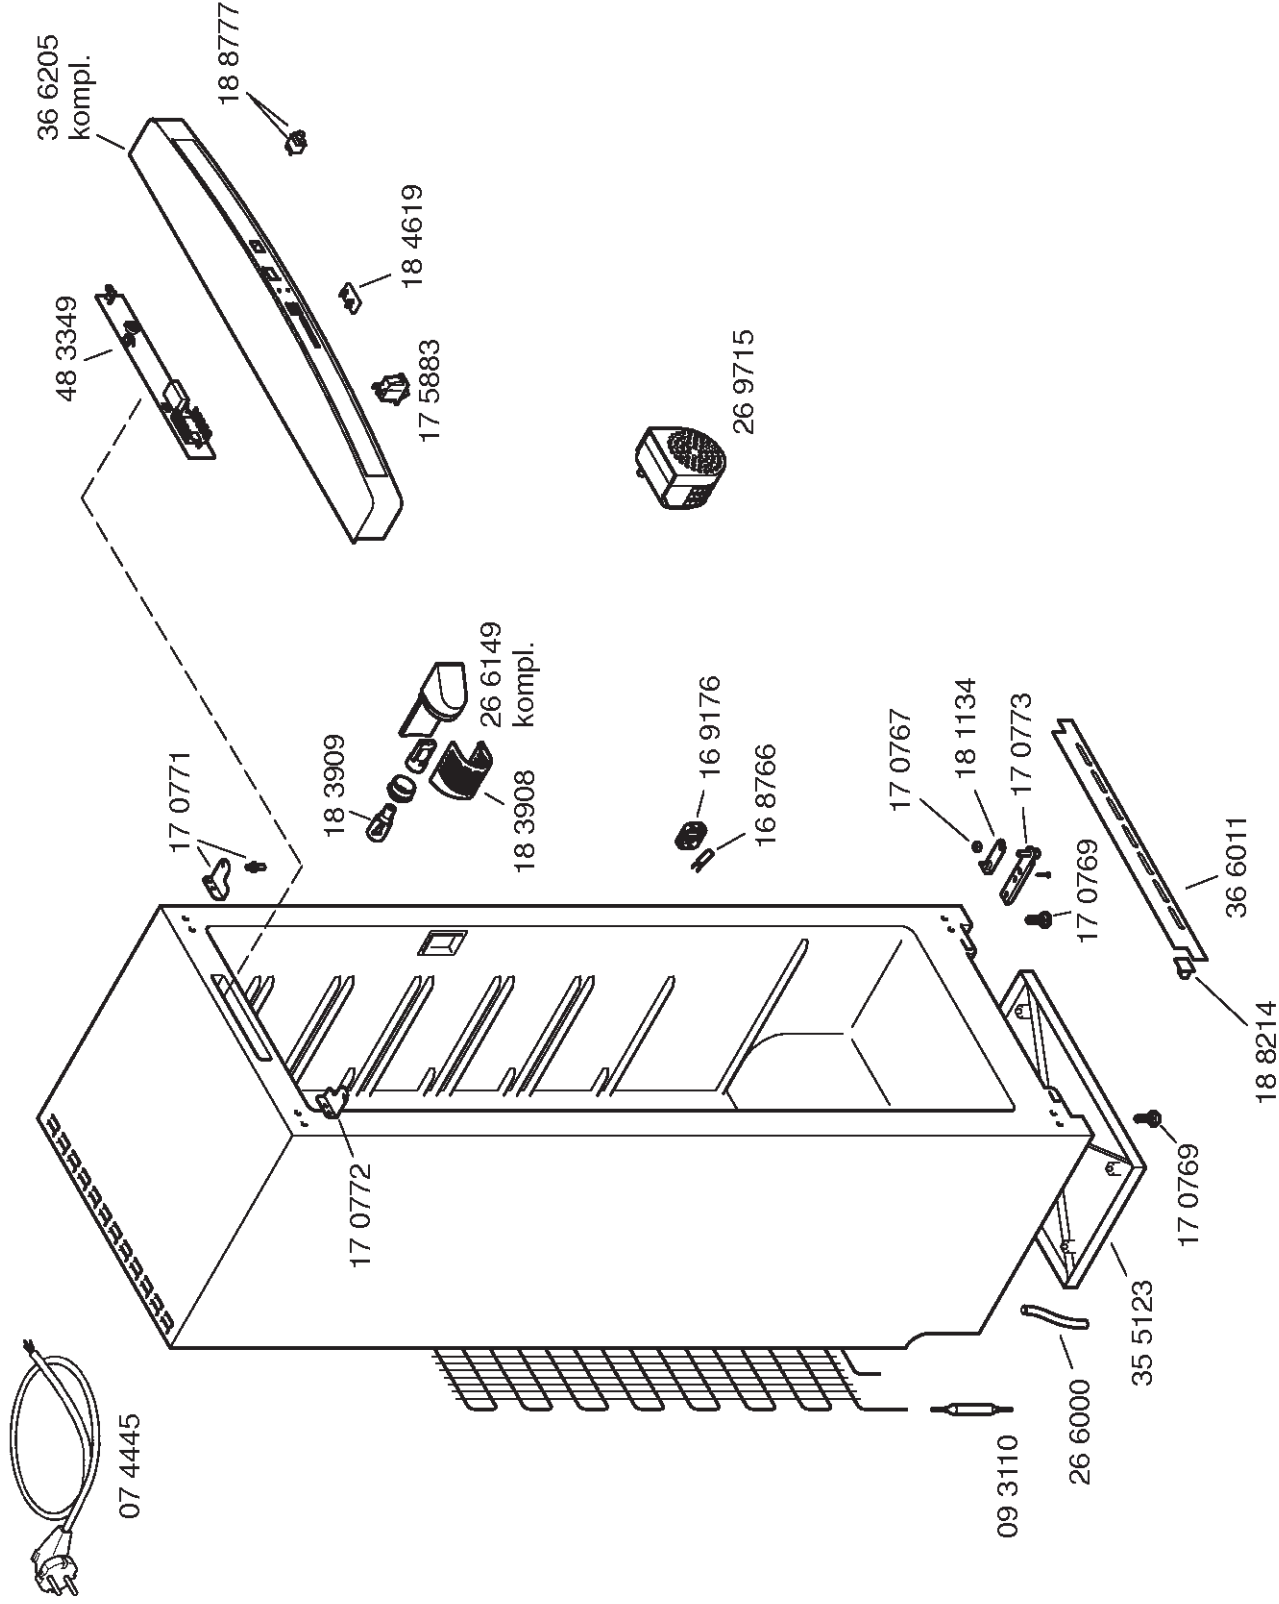

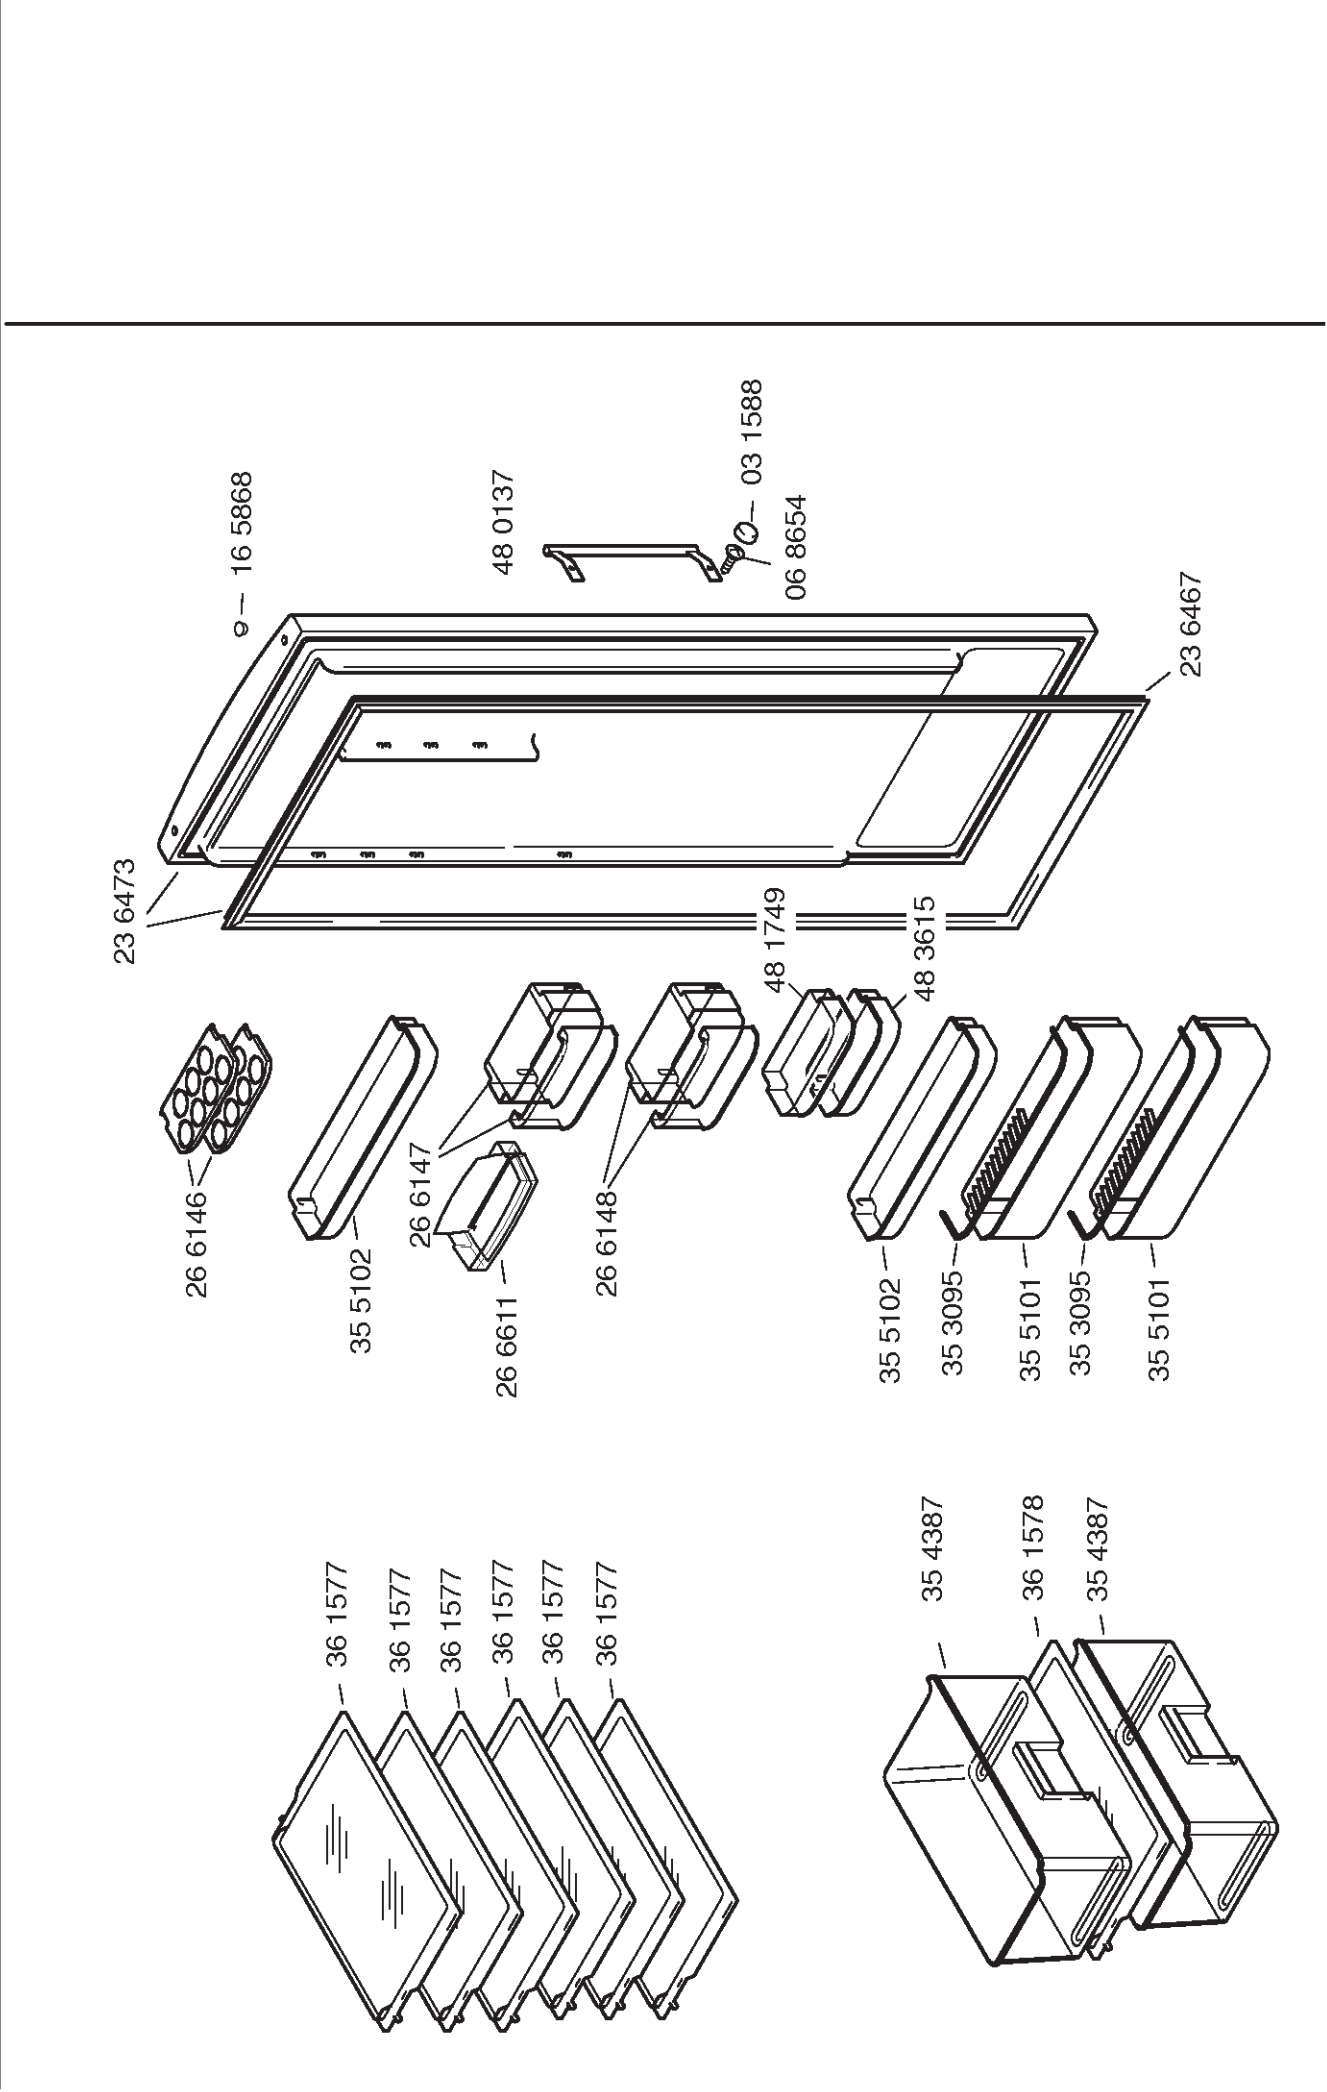

Mat. – Nr. – Konstante
3740

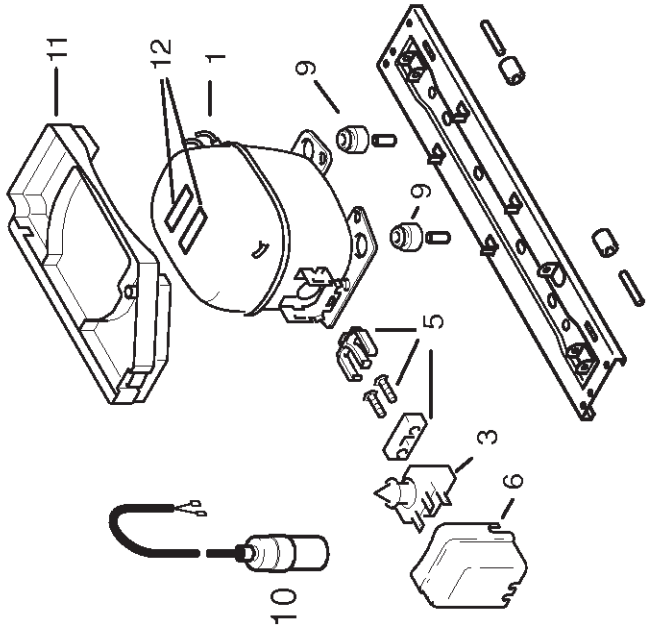

	V01,V02		
Pos.	Goldstar NDA62NAEM		
1	14 2037		
2			
3	17 0743		
4			
5	17 0745		
6	17 0744		
7	16 9319		
8	26 4879		
9	05 0166		
10			
11	26 9660		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance Ha/main/pin Hi/aux	Goldstar NDA69NAEM 1120 l/h A Ω		
Temp.-Regler/Thermostat Typ/Type Regelstellung/Position Schaltwerte/Switching values Valeurs de commutation "warm" "kalt" "alarm"			
Füllmenge/Fill quantity/Charge R600a	*		
Anschlußwert/Conn.load/Puiss. connectée	W	67	
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω		
NTC-Fühler / Sensor	°C +10 +5 0	kΩ 9,95 12,70 16,33	°C -18 -22 -26 kΩ 43,31 54,66 69,42
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V		

* siehe Typenschild