 
 
 


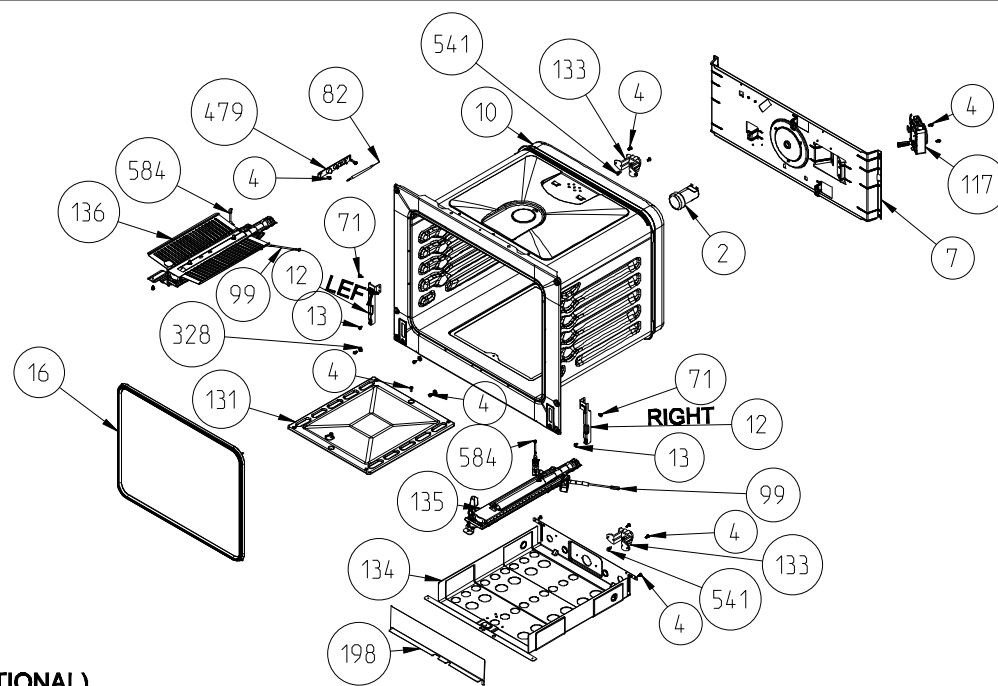


NEW G.FS GAS (OPTIONAL)

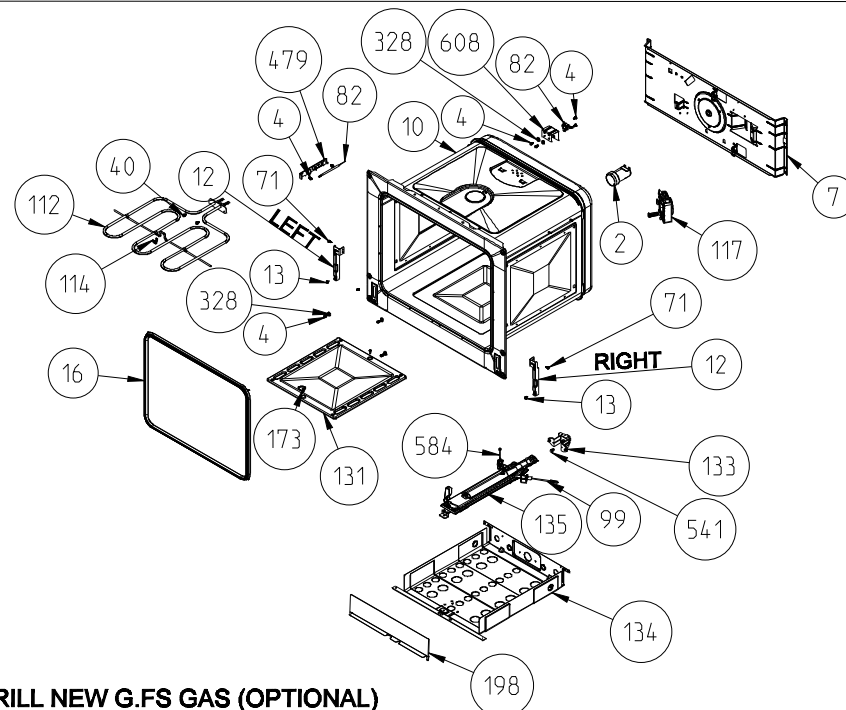


 ONLY FOR ELECTRIC GRILL NEW G.FS GAS (OPTIONAL)

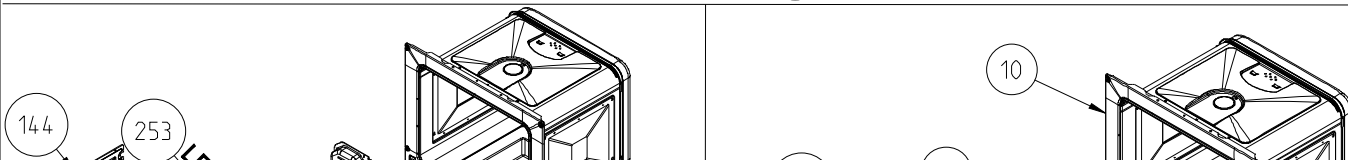


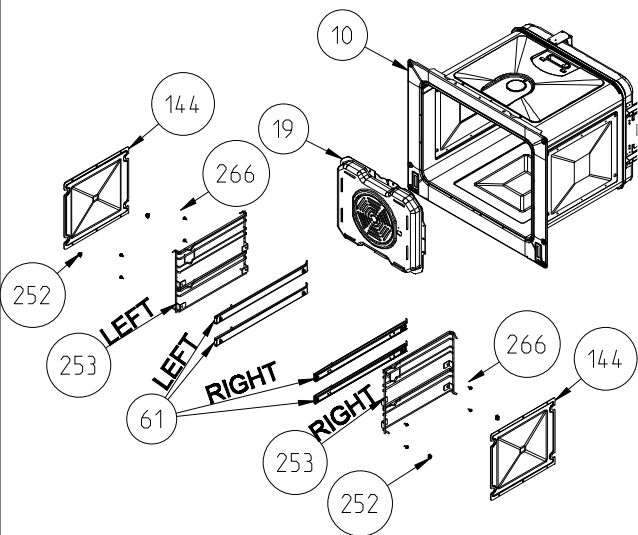

 
**WIRE SHELF CAVITY ASSEMBLY
WITH/ WITHOUT CATALYTIC PANEL
OPTIONAL:DOUBLE TELESCOPIC RAIL (R / L)**

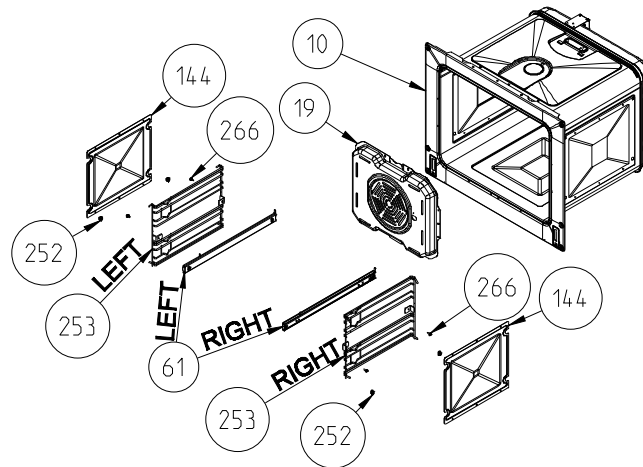


 
**WIRE SHELF CAVITY ASSEMBLY
WITH/ WITHOUT CATALYTIC PANEL
OPTIONAL:TELESCOPIC RAIL (R / L)**

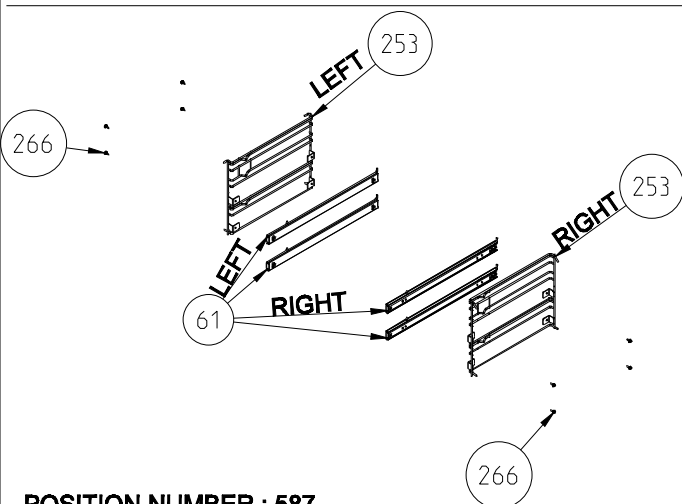


 **POSITION NUMBER : 587
WIRE SHELF (SINGLE EXTENSION)
OPTIONAL:DOUBLE TELESCOPIC RAIL (R / L) GROUP**

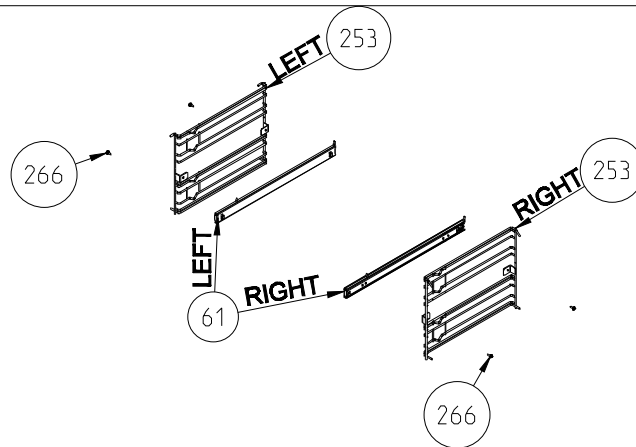


   **POSITION NUMBER :588
WIRE SHELF (SINGLE EXTENSION)
OPTIONAL: SINGLE TELESCOPIC RAIL (R / L) GROUP**

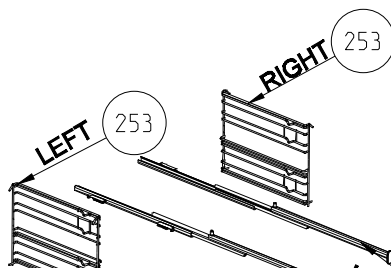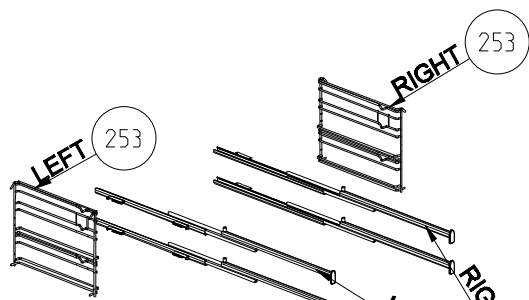


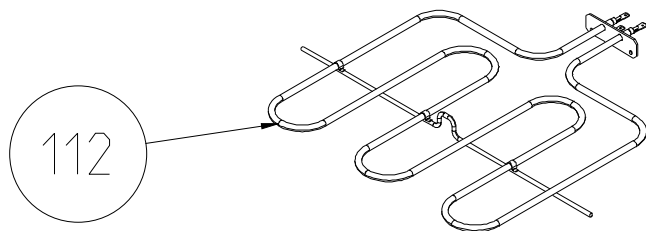

 
TOP AND GRILL HEATING ELEMENT
(OPTIONAL ONLY FOR
ELECTRIC GRILL NEW G.FS GAS)

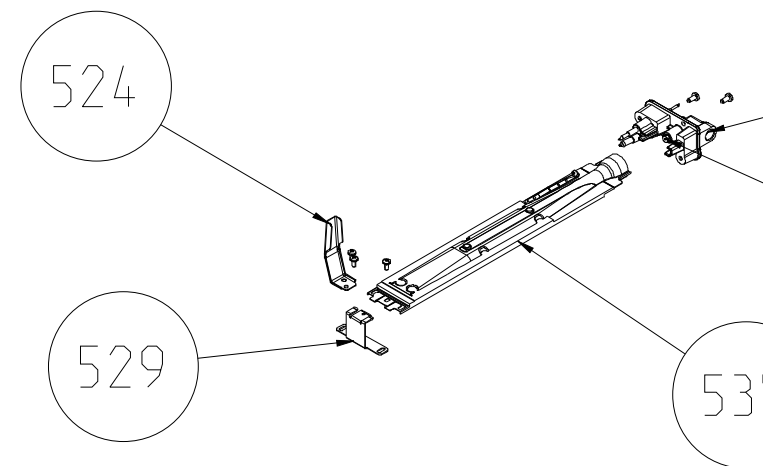


OVEN BURNER
(ONLY FOR NEW G.FS GAS)

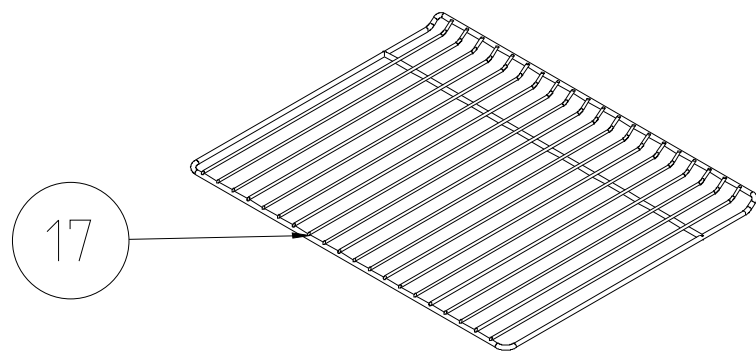 

LOCKED

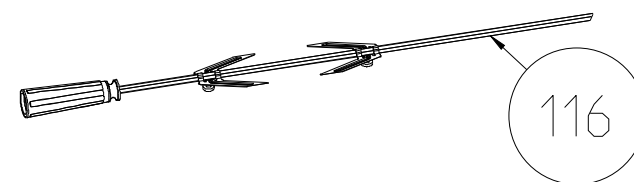 

TURNSPIT HANDLE / SKEWER

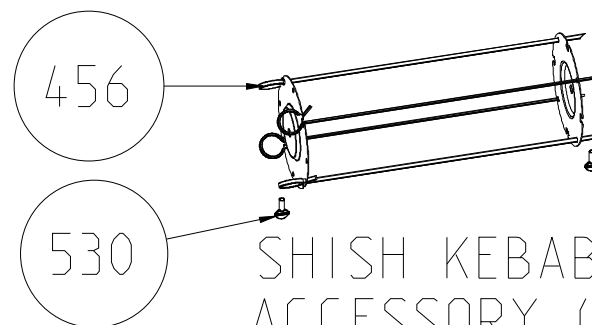 


SHISH KEBAB
ACCESSORY (OPTIONAL)

CAVITY ASSEMBLY SPARE PART LIST	
POSITION NUMBER	PART NAME
2	OVEN LIGHT
4	SCREW (3.9*9.5)
7	REAR INSULATION COVER
10	CAVITY
12	HINGE COUNTERPART (LEFT /RIGHT)
13	SCREW (M4*8)
14	BOTTOM INSULATION COVER
15	TRAY (DEEP / SHALLOW)
16	OVEN DOOR GASKET
17	GRID (LOCKED ,W.TELESCOPIC RAIL)
18	THERMOSTAT BULB BRACKET
19	FAN COVER
40	SCREW (KNURLED,3.5*9.5)
61	TELESCOPIC RAIL (LEFT / RIGHT)
71	SCREW (KNURLED,3.9*6.5)
82	CAPILLARY THERMOSTAT
99	SPARK PLUG WITH CABLE (OVEN /GRILL BURNER)
106	DEEP TRAY GRID
112	TOP AND GRILL HEATING ELEMENT
114	TOP AND GRILL HEATING ELEMENT BULB BRACKET
115	TURNSPIT GRILL
116	TURNSPIT SKEWER
117	TURNSPIT MOTOR
131	BURNER COVER
133	OVEN INJECTOR HOLDER
134	BURNER BOX
135	OVEN BURNER
136	GRILL BURNER
143	TURNSPIT HOUSE (ONLY CAN BE USED WITH (DEEP /SHALLOW)TRAY
144	CATALYTIC PANEL WITH WIRE SHELF (ENAMELLED)
	SHELF COVER (RIGHT/LEFT,CATALYTIC ENAMELLED)
173	SCREW (3.9*13)
174	TRAY GRID



CAVITY ASSEMBLY PARTS	
POSITION NUMBER	PART NAME
266	SCREW (M4*4T,STAINLESS)
328	WASHER (ENAMELLED,BLACK)
456	SHISH KEBAB ACCESSORY
479	THERMOSTAT BULB HOLDER (GAS)
524	BURNER DEFLECTOR
529	BURNER ASSEMBLY BRACKET
530	EYE SCREW (M5*12,AISI304)
537	OVEN BURNER
538	INJECTOR HOLDER (OVEN BURNER,55,NG)
540	TURNSPIT HANDLE
541	INJECTOR (OVEN/GRILL)
584	THERMOCOUPLE (OVEN/GRILL)
585	STRING SHELF GROUP (FULL EXTENSION)
586	STRING SHELF GROUP (FULL EXTENSION)
587	STRING SHELF GROUP (SINGLE EXTENSION)
588	STRING SHELF GROUP (SINGLE EXTENSION)
608	LIMITER BRACKET WITH SCREWING
The exploded views given in this document are generic.They include all possible versions of the product. For specific part codes,please refer to the bom list of regarding model.	

OVEN DOOR ASSEMBLY EXPLODED VIEW (OPTIONAL)

 POSITION
NUMBER :377
(DOOR)

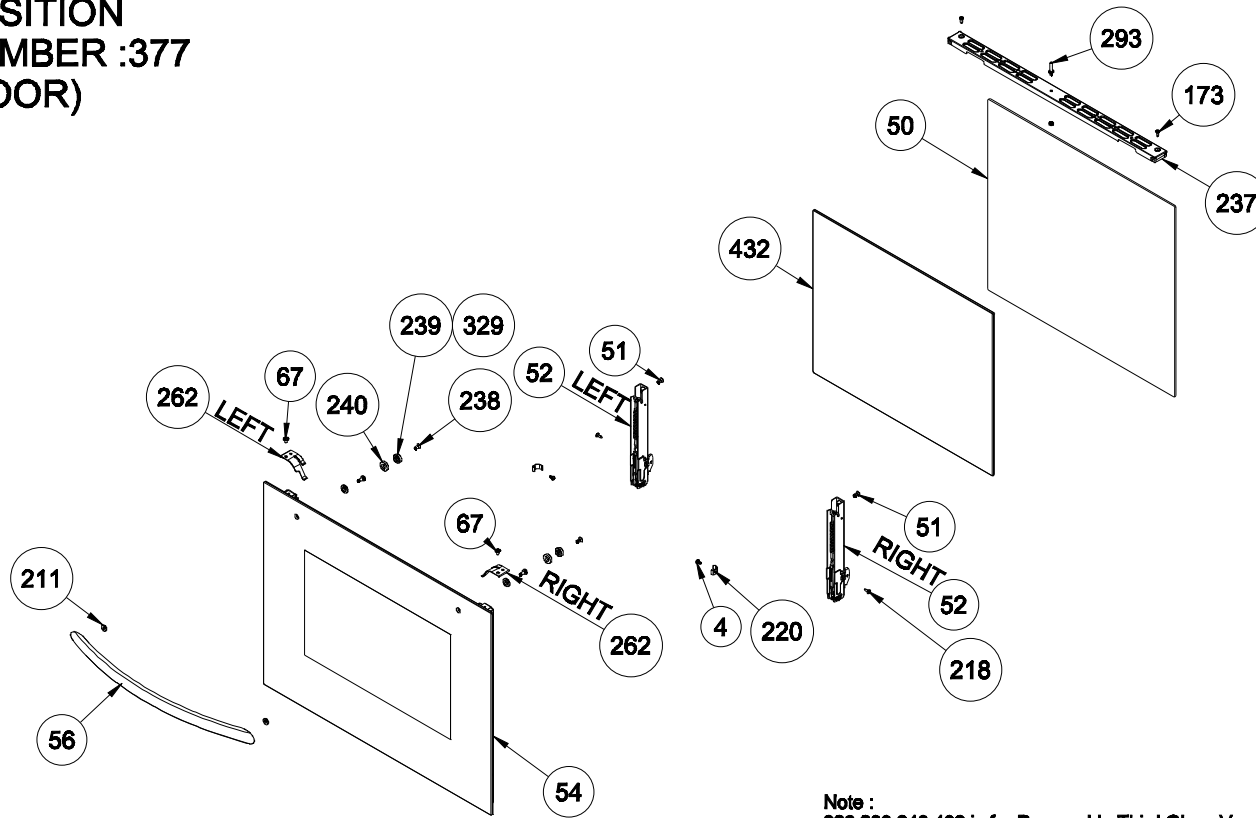


  Note :
220,239,240,432 is for Removable Third Glass Versions
262,67 is for Removable Glass Versions

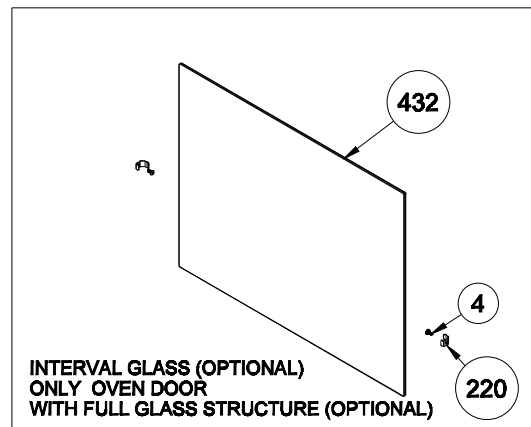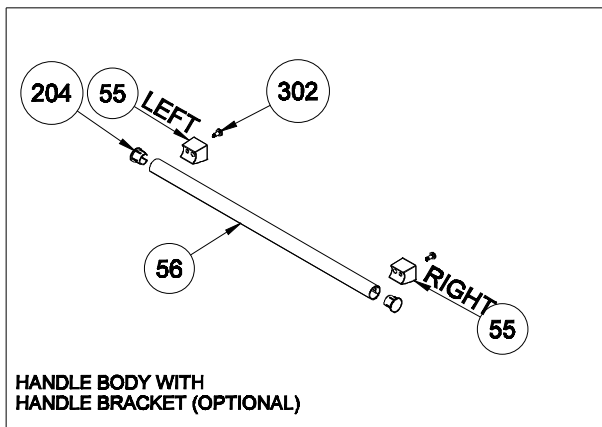


SOLID TYPE OVEN DOOR ASSEMBLY EXPLODED VIEW
(FRONT VIEW OF GLASS)
(OPTIONAL)

 POSITION
NUMBER :376
(DOOR)

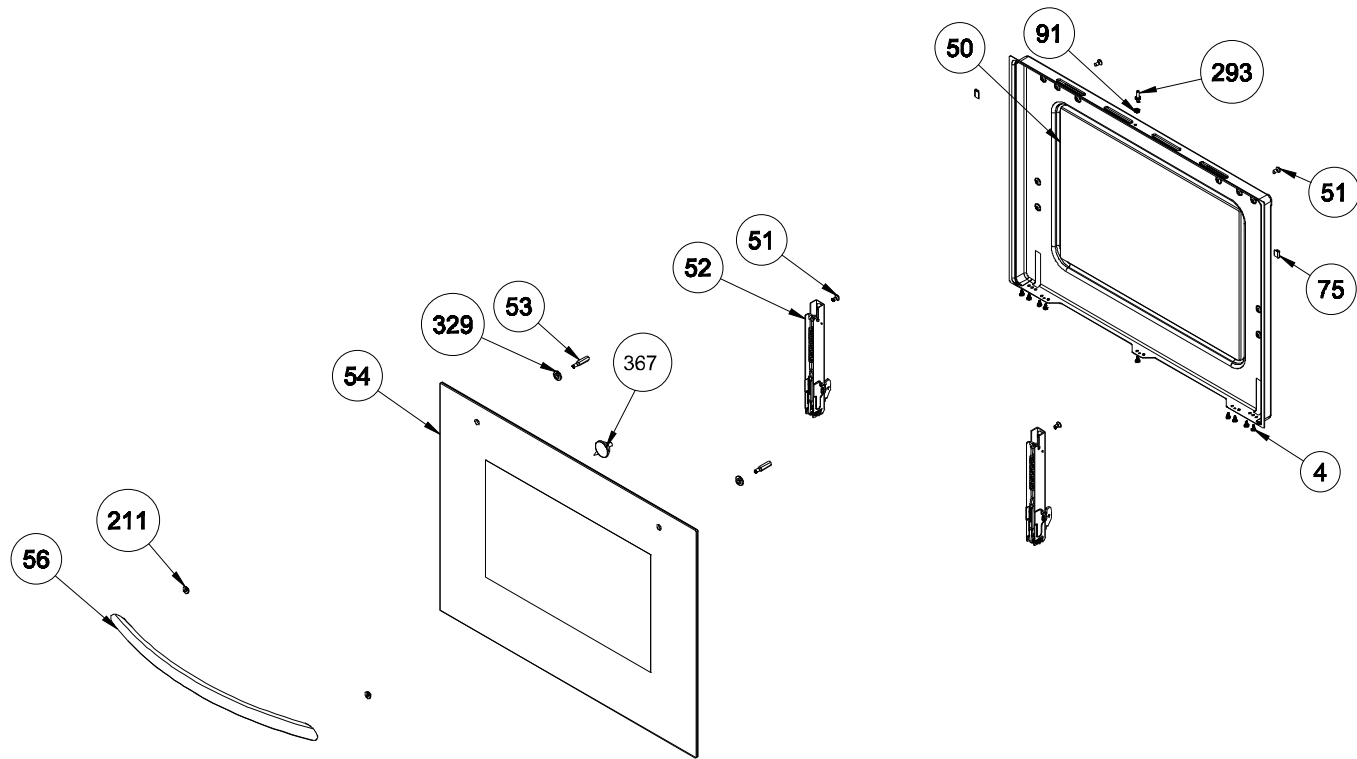


SOLID TYPE OVEN DOOR ASSEMBLY EXPLODED VIEW (FRONT VIEW OF METAL WITH GLASS) (OPTIONAL)

 POSITION
NUMBER :395
(DOOR)

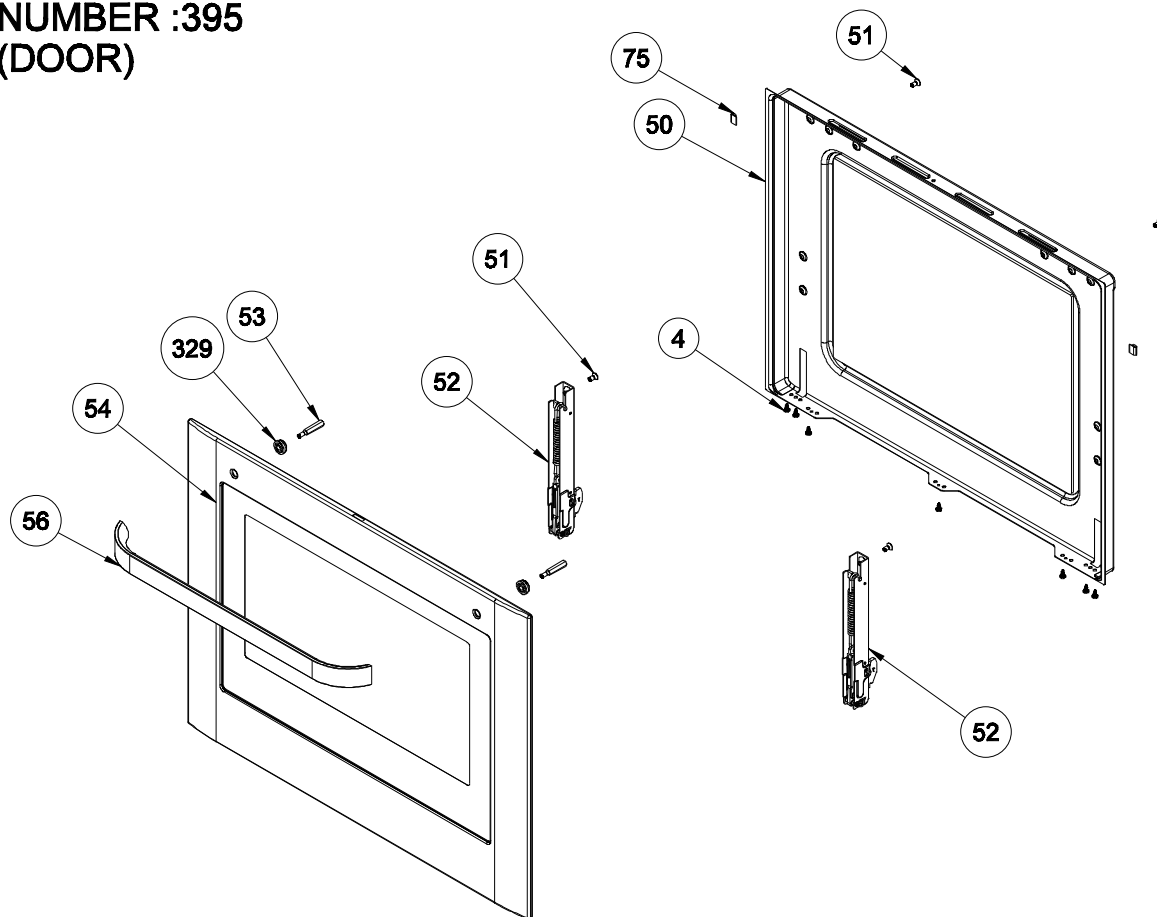


(OPTIONAL)

 

TYPE 1

 HANDLE ASSEMBLY GROUP
POSITION NUMBER : 49
(OPTIONAL)

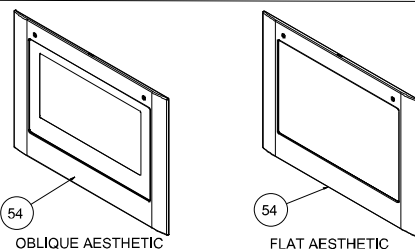


OBLIQUE AESTHETIC

FLAT AESTHETIC


SOLID TYPE - POSITION NO 54 (OPTIONAL)


(OPTIONAL)

DOOR ASSEMBLY SPARE PART LIST	
POSITION NUMBER	PART NAME
4	SCREW (KNURLED, 3.9*9.5)
49	HANDLE ASSEMBLY GROUP
50	INNER GLASS ASSEMBLY
51	SCREW (COUNTERSUNK-HEAD, M5*10, BLACK)
52	OVEN DOOR HINGE
54	OUTER GLASS ASSEMBLY
55	HANDLE BRACKET (LEFT-RIGHT)
56	HANDLE BODY
67	SCREW (3.9*9.5, SLIM HEAD)
75	OVEN DOOR SILICONE STOPER
91	NUT (M4)
173	SCREW (COUNTERSUNK-HEAD, 3.9*13)
204	HANDLE TAP (RIGHT-LEFT)
211	HANDLE ASSEMBLY GASKET
218	SCREW (COUNTERSUNK-HEAD,3.9*7.5,BLUNT,BLK)
220	INTERVAL FRONT PANEL SPRING
237	DOUBLE GLAZED OVN DOOR MTLTRIM(NEWG66)
238	SCREW (COUNTERSUNK-HEAD, M5*18, BLACK)
239	HANDLE FIXING BUSH
240	SILICONE WASHER
262	REMOVABLE INNER GLASS SPRING (LEFT / RIGHT)
293	DOOR LOCK PIN
302	SCREW (COUNTERSUNK-HEAD,3.9*7.5,BLUNT,BLK)
329	GRADUAL WASHER
367	THERMOMETER GR(WITH POINTER,150C / GP)
376	SOLID TYPE OVEN DOOR ASSEMBLY(FRONT VIEW OF GLASS)
377	OVEN DOOR ASSEMBLY GROUP
395	SOLID TYPE OVEN DOOR ASSEMBLY (FRONT VIEW OF METAL WITH GLASS)

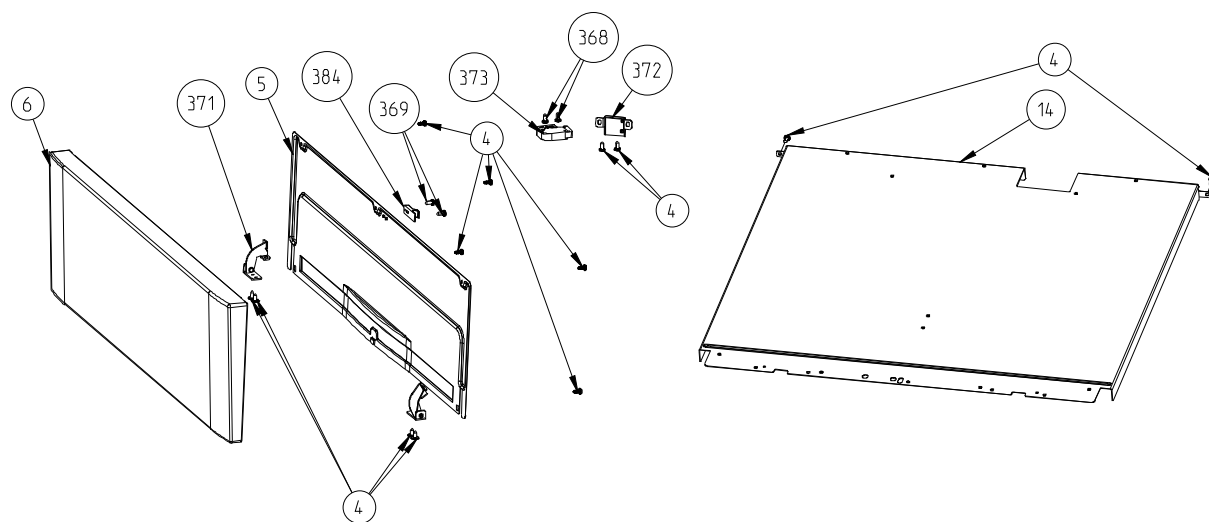 


  PUSH PULL FLAP DRAWER ASSEMBLY (OPTIONAL)

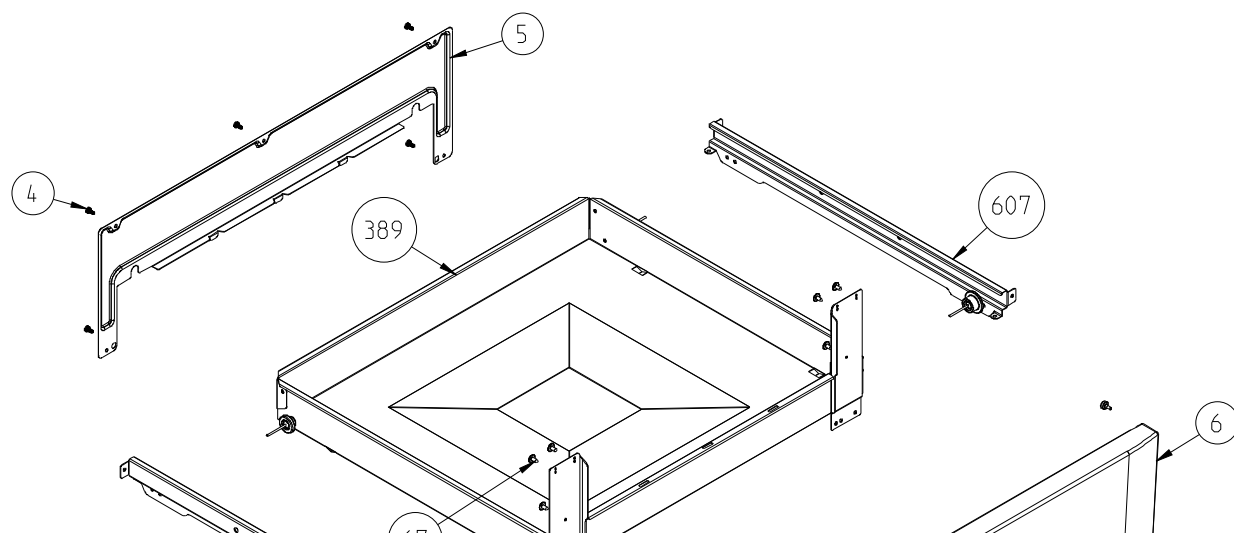

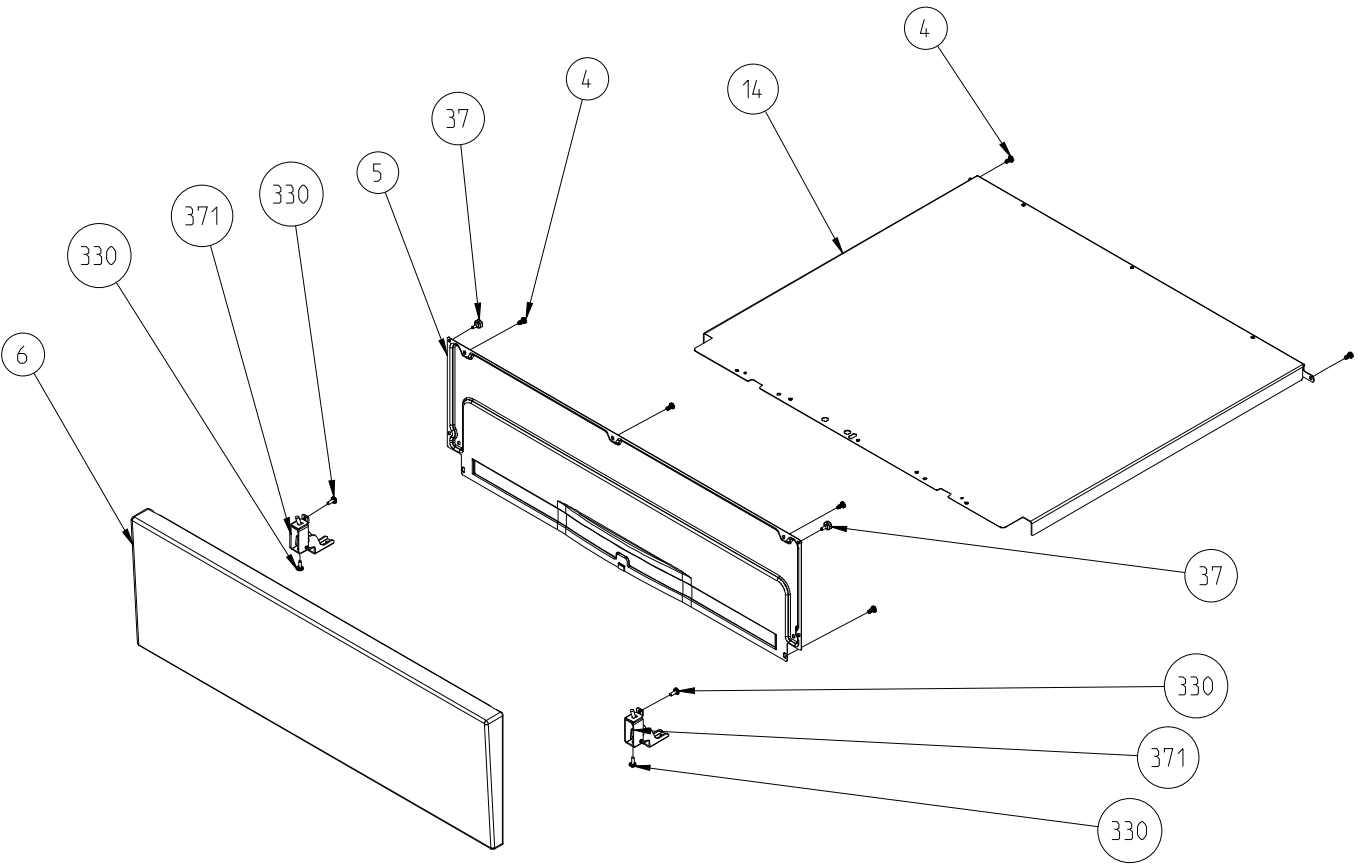





YNTB FLAP DRAWER ASSEMBLY

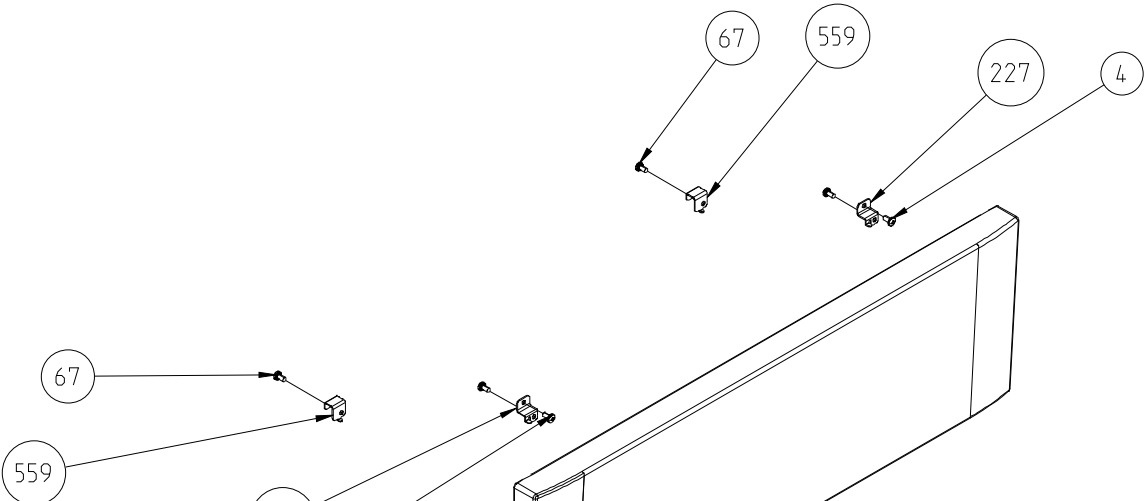 





POSITION NUMBER	DESCRIPTION
3	WARMER DRAWER RAIL WHEEL
4	SCREW (CIRCULAR-HEAD, 3.9*9.5, BLACK)
5	WARMER DRAWER INNER COVER
6	WARMER DRAWER PANEL (60*60,3D)
14	BOTTOM INSULATION COVER (60*60)
37	DRAWER PANEL STOPPER
67	CHASSIS BRACKET CONTACT SCREW
227	FIXED DRAWER PANEL TOP BRACKET
330	SCREW (KNURLED,M4*4)
368	SCREW (KNURLED, 2.9*18)
369	SCREW (KNURLED, 2.9*8,BLACK)
371	FLAP DRAWER (HINGE / LEFT)
372	FLAP DRAWER LOCKING BRACKET
373	FLAP DRAWER LOCKING (MINI LATCH)
384	FLAP DRAWER LOCKING COUNTERPART(MINI LATCH)
389	DRAWER BOX
559	FIXED DRAWER PANEL BOTTOM BRACKET(NEW G)
607	4WG DRAWER RAIL GROUP
"The exploded views given in this document are generic.They include all possible versions of the product. For specific part codes, please refer to the bom list of regarding model."	

FREE STANDING COOKTOP VERSIONS

    4 GAS COOKTOP (OPTIONAL)

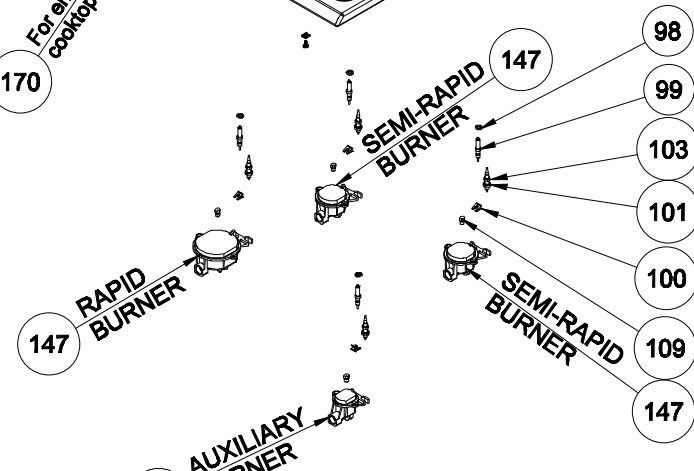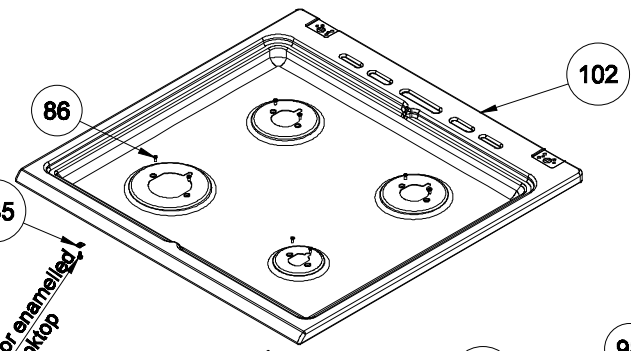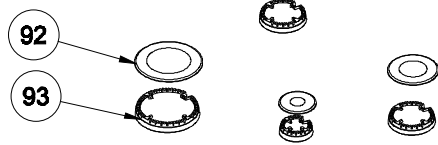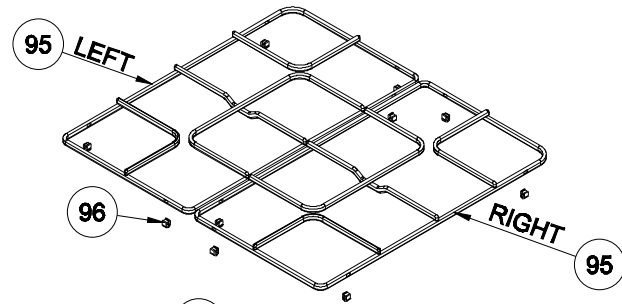


3 GAS 1 WOK COOKTOP (OPTIONAL)

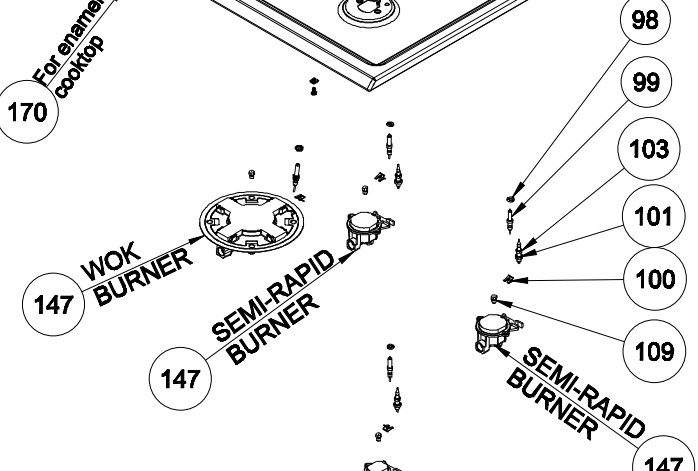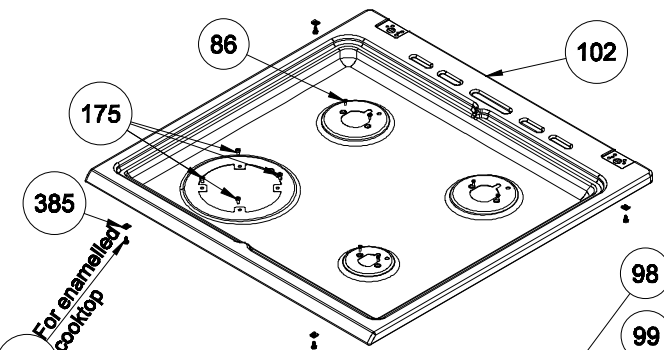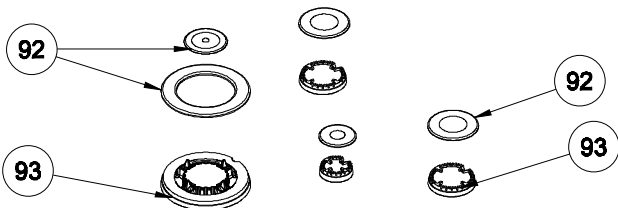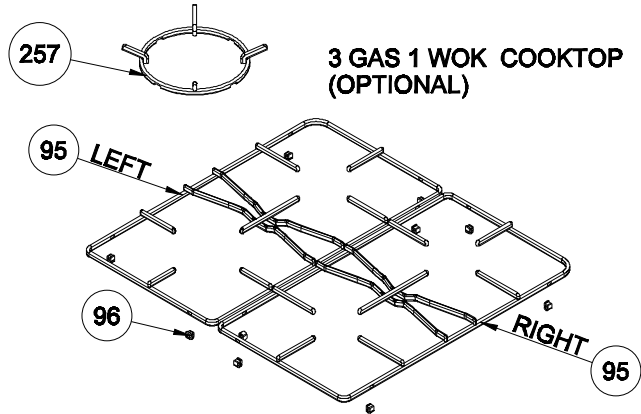    


FREE STANDING COOKTOP VERSIONS

 3 GAS 1 ELECTRIC COOKTOP (OPTIONAL)

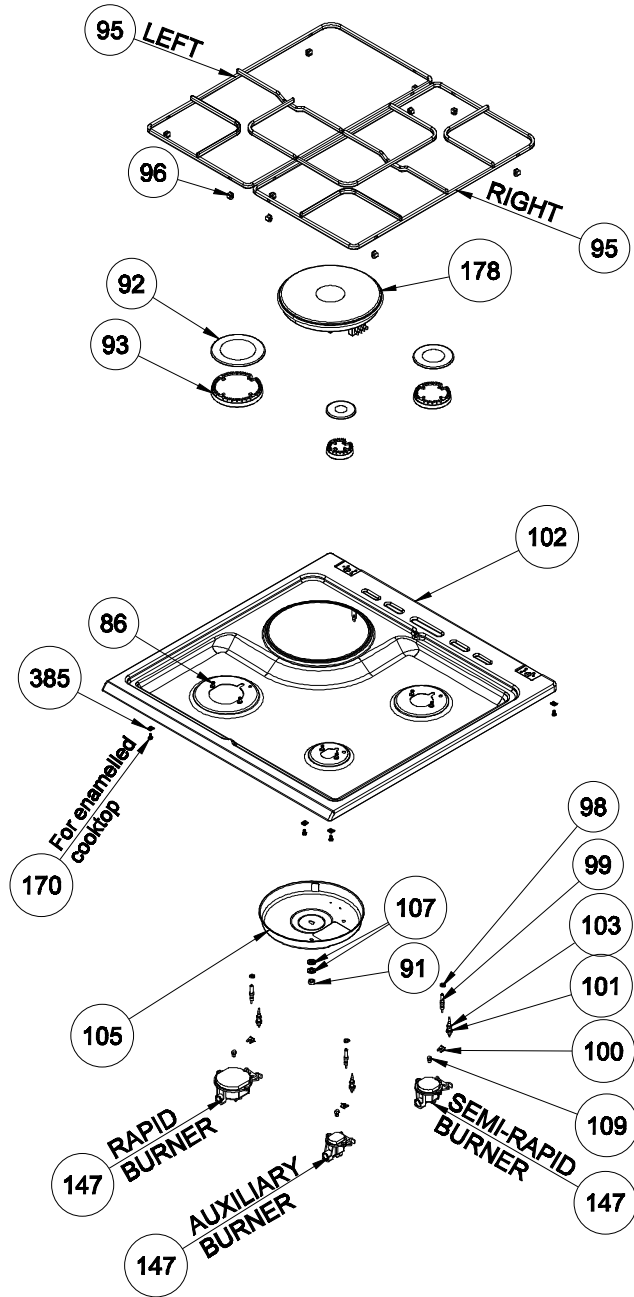


3 GAS COOKTOP (OPTIONAL)




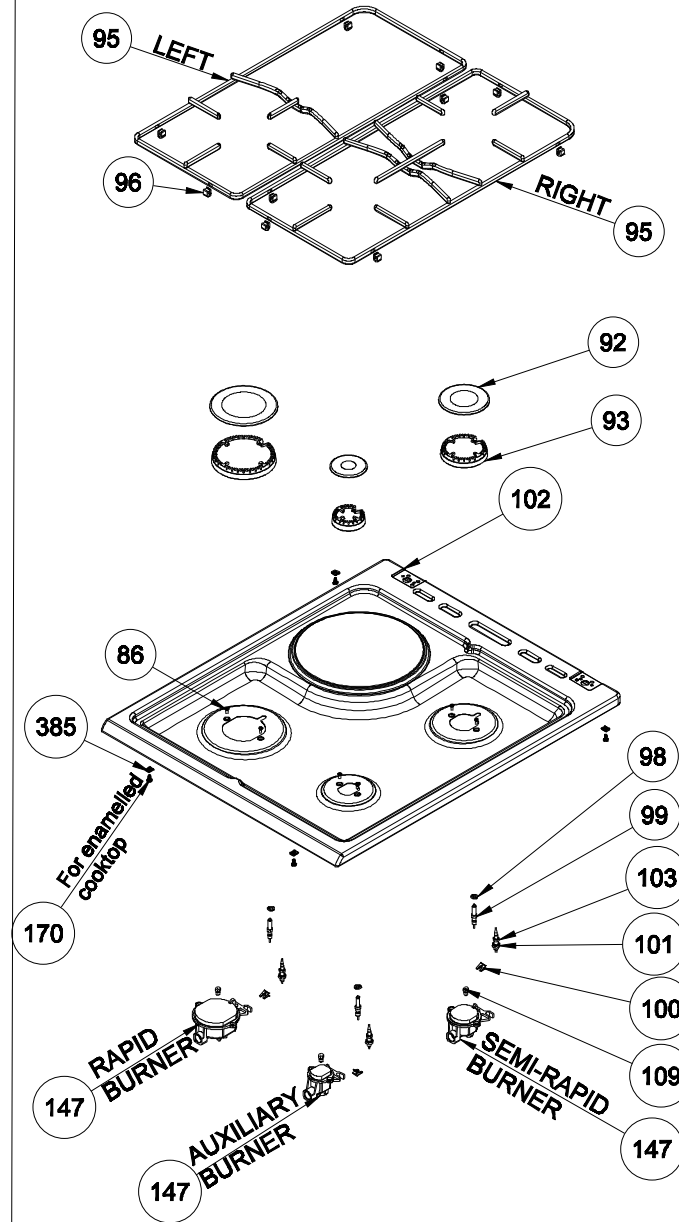 


FREE STANDING COOKTOP VERSIONS

 
2 GAS 2 ELECTRIC COOKTOP
(OPTIONAL)

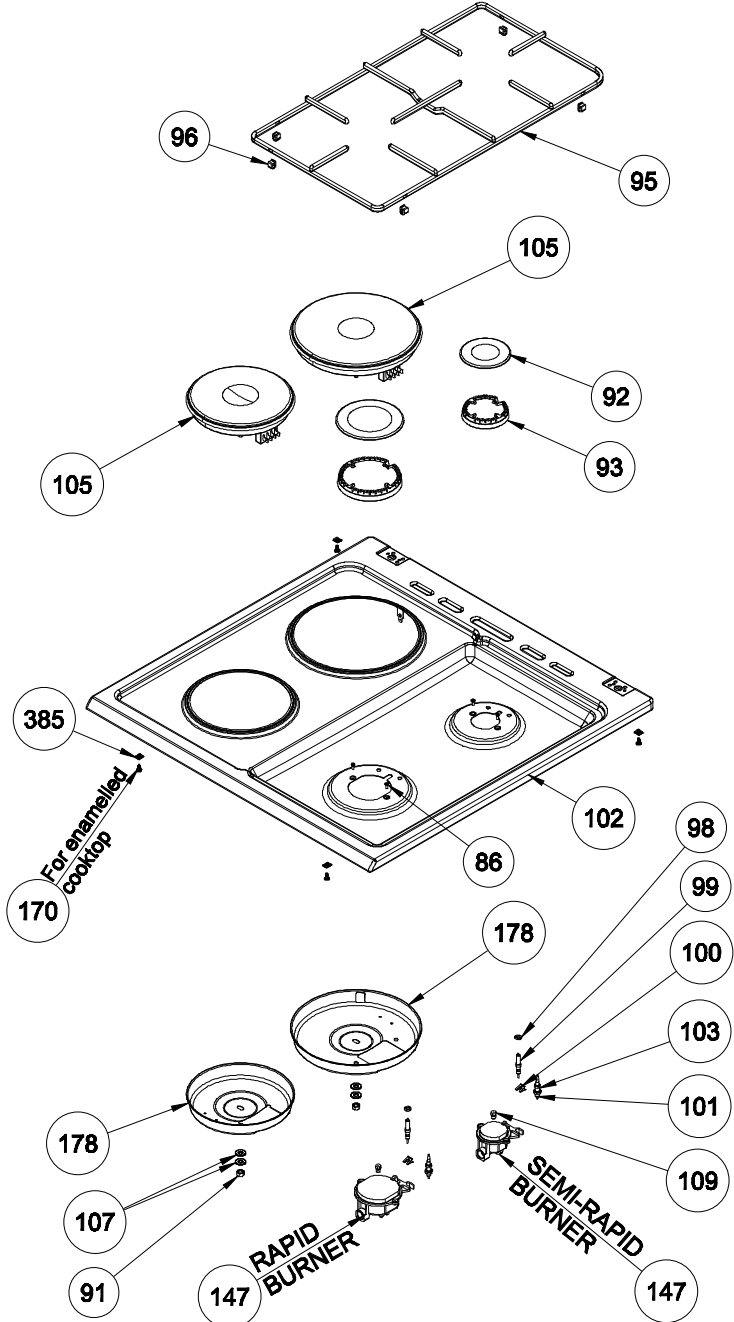


FREE STANDING COOKTOP ASSEMBLY SPARE PART LIST	
POSITION NUMBER	PART NAME
86	SCREW (COUNTERSUNK-HEAD, M3*8, LENTIL HEAD)
91	NUT
92	BURNER CAP (RAPID / AUXILIARY /SEMI-RAPID / WOK BURNER)
93	BURNER HEAD (RAPID / AUXILIARY /SEMI-RAPID /WOK BURNER)
95	PAN SUPPORT (RIGHT / LEFT)
96	PAN SUPPORT BUMPER
98	SPARK PLUG GASKET
99	SPARK PLUG WITHCABLE
100	SPARK PLUG SEGMENT
101	THERMOCOUPLE (RAPID /AUXILIARY/SEMI-RAPID/WOK BURNER)
102	COOKTOP
103	THERMOCOUPLE FIXING NUT
105	HOTPLATE
107	WASHER
109	INJECTOR (RAPID /AUXILIARY/SEMI-RAPID/WOK BURNER)
147	BURNER BODY (RAPID /AUXILIARY/SEMI-RAPID/WOK BURNER)
170	ENAMELLED COOKTOP FIXING CLIP SCREW
175	WOK BURNER CONTACT SCREW
178	HOTPLATE HOUSING
257	WOK BURNER SUPPORT
385	ENAMELLED COOKTOP FIXING CLIP
The exploded viewa given in this document.They include all possible versions of the product. For specific part codes please refer to the born list of regarding model.	

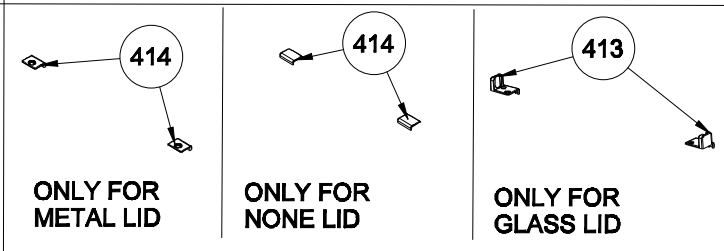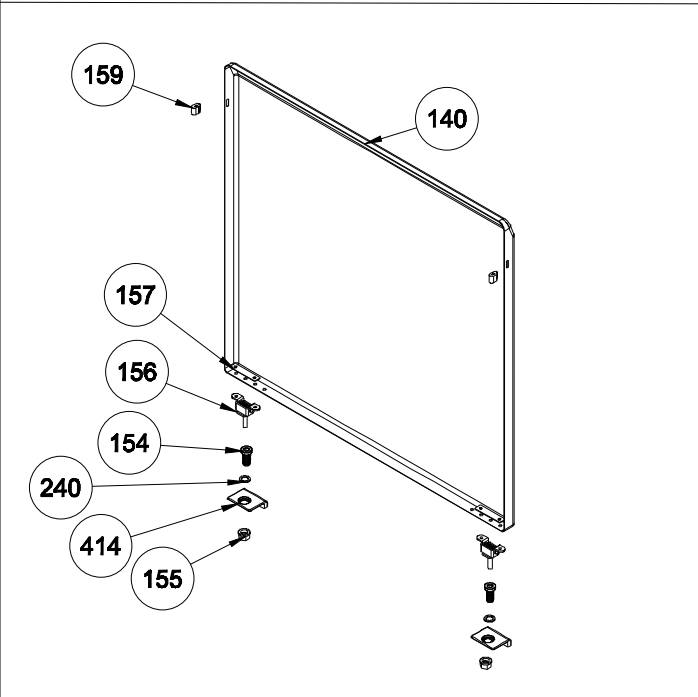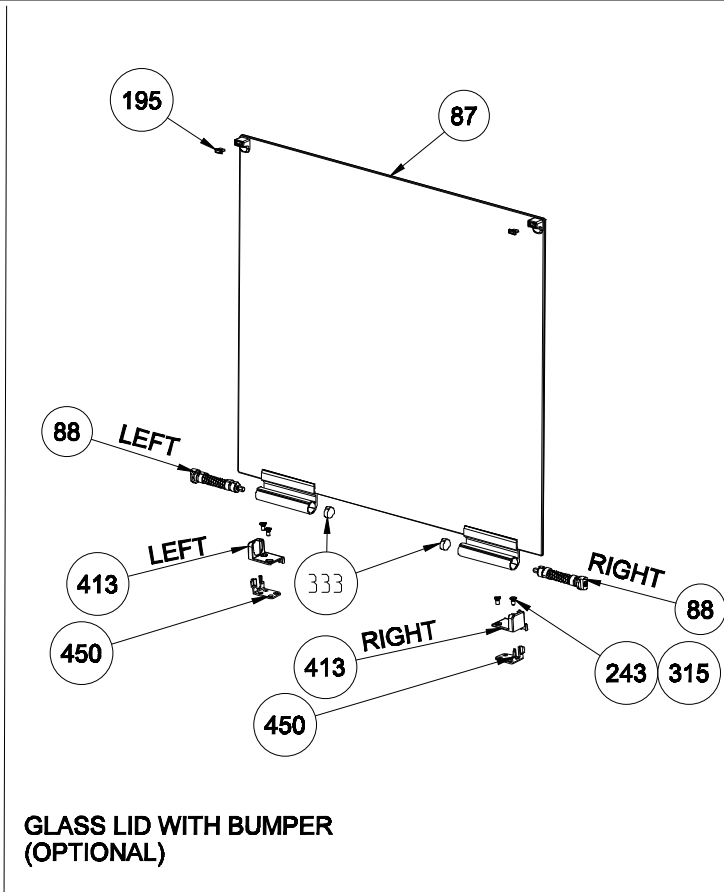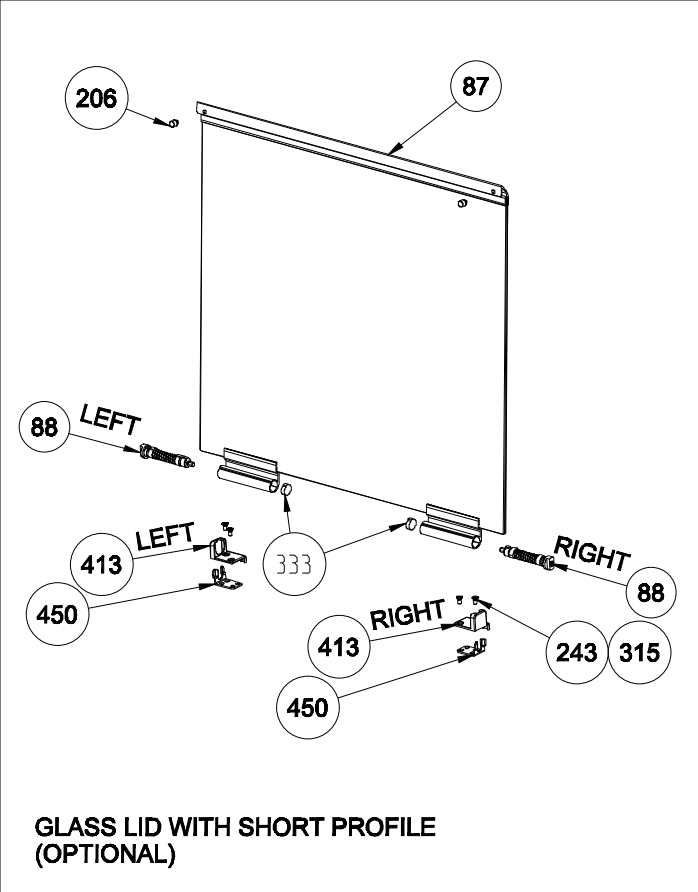    


LID ASSEMBLY SPARE PART LIST	
POSITION NUMBER	PART NAME
87	GLASS LID ASSEMBLY GROUP
88	GLASS LID HINGE (LEFT/RIGHT)
140	METAL LID
153	METAL LID ASSEMBLY
154	METAL LID HINGE TOP PART
155	METAL LID HINGE BOTTOM PART
156	METAL LID HINGE
157	METAL LID HINGE TOP COUNTERPART
159	METAL LID BUMPER



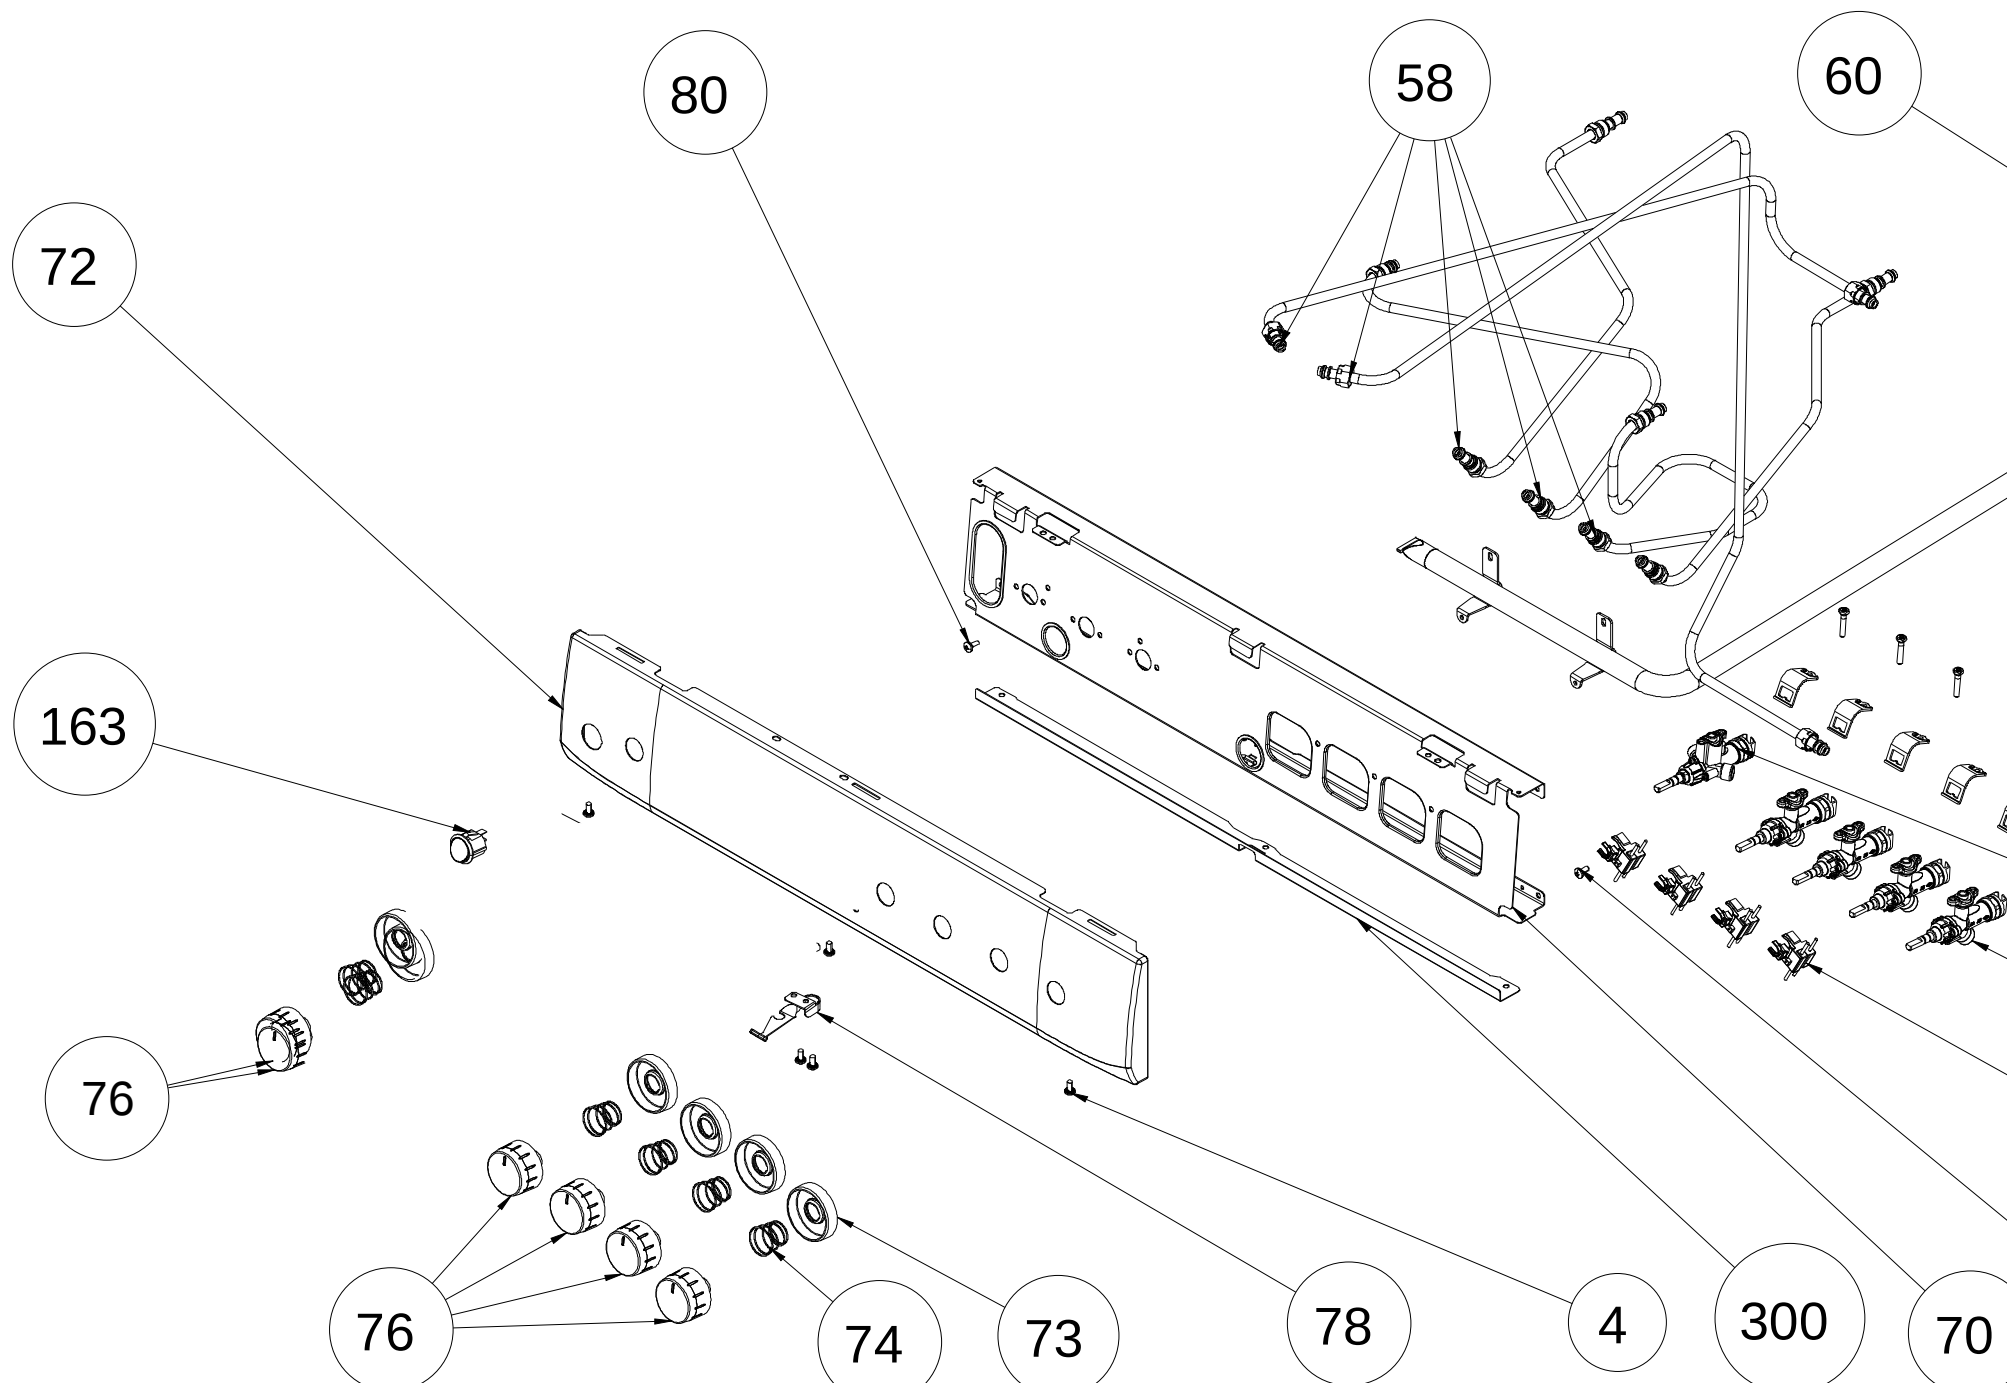 


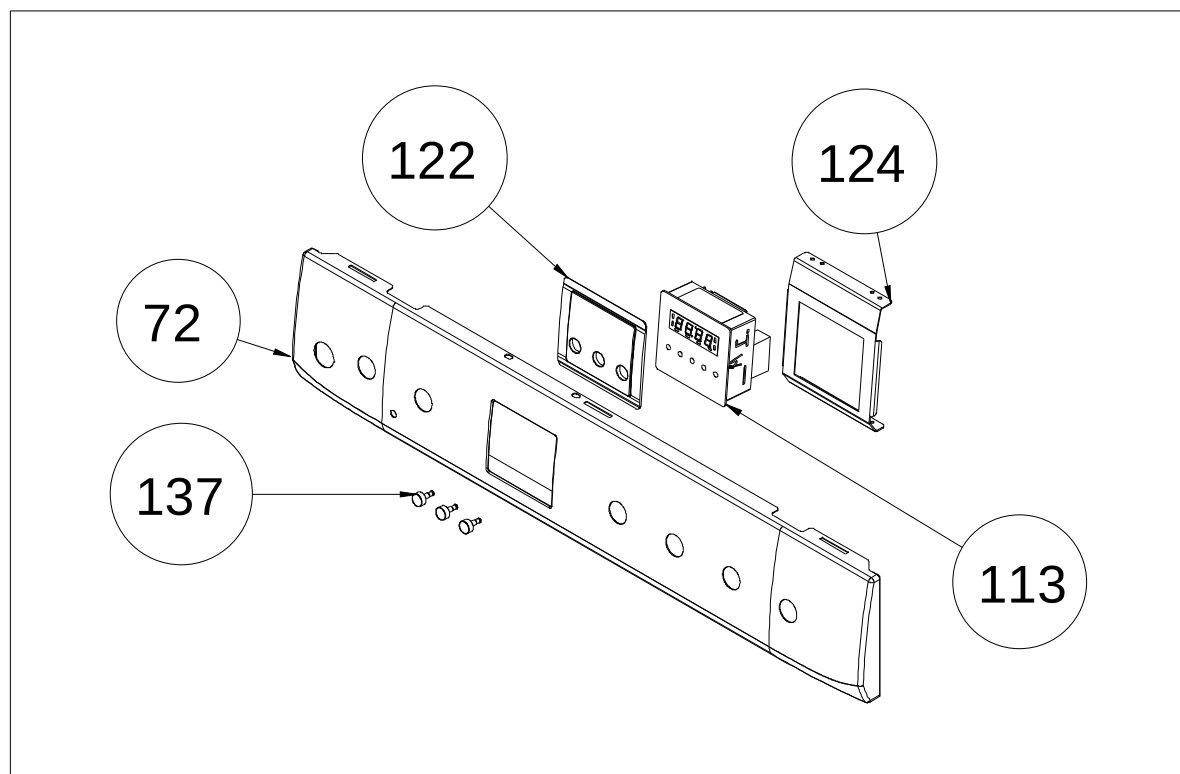 


DIGITAL TIMER (OPTIONAL)

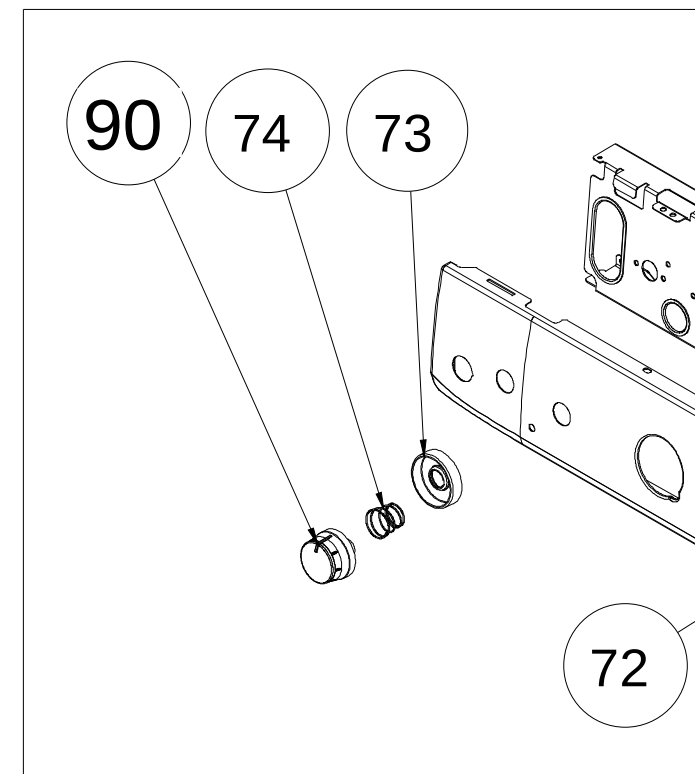 


MECHANIC TIMER (OPTIONAL)

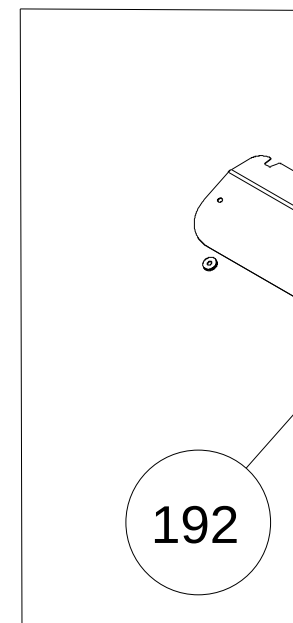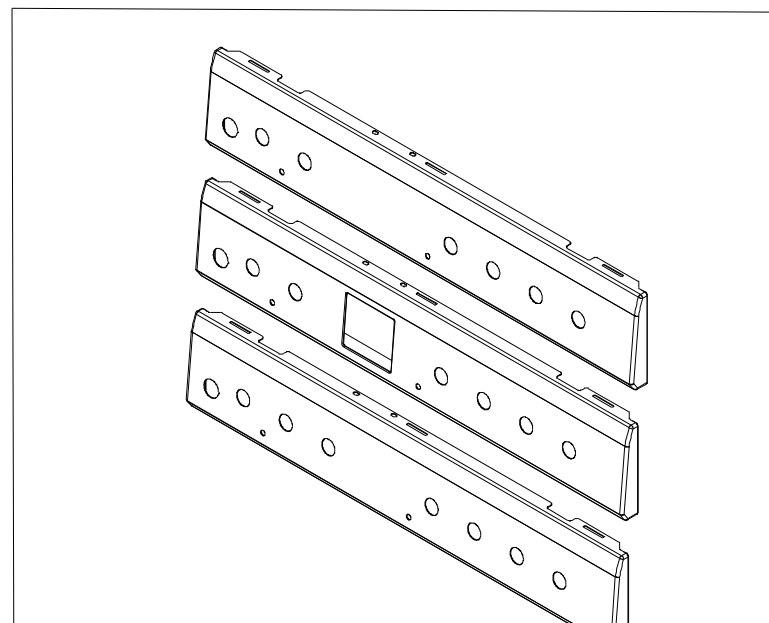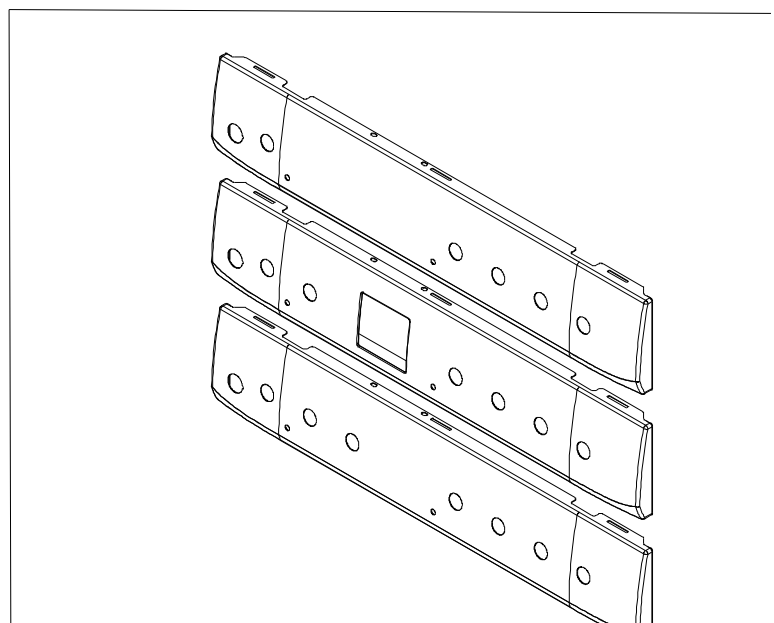   

192

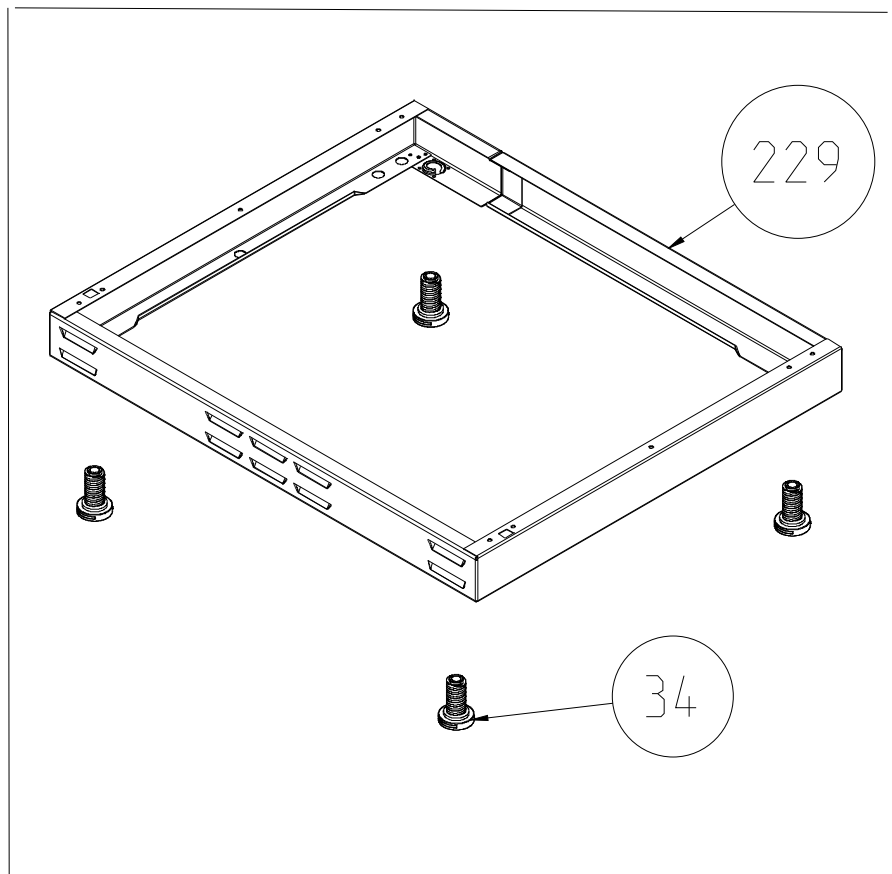 

EXTRA BOTTOM SUPPORT (WITH LOUVRES)

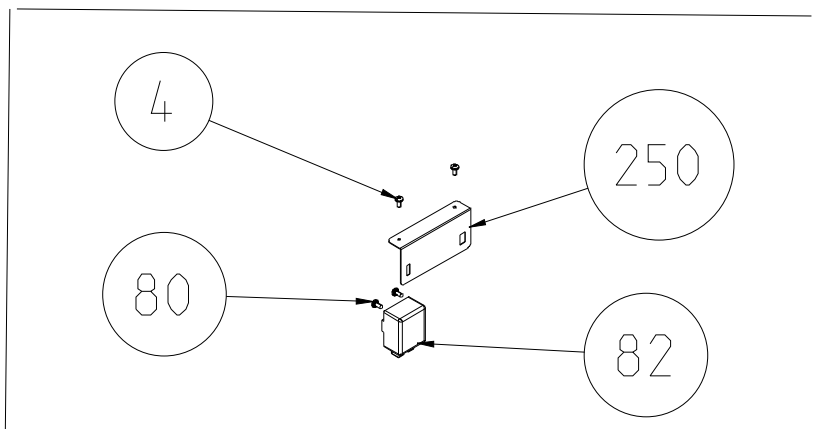 

LEFT

130

32

RIGHT

27

LEFT

38

251

148

 
250

80


82

OVEN DOOR HANDLES (OPTIONAL)



HANDLES WITHOUT TAP & BRACKET

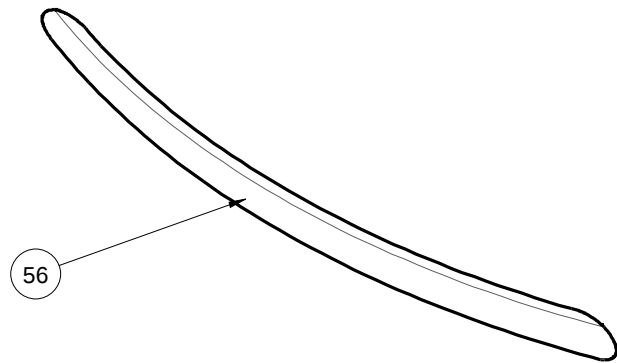


ELLIPSE ARC

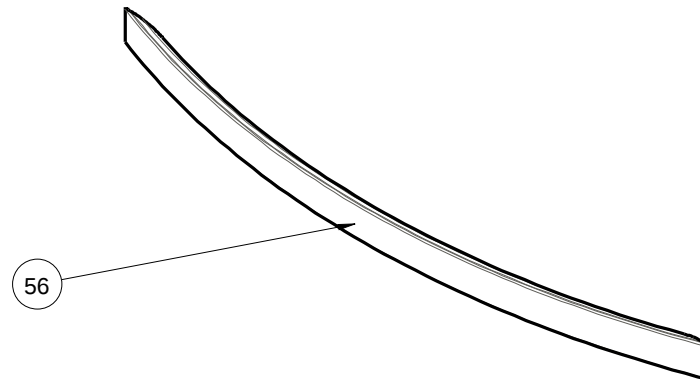 

D PROFILE ARC

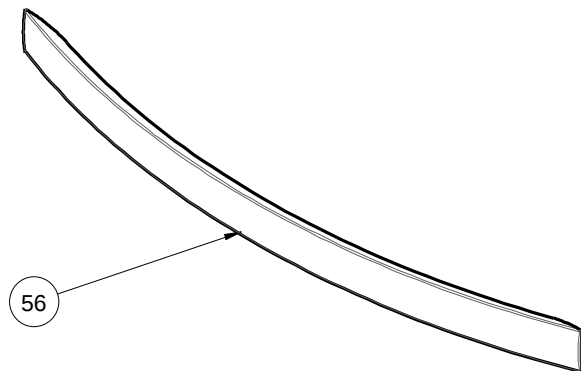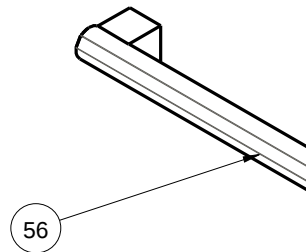  



 
D PROFILE ARC,ELECTROLUX
(ONLY FOR FS - OPTIONAL)

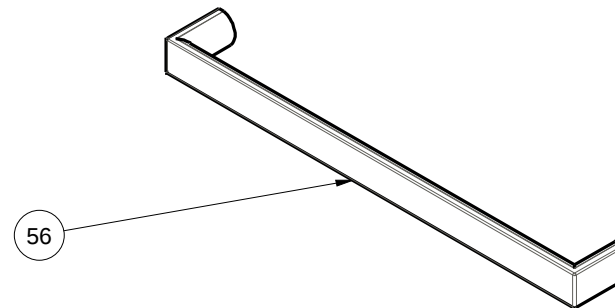


FNP
(ONLY FOR BUILT-IN - OPTIONAL)



   
HANDLES WITH BRACKET

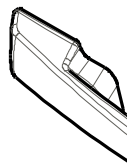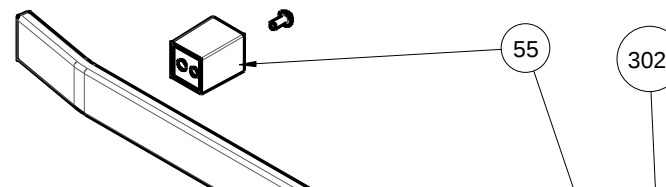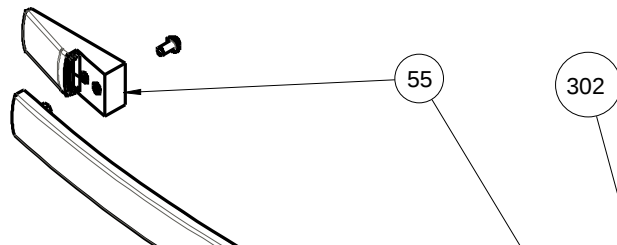


KNOBS (ONLY FOR NEW G - OPTIONAL)

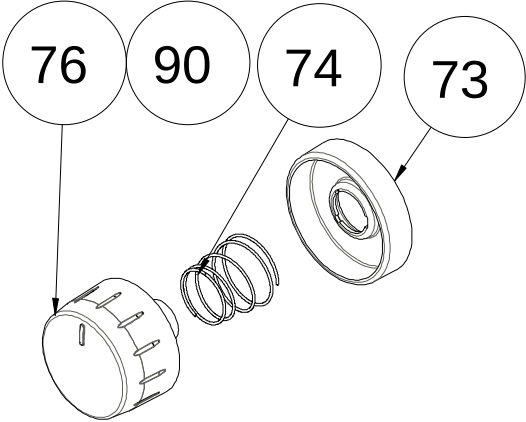 


OMEGA

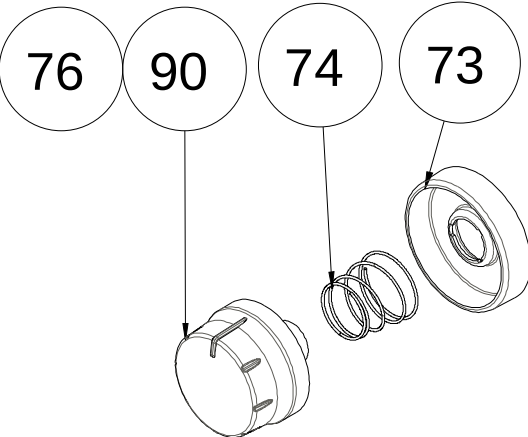 


EPSILON

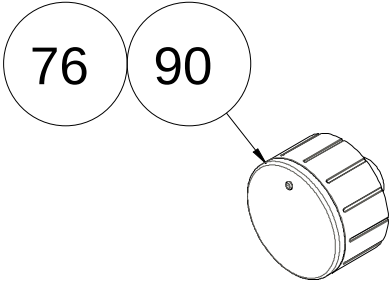 

 
BIG MACRO
(ONLY FOR NEW G ELECTRIC/
NEW G VITROCERAMIC - OPTIONAL)

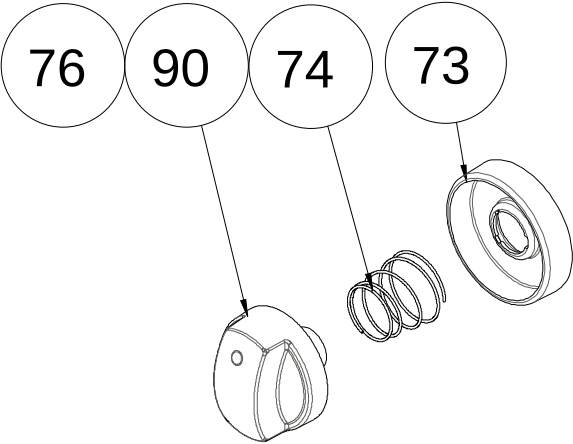

ECLIPSE RING

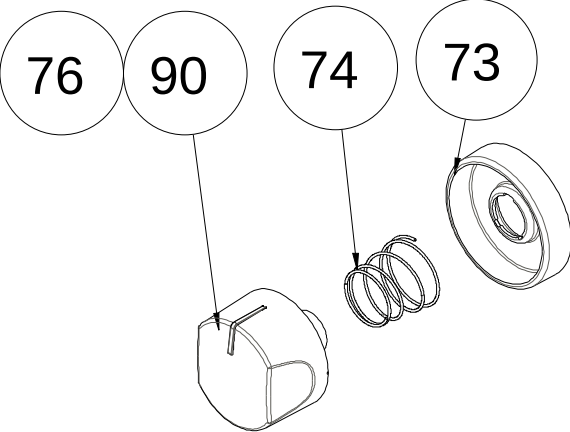 

RIMO

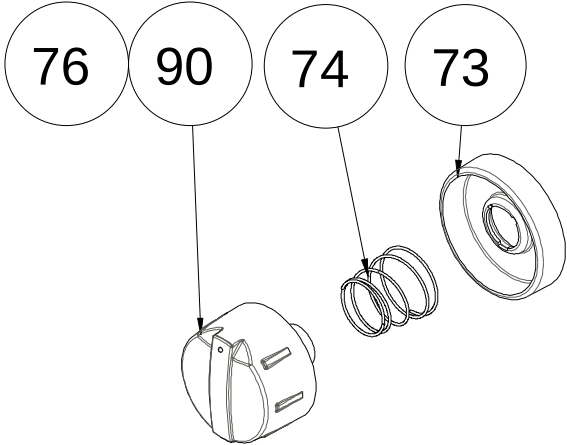 

ANTERO

