


Gebrauchsanweisung 58 0155 (de,en,fr,pt,es)


- 1) 17 2762
- 2) 17 2579
- 3) 06 0086
- 4) 18 8197



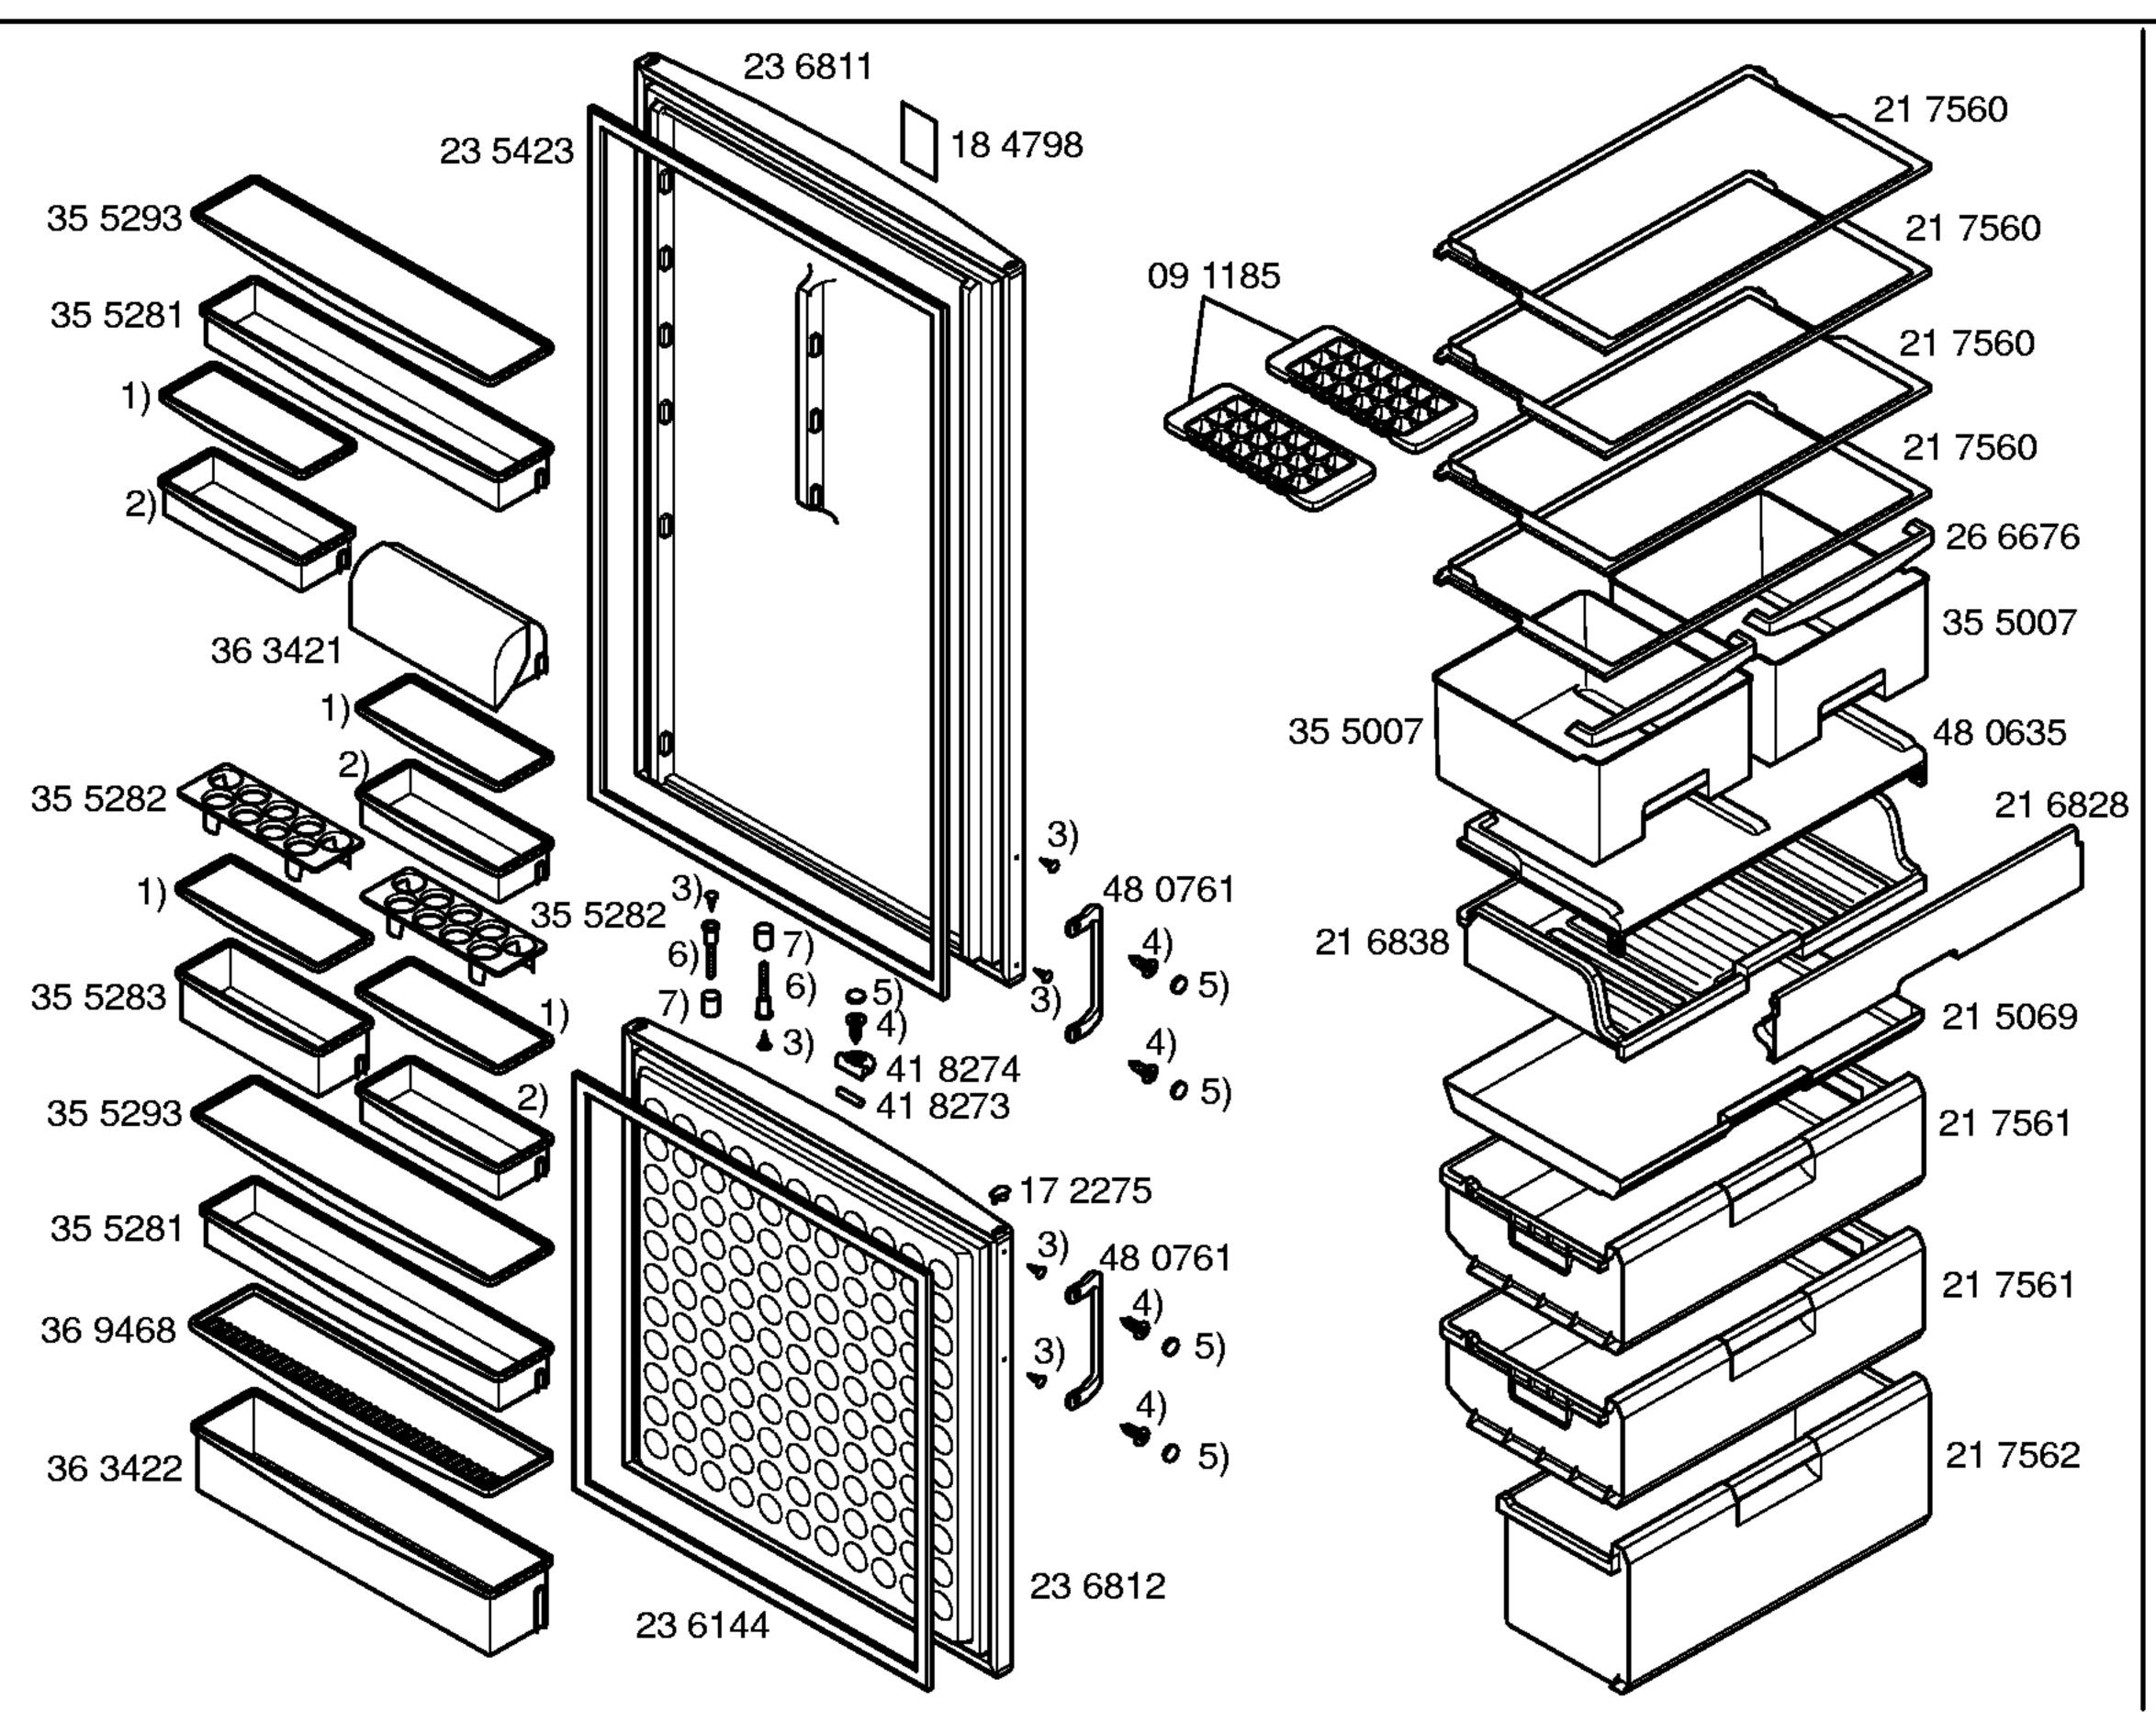


- 1) 26 6530
- 2) 35 5284
- 3) 06 0083
- 4) 17 2274
- 5) 06 0115
- 6) 18 8194
- 7) 18 8188



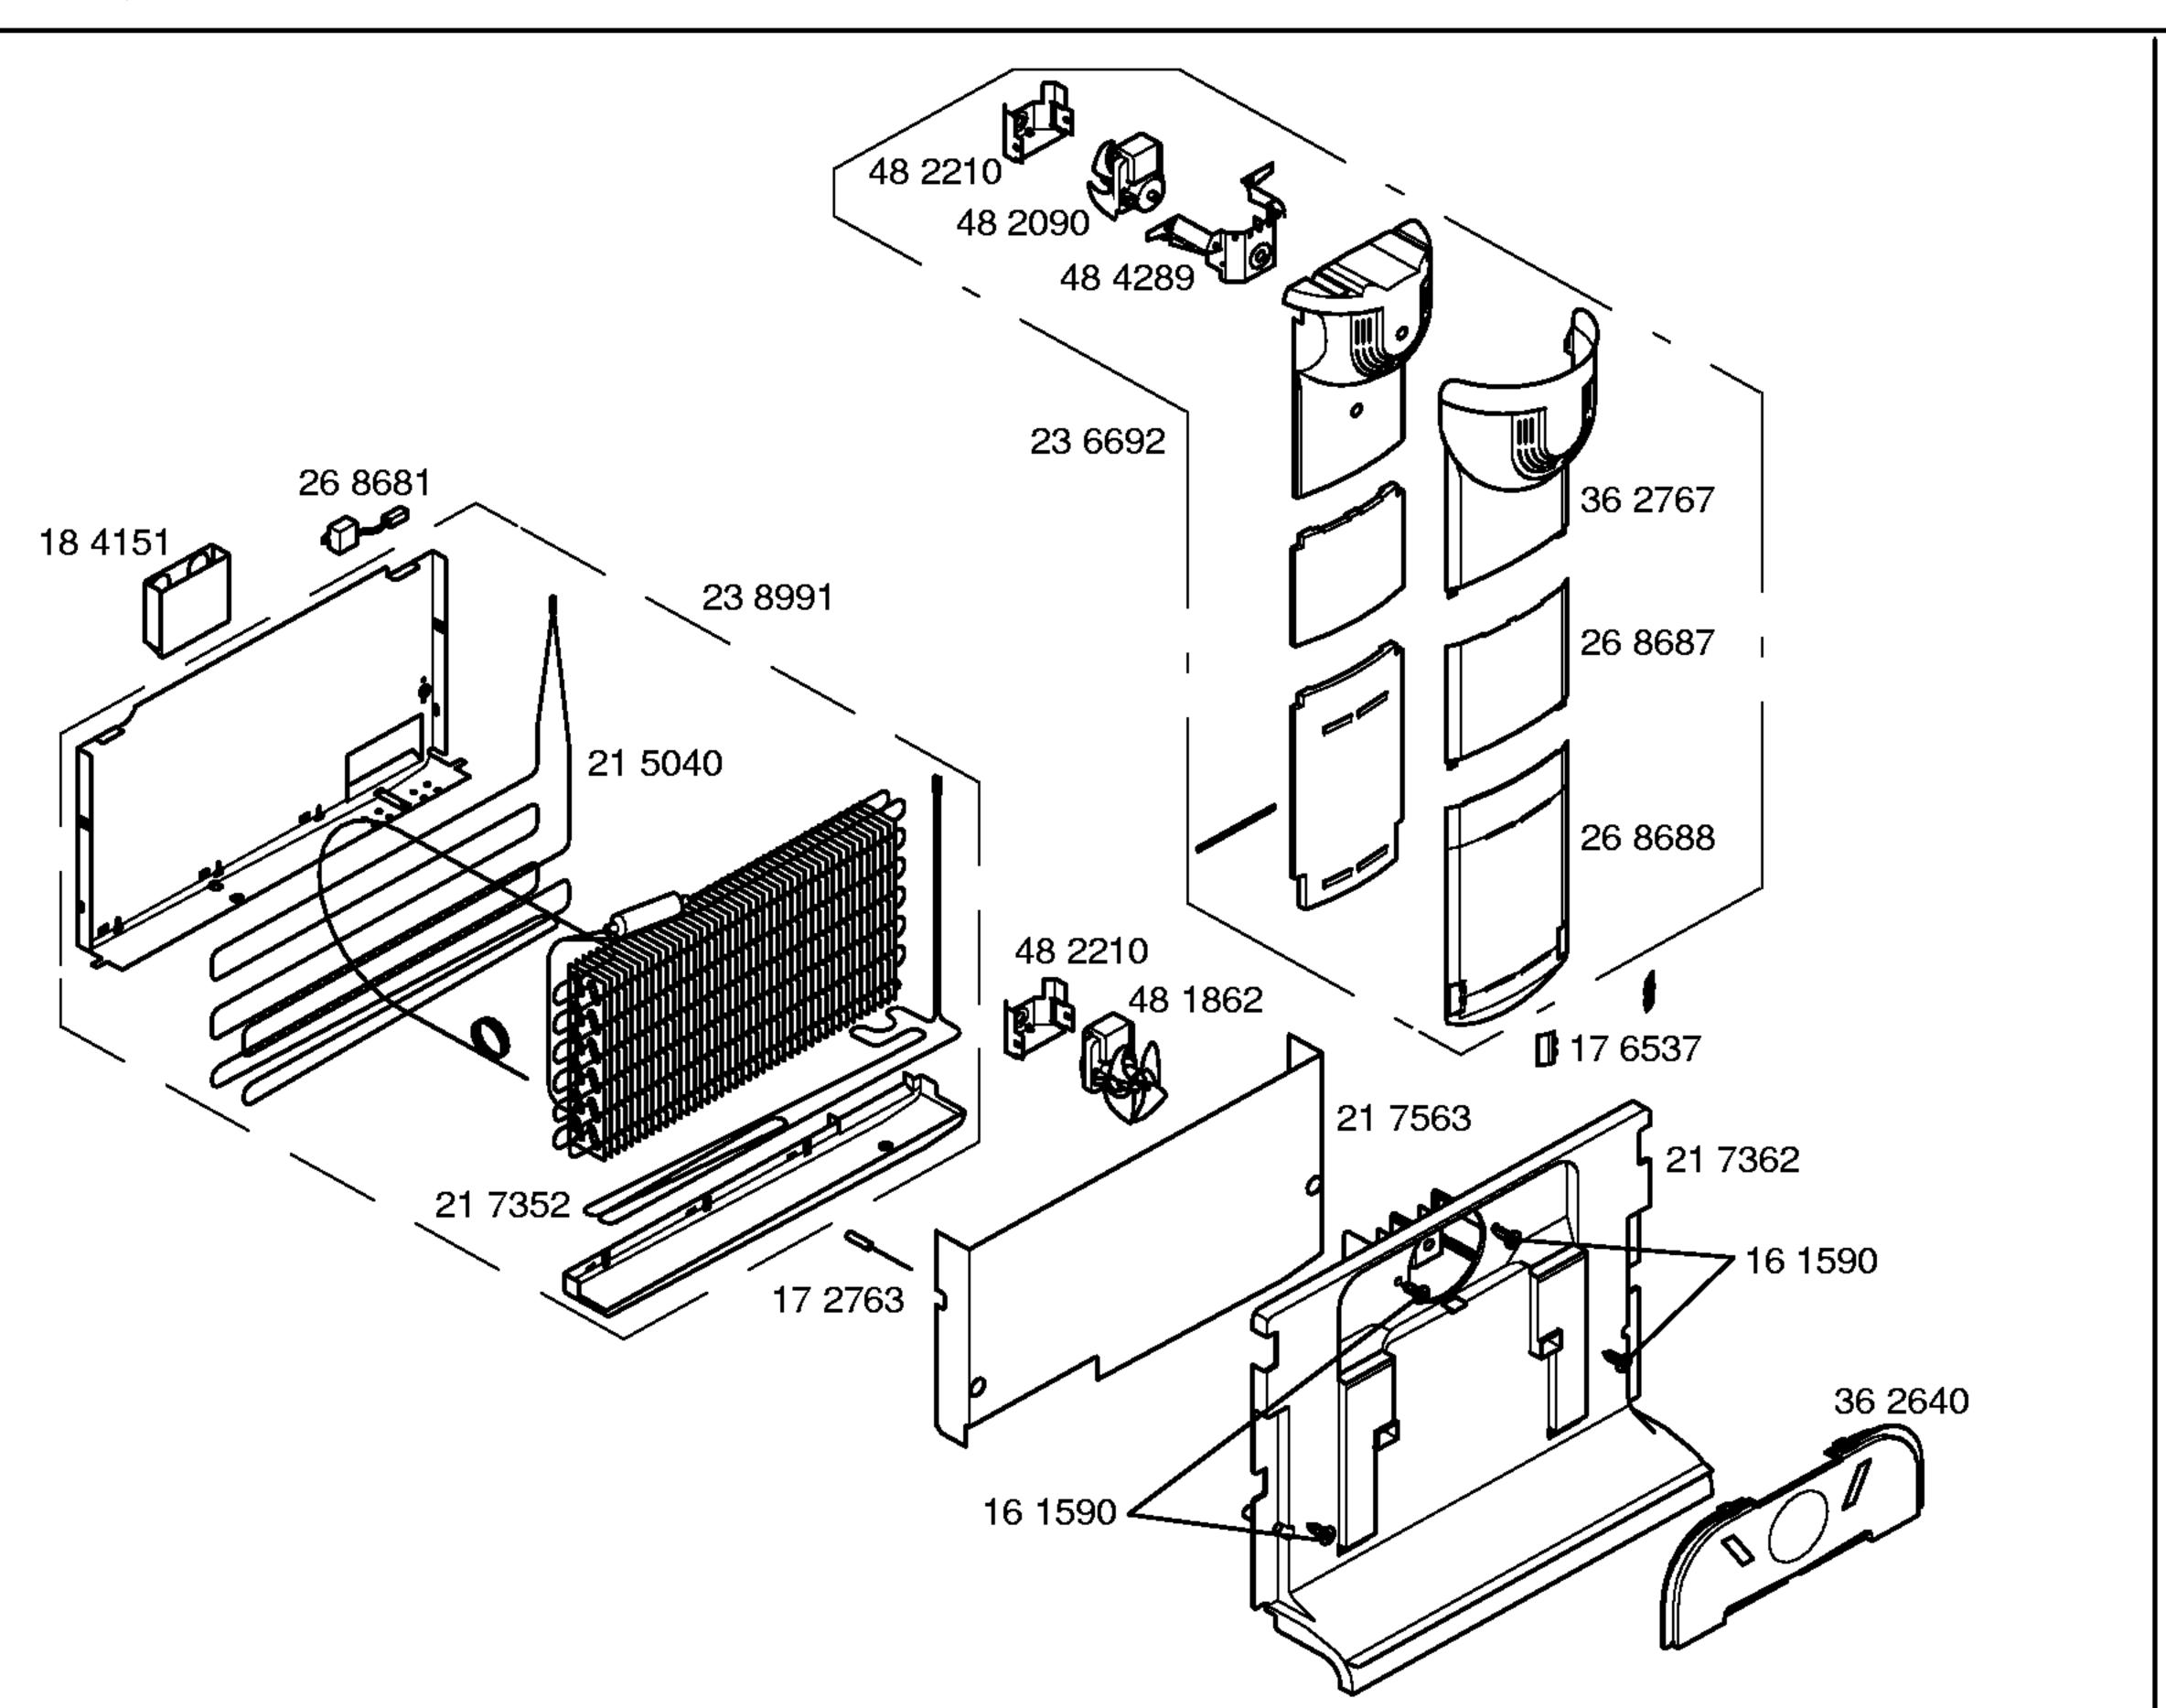



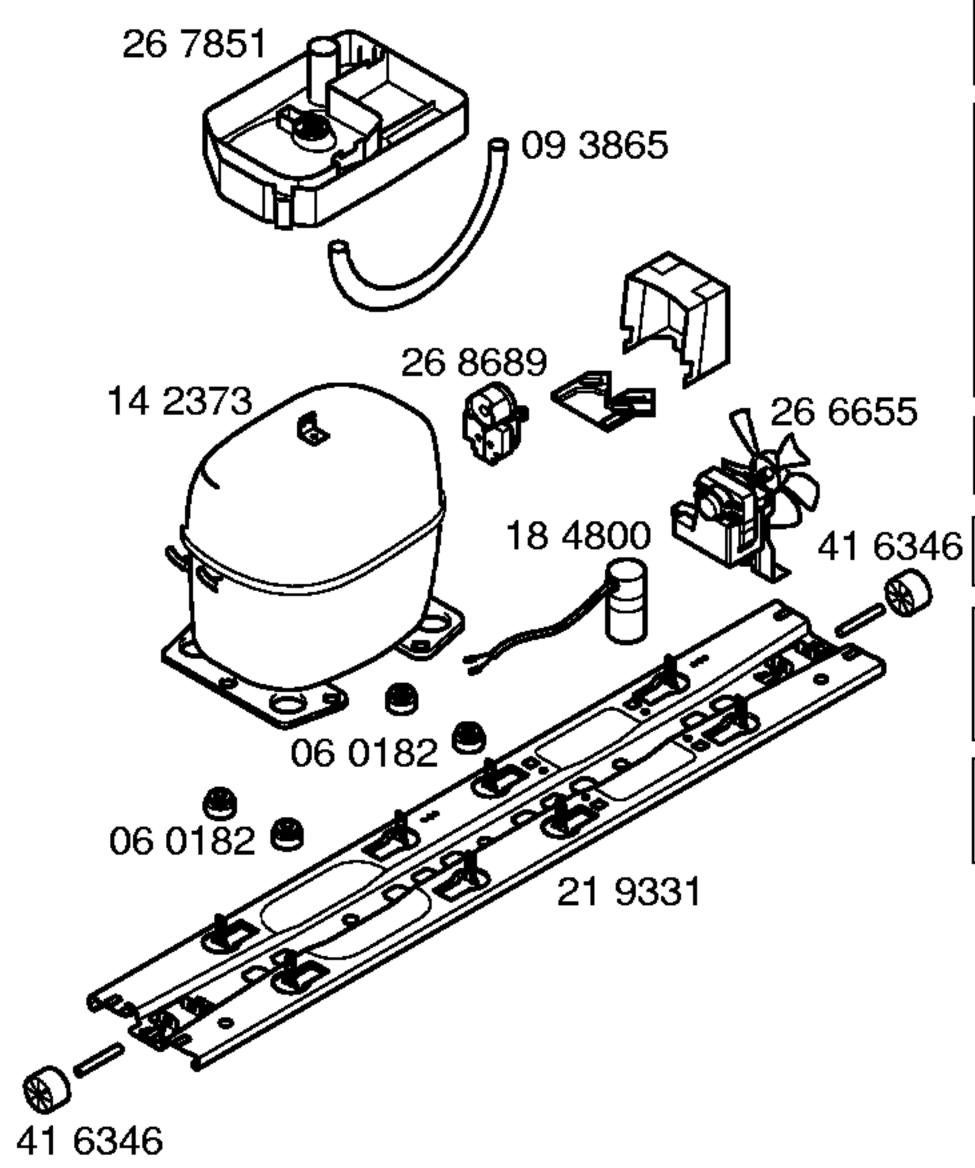

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TI	ECHNIC	UES/DATOS T	ECNICOS	
		10000		
Verdichter/Compressor/Compresseur/Compresor		ASPERA		
Typ/Type/Tipo		NBT 1118Y		
Förderleistung/Delivery/Debit/Aspiración I/h Anlaufstromm/StartIng current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		2574		
		_		
		11.0		
Hi/aux.		16.4		
Klape Therm./Thermostat/Termostat				
Typ/Type/Tipo				
Reglerstellung/Position/Conexión				
Schaltwerte/Switching values/ein/conex	.eC			
Valeurs de commutation/Desconexaus"/desc				
	:OT1.			
(abtaven' od)alarm'				
Fülmenge/Fill. quantily/Charge/Carga R600	g	45		
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	w	150		
Heizung/Heater/Chauflage/Resistenc.descong.		Verdampfer	Ablaufrinne	Luftkanal
Widerstand/Resistance/Resistencia	ΚΩ	0.38	1.4	13.49
Leistung/Power/Puissance/Potencia	W	145/230	37.5/230	4/230
Ventilador/Blower/Ventilateur/Ventilador		Verdichter	Verdampfer	
Widerstand/Resistance/Resistencia	ΚΩ	0.61	0.41	