



Ident – Nummern – Konstante 3740

Gebrauchsanweisung 51 7750 (D,GB,I,F,NL,E) 51 9260 (DK,N,SF,S) Montageanleitung 51 6997 (D,G,I,F,NL,DK,N,SF,P)

1) 09 6000 V01,V03 09 6001 V02

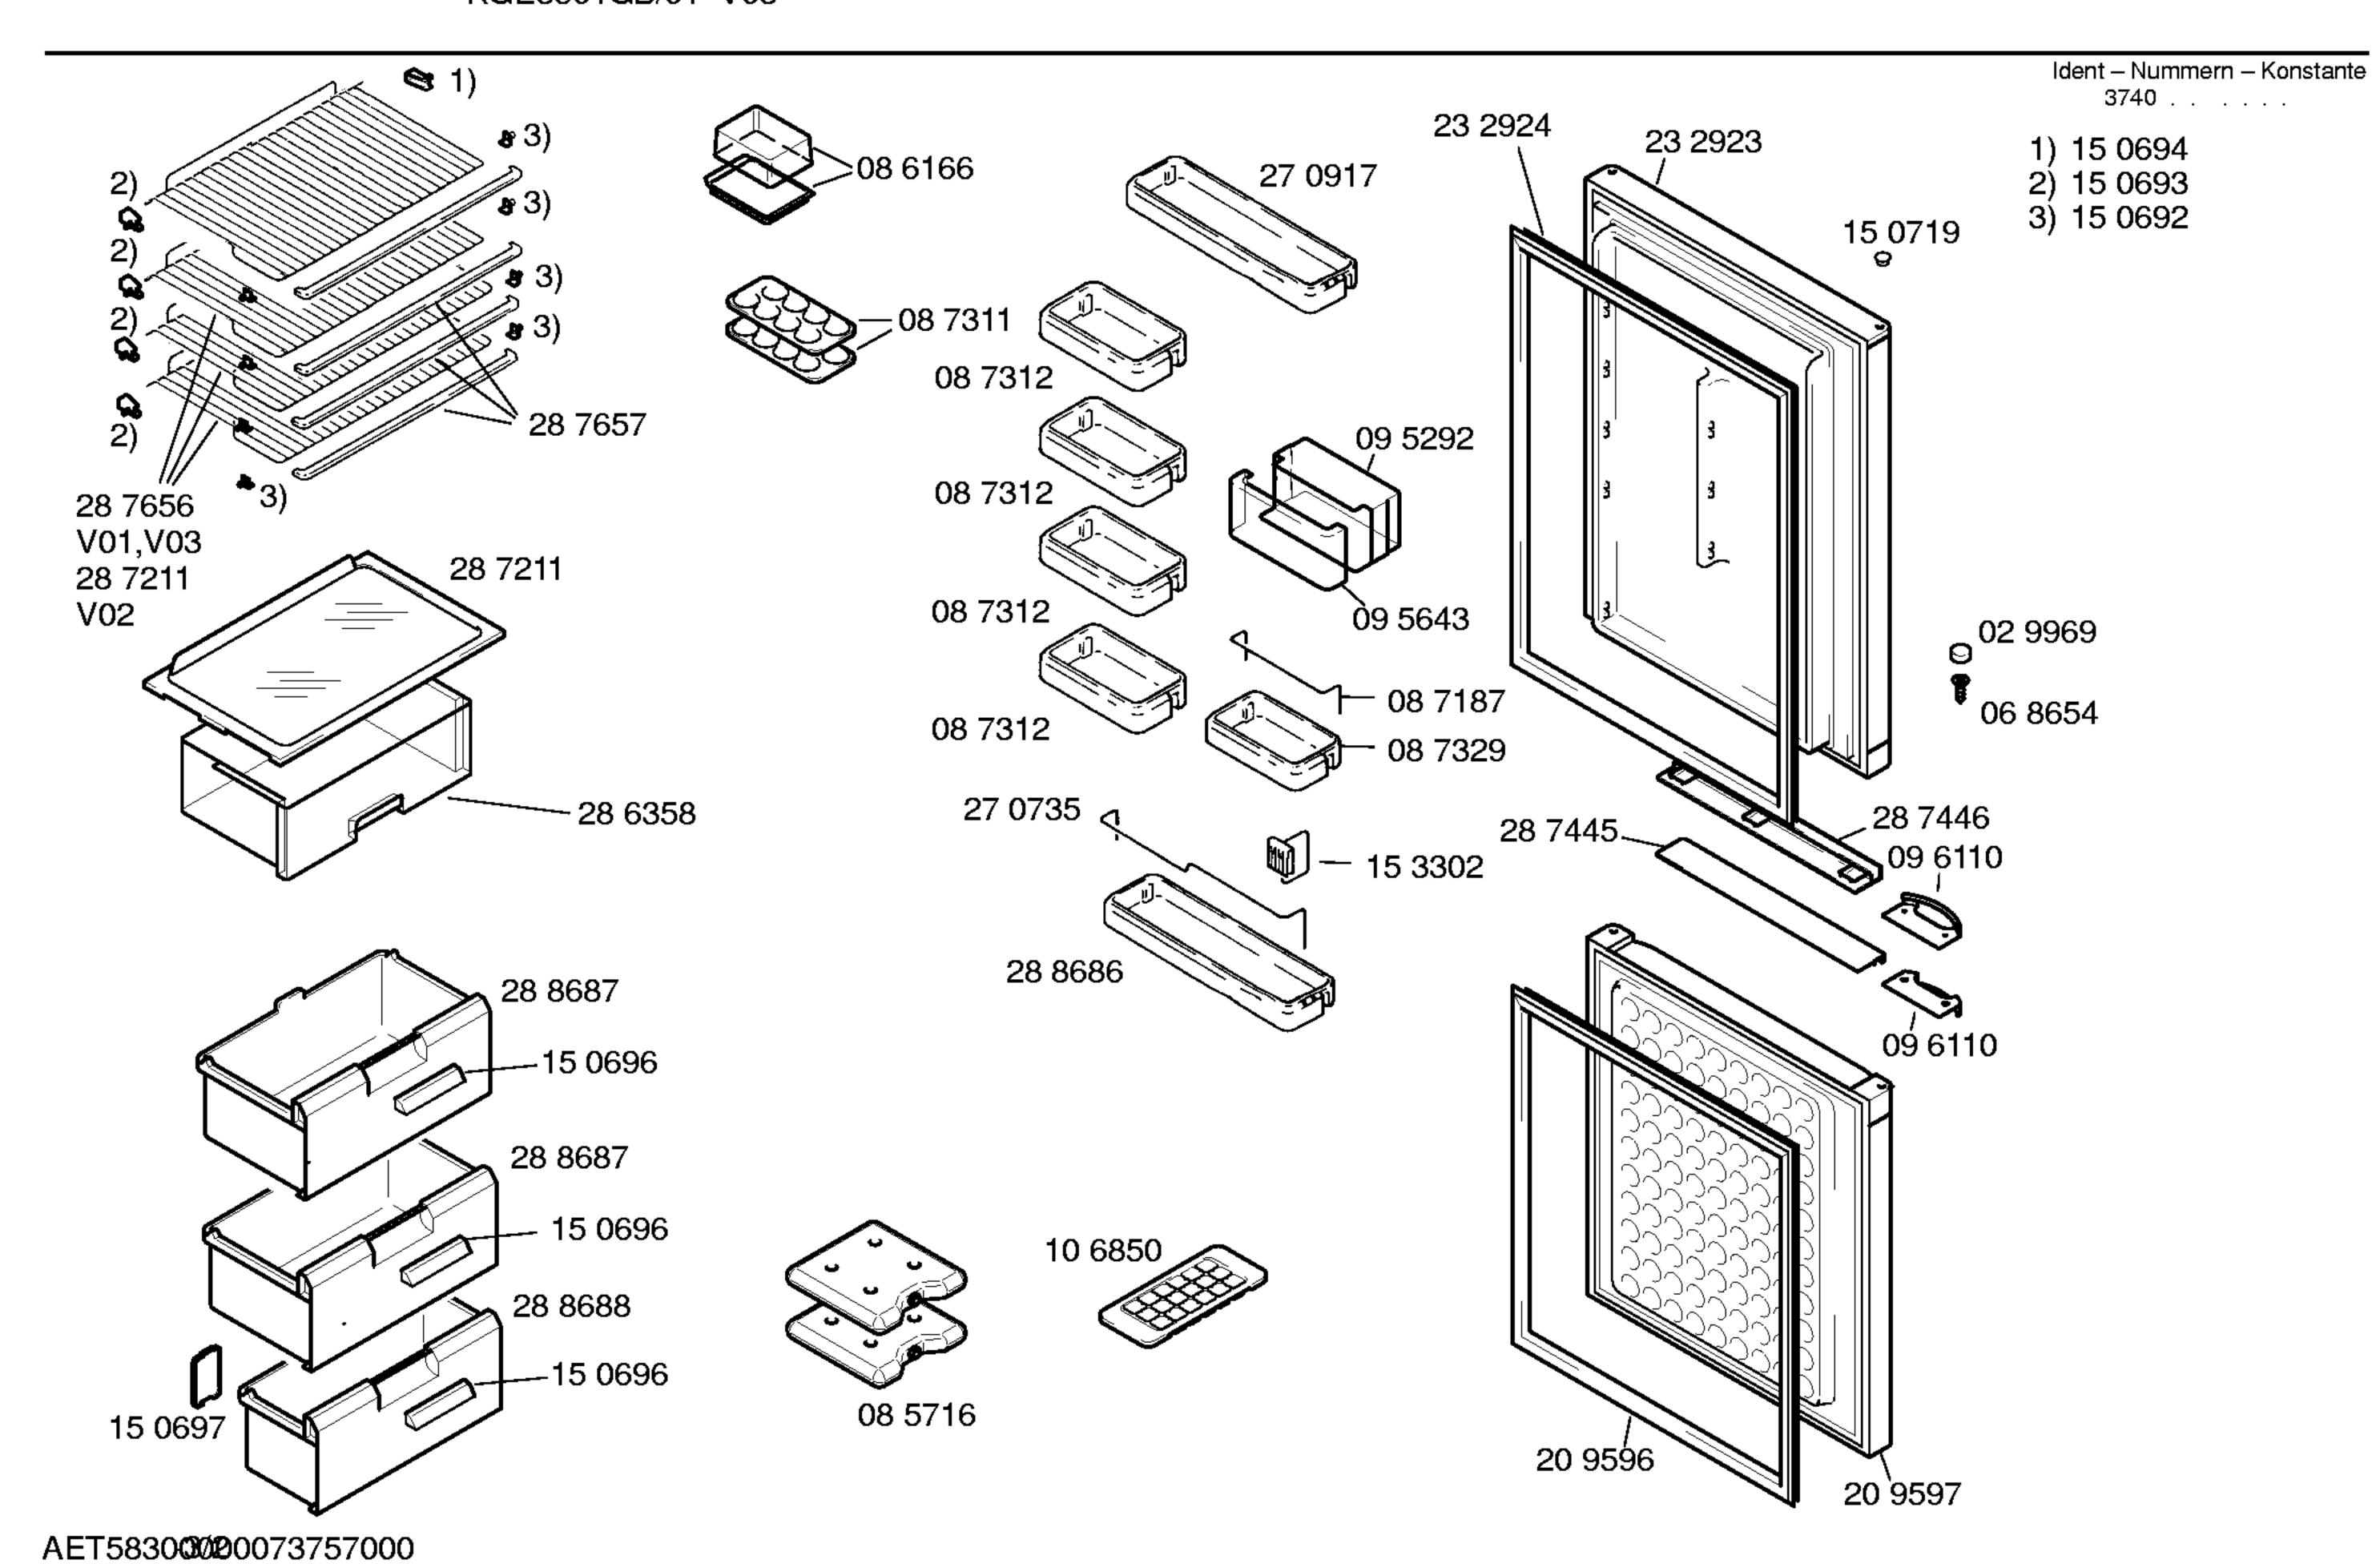

Ident – Nummern – Konstante 3740

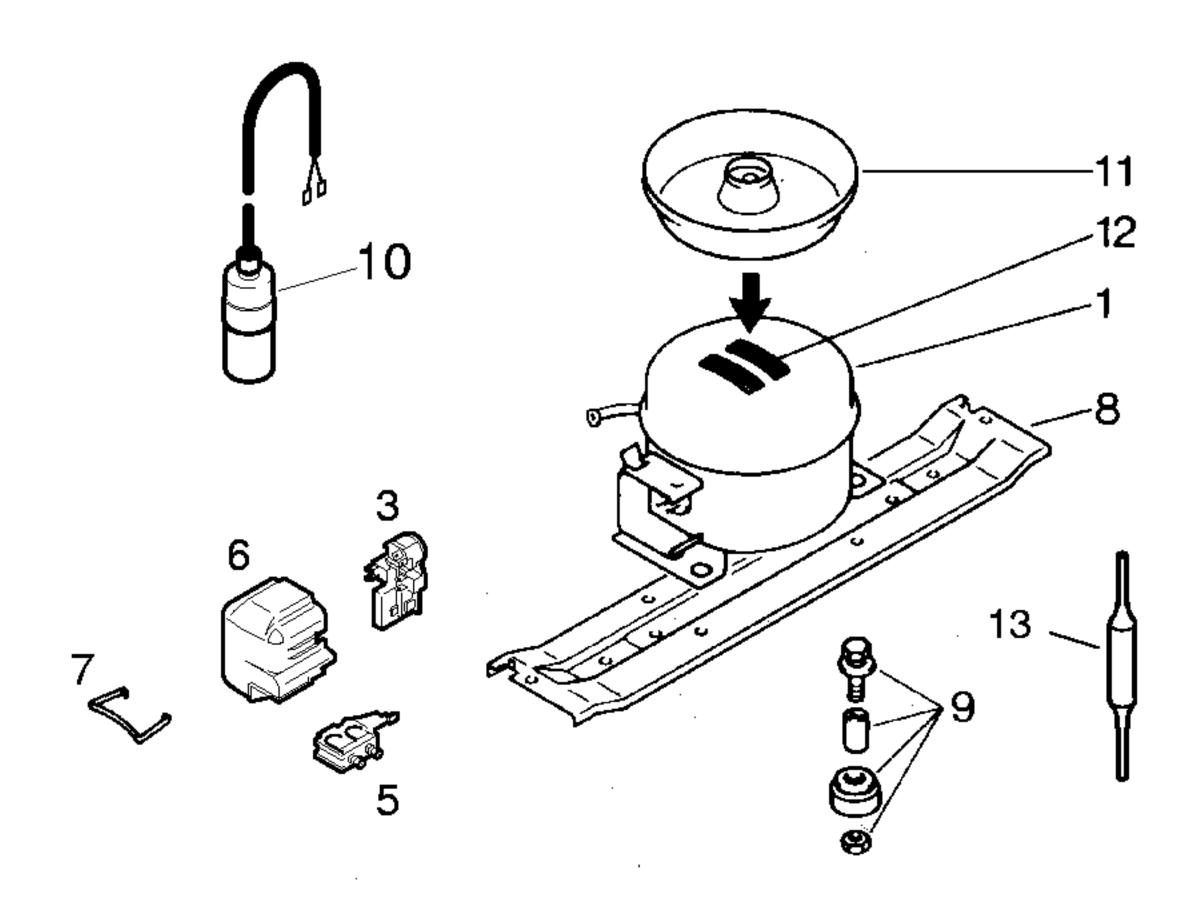

	Matsushita	
Pos.	D77C15RAW	
1	14 1236	
2		
3	03 2035	
4		
5		
6	05 8458	
7	02 6731	
8	28 7447	
9	05 0166	
10	05 8459	
11	08 8535	
12	05 6008	
13	35 0026	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance Ha/main/prin. Hi/aux	I/ h A Ω	Matsushita D77C15RAW 1384 9,2 11 26,7				
TempRegler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ ,,ein" Valeurs de commutation ,,aus" (,,abtauen" od.) ,,alarm"	°c	Elektronisch siehe Rep.– Anleitung				
Füllmenge/Fill.quantity/Charge R134a	g	140				
Anschlußwert/Conn.load/Puiss. connectée	W	120				
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω					
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω					
Schaltuhr/Timer/Minuterie de contact Widerstand/Resistance/Résistance	Ω					
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V	1650 220				