 
 


Gebrauchsanweisung
58 5475
es
58 5476
pt
Programmtabelle
41 9107
es
41 9108
pt
1) 43 2883

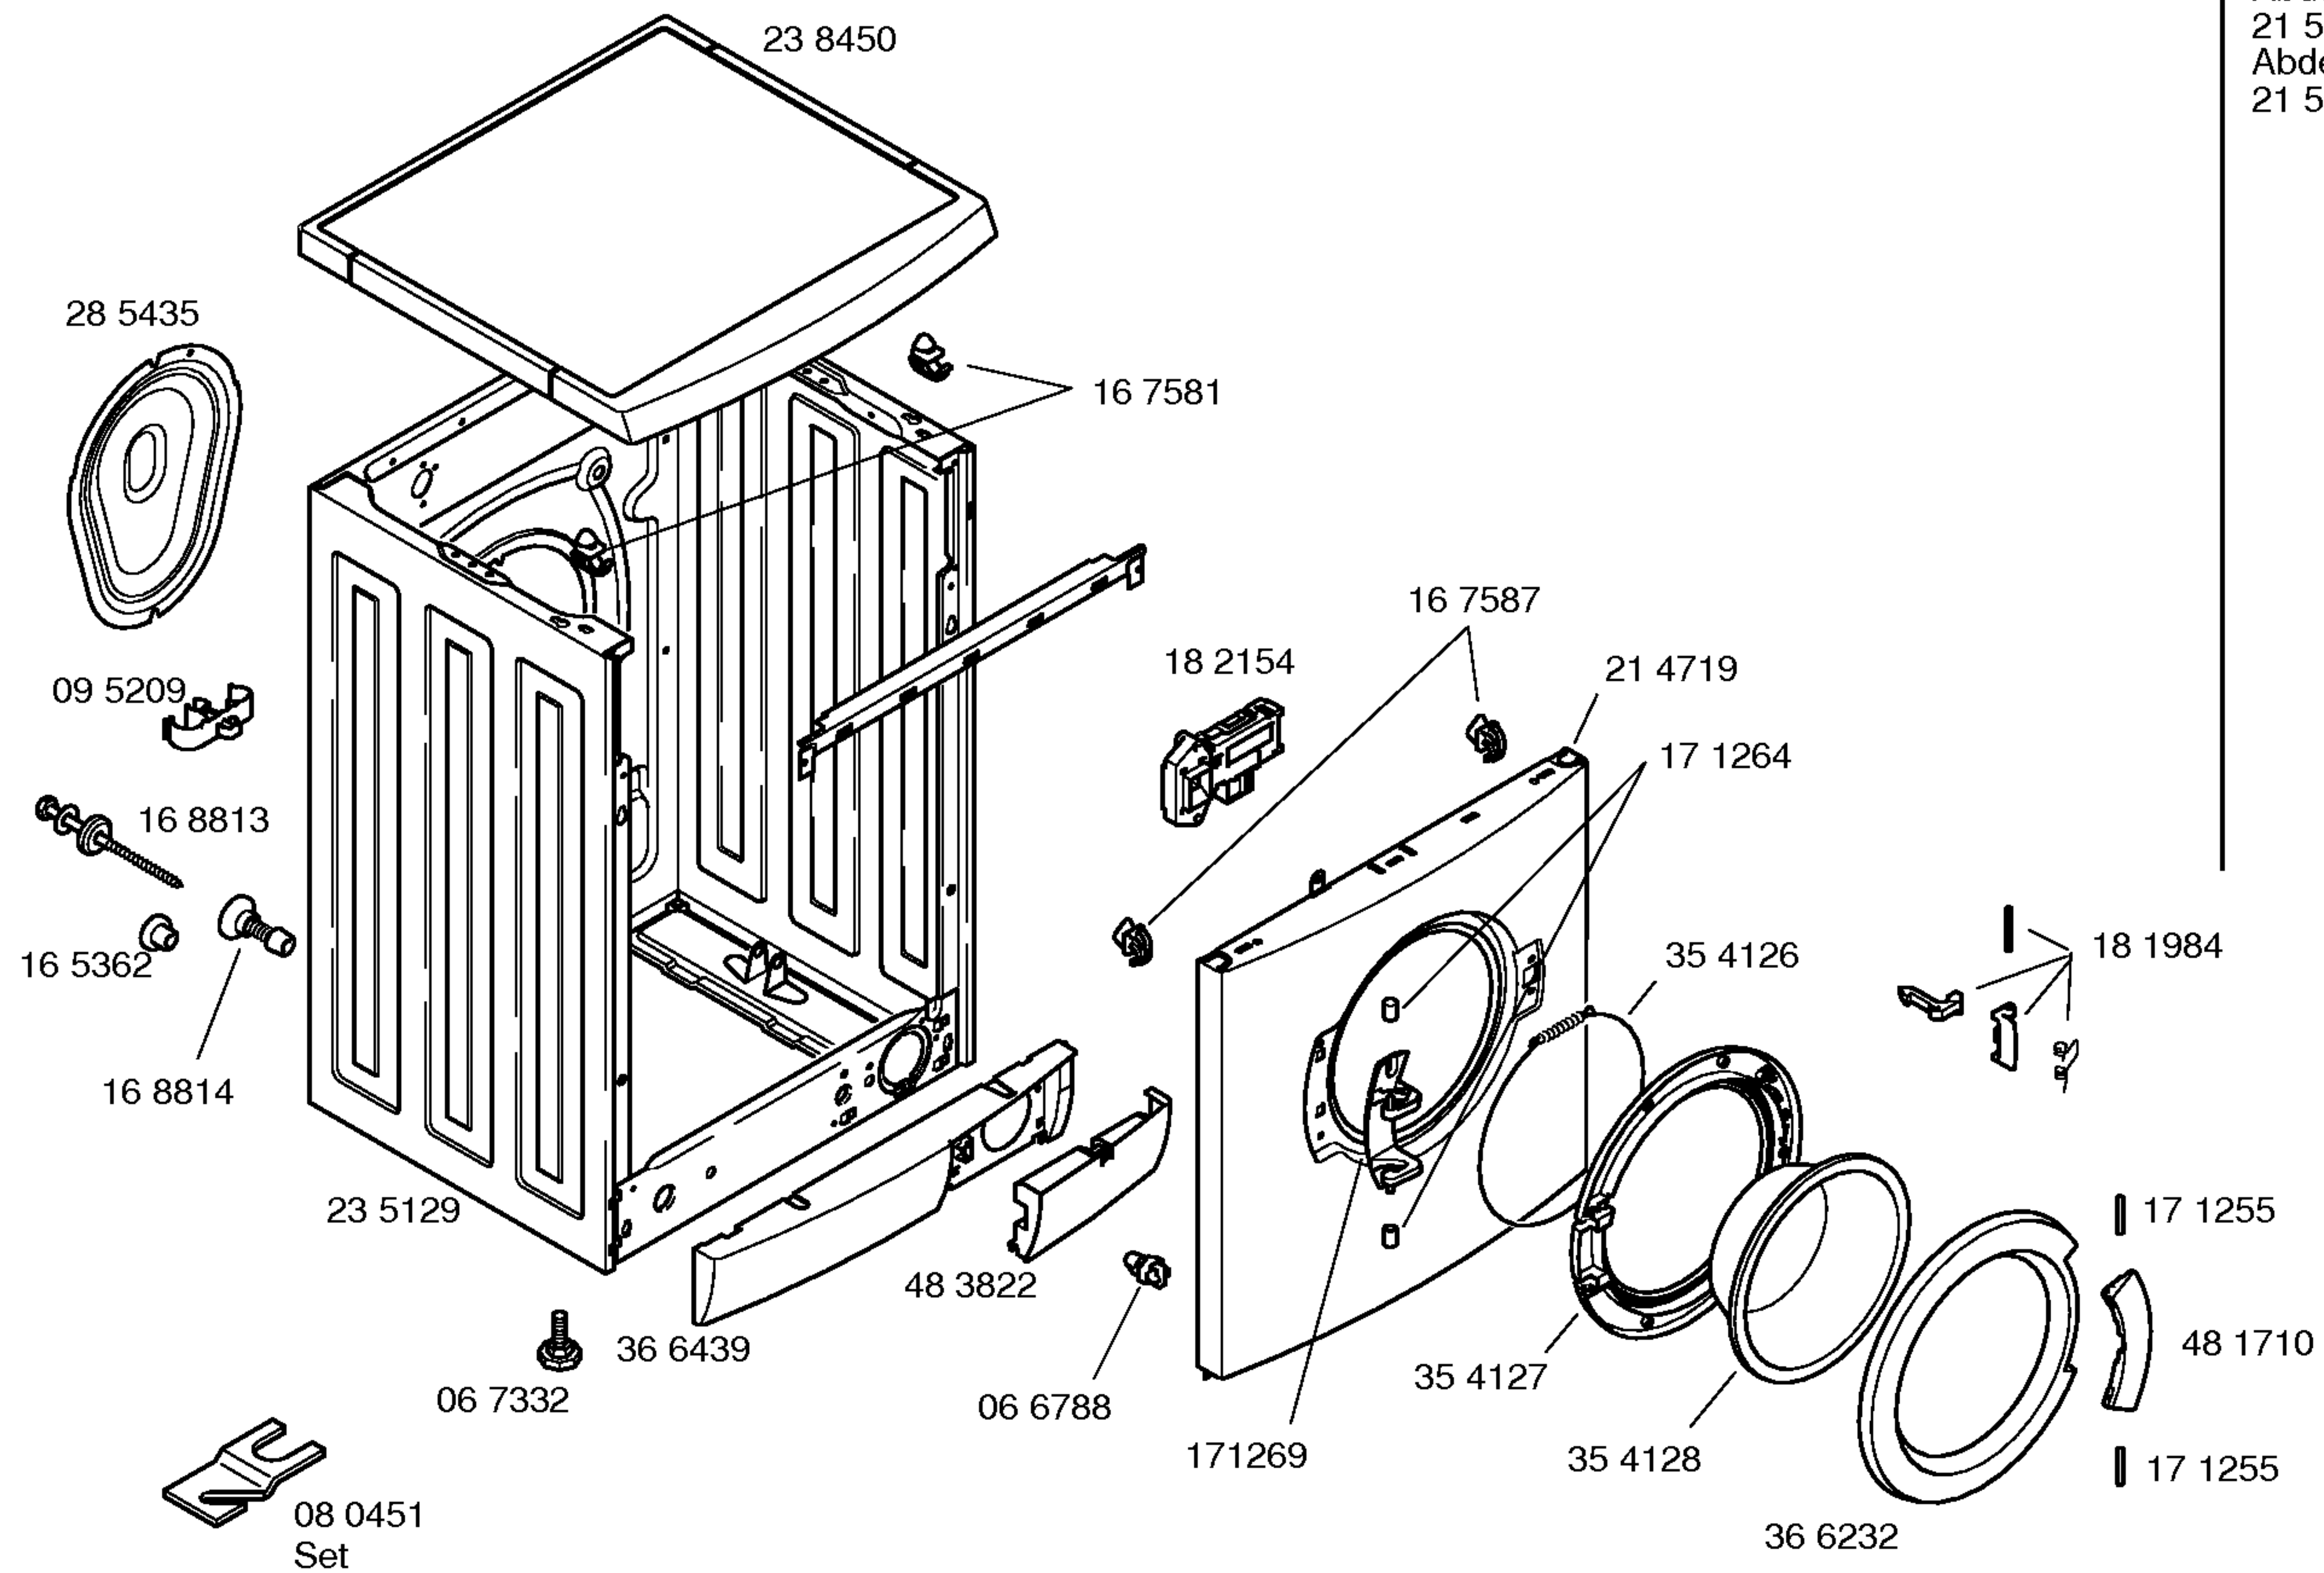

Abdeckplatte VDE
21 5174
Abdeckplatte 3 Cm.
21 5338

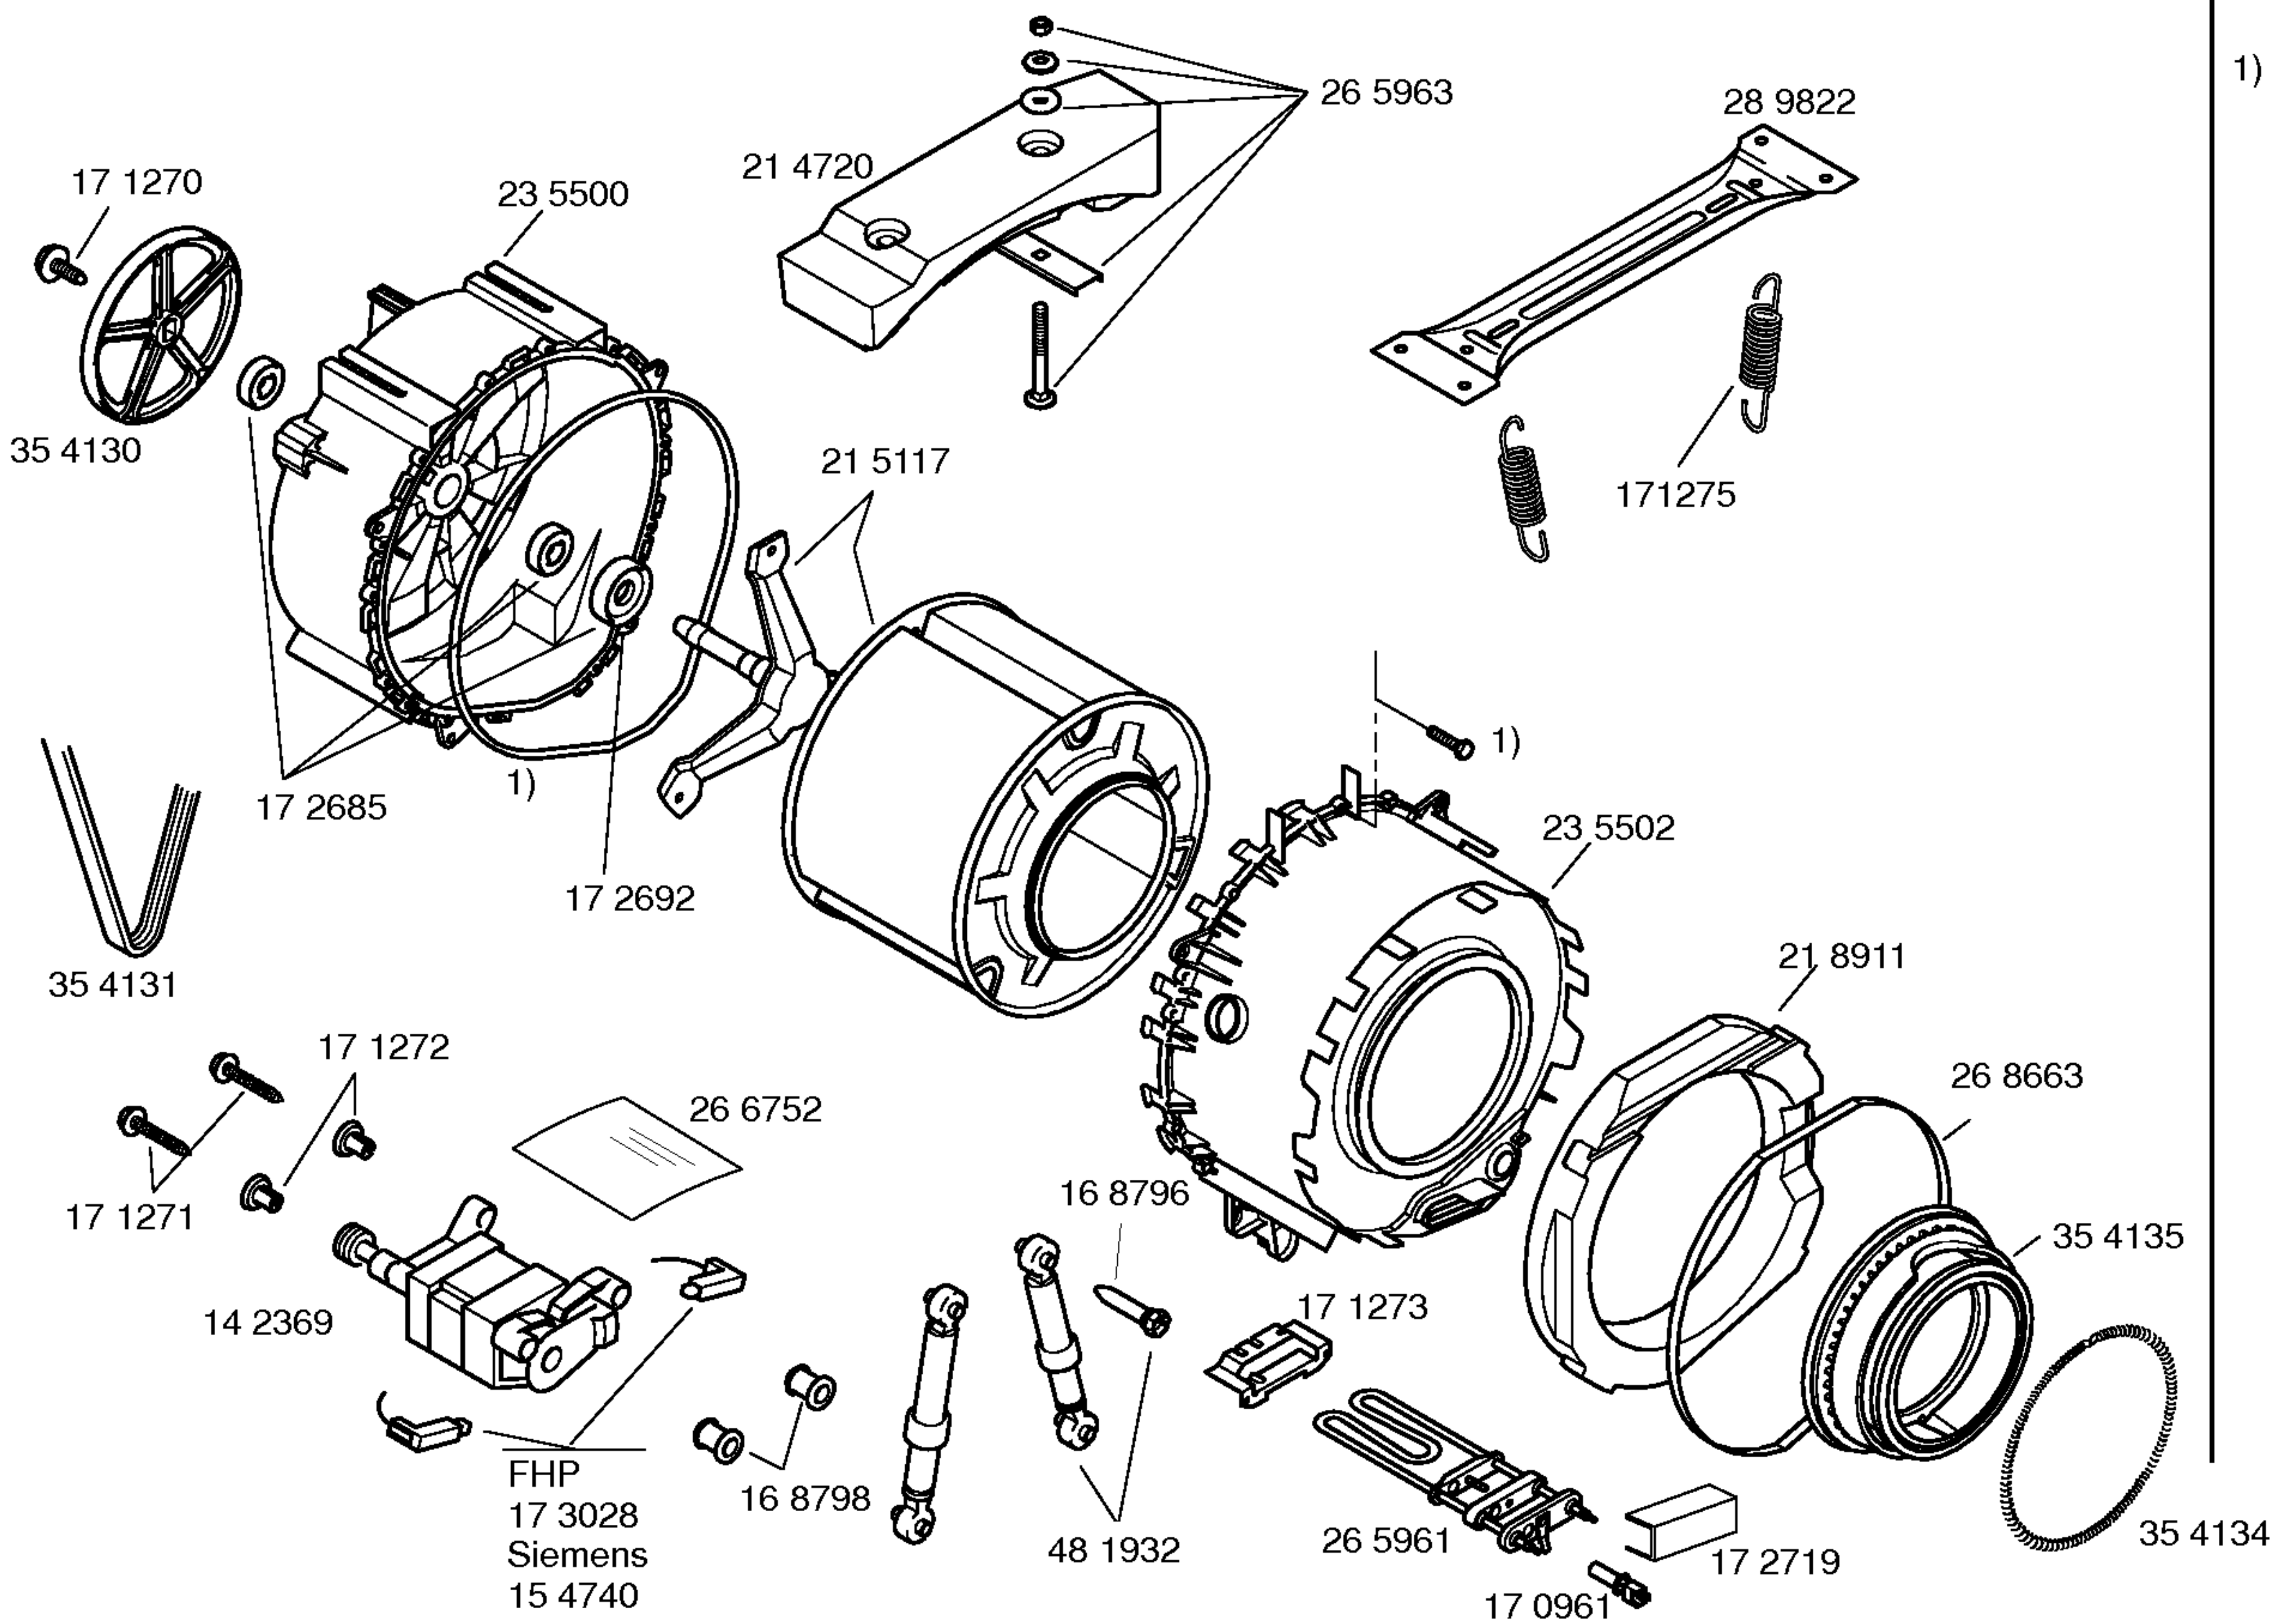

1) 26 5964

