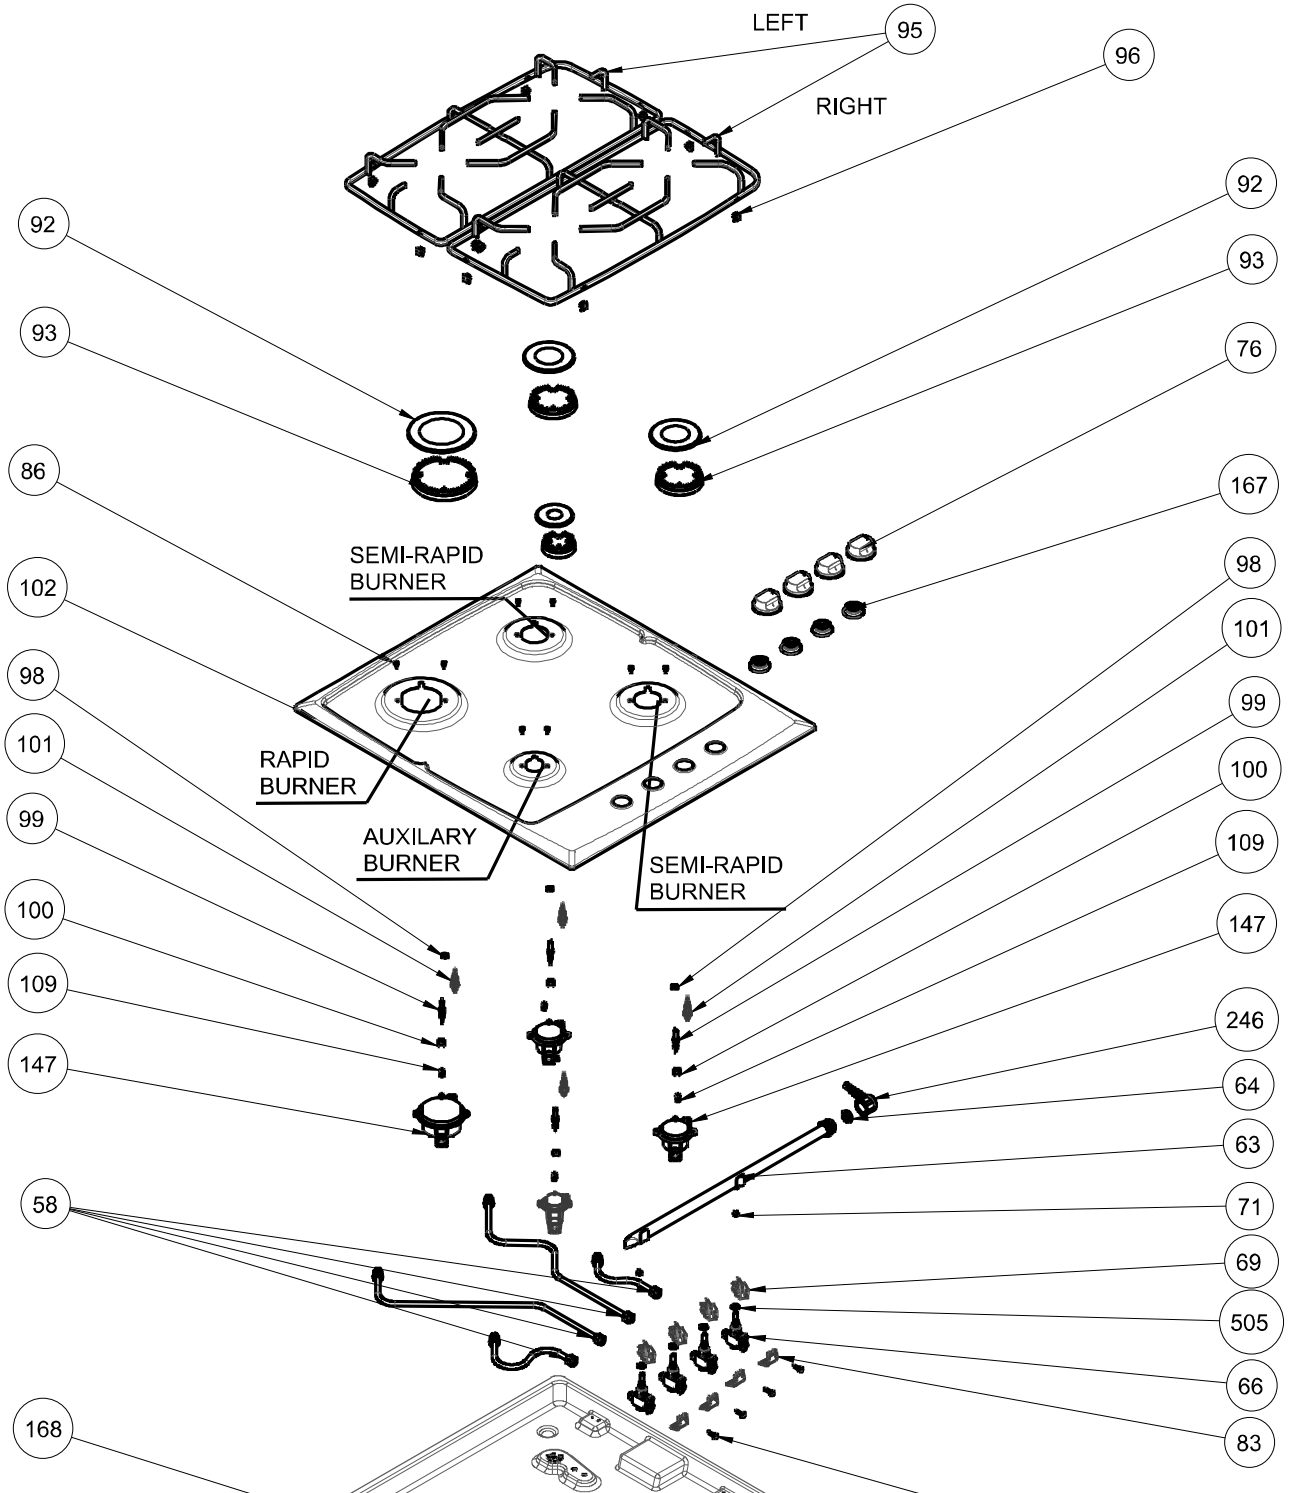
LEFT
95
RIGHT
96
92
93
92
93
76
86
167
SEMI-RAPID
BURNER
102
98
101
RAPID
BURNER
99
AUXILARY
BURNER
100
SEMI-RAPID
BURNER
109
147
246
64
63
58
71
69
505
66
83
168

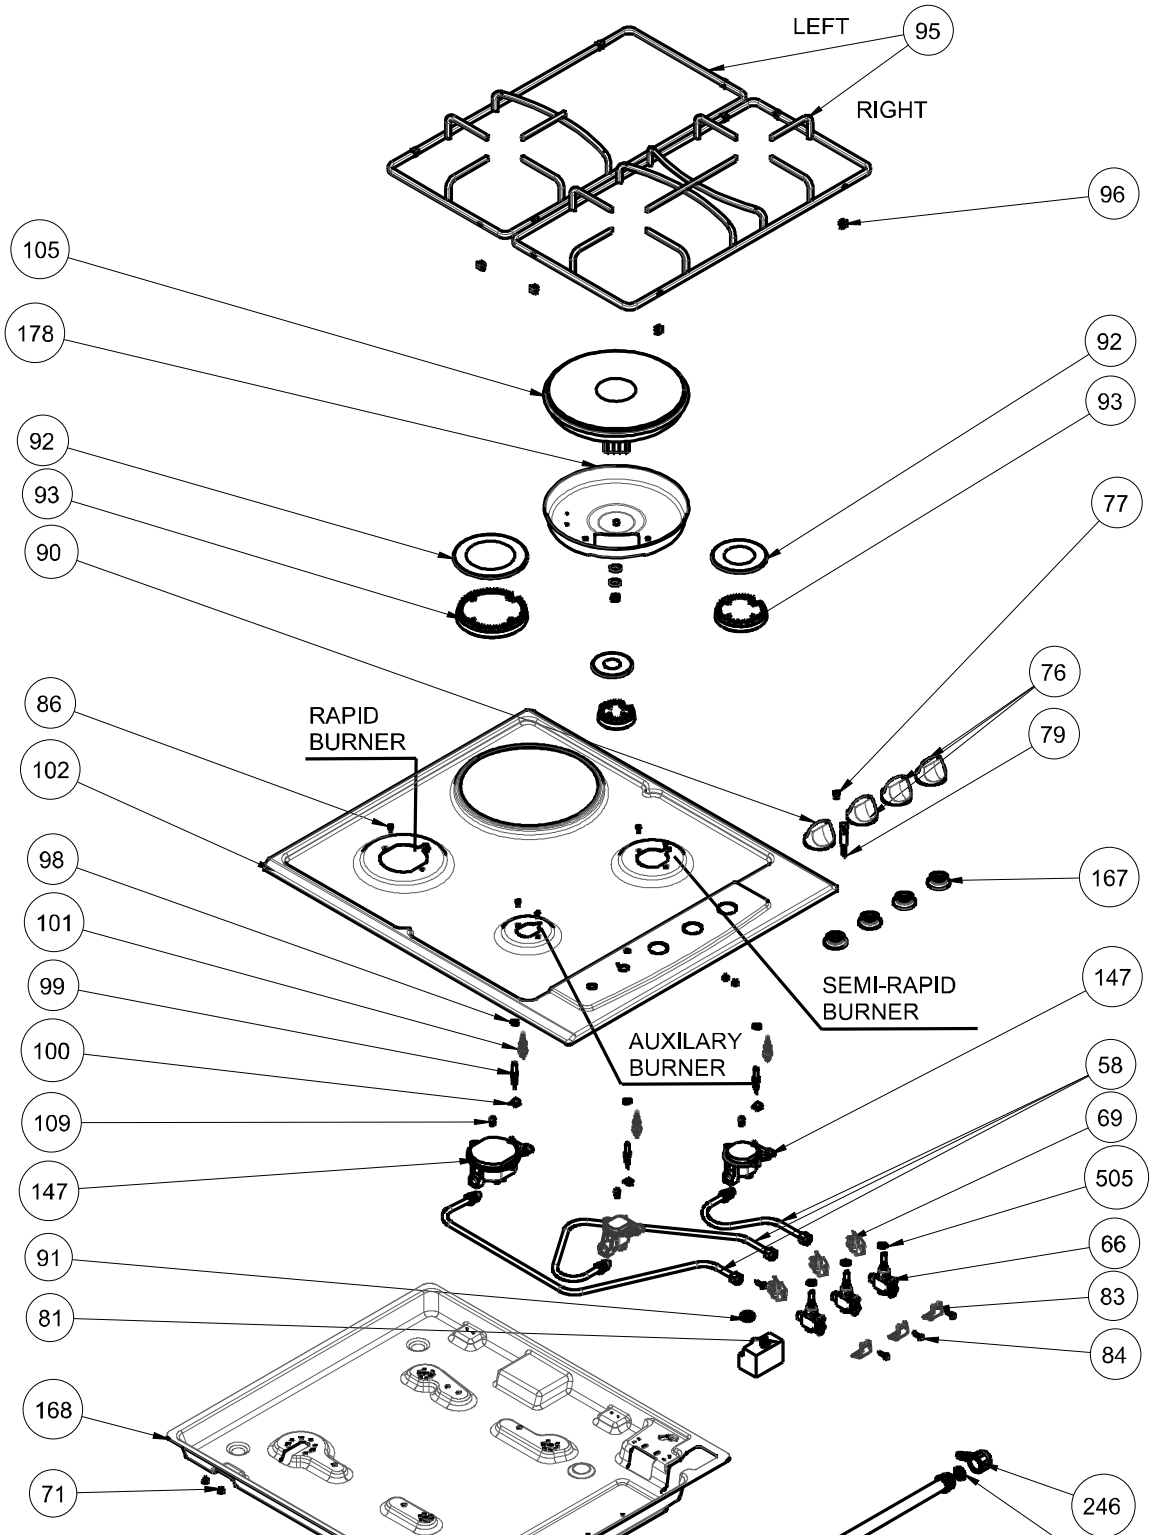
LEFT
95
RIGHT
96
105
178
92
93
90
77
76
79
86
RAPID
BURNER
102
98
101
99
100
109
147
167
SEMI-RAPID
BURNER
AUXILARY
BURNER
58
69
505
66
83
84
91
81
168
71
246

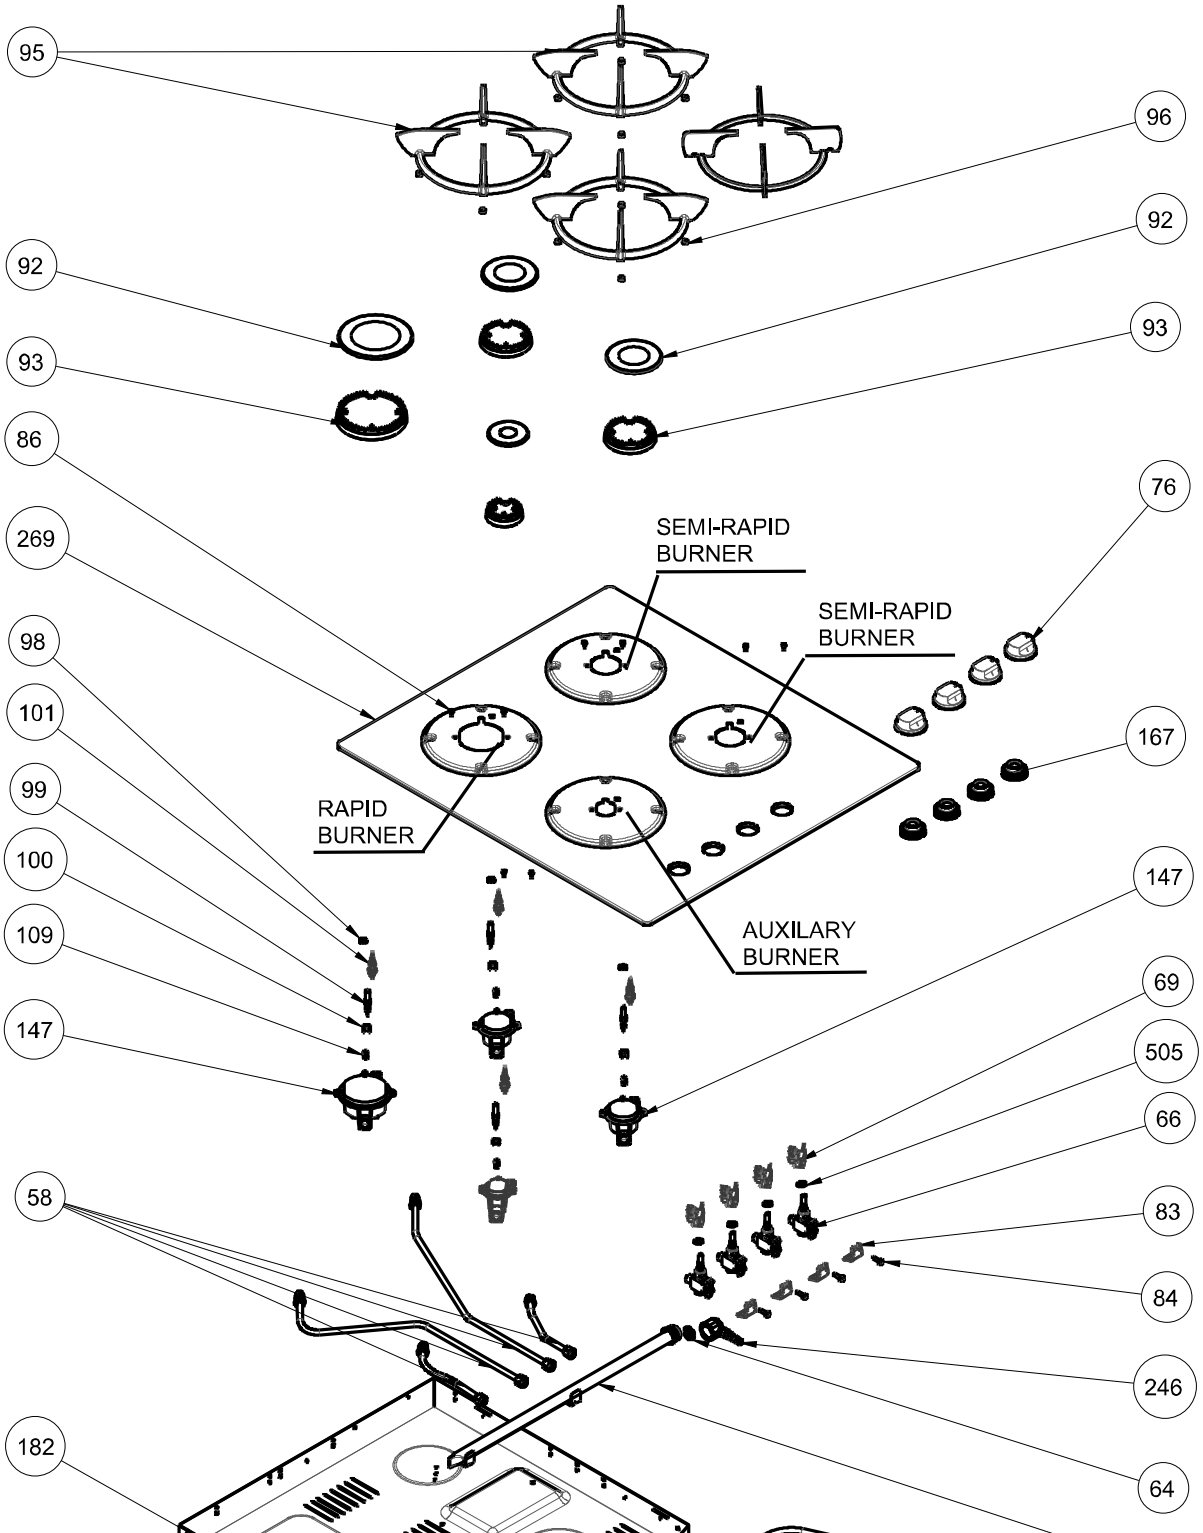
95
96
92
92
93
93
86
76
269
SEMI-RAPID
BURNER
SEMI-RAPID
BURNER
98
101
167
99
RAPID
BURNER
100
147
109
AUXILARY
BURNER
147
69
505
66
58
83
84
246
182
64

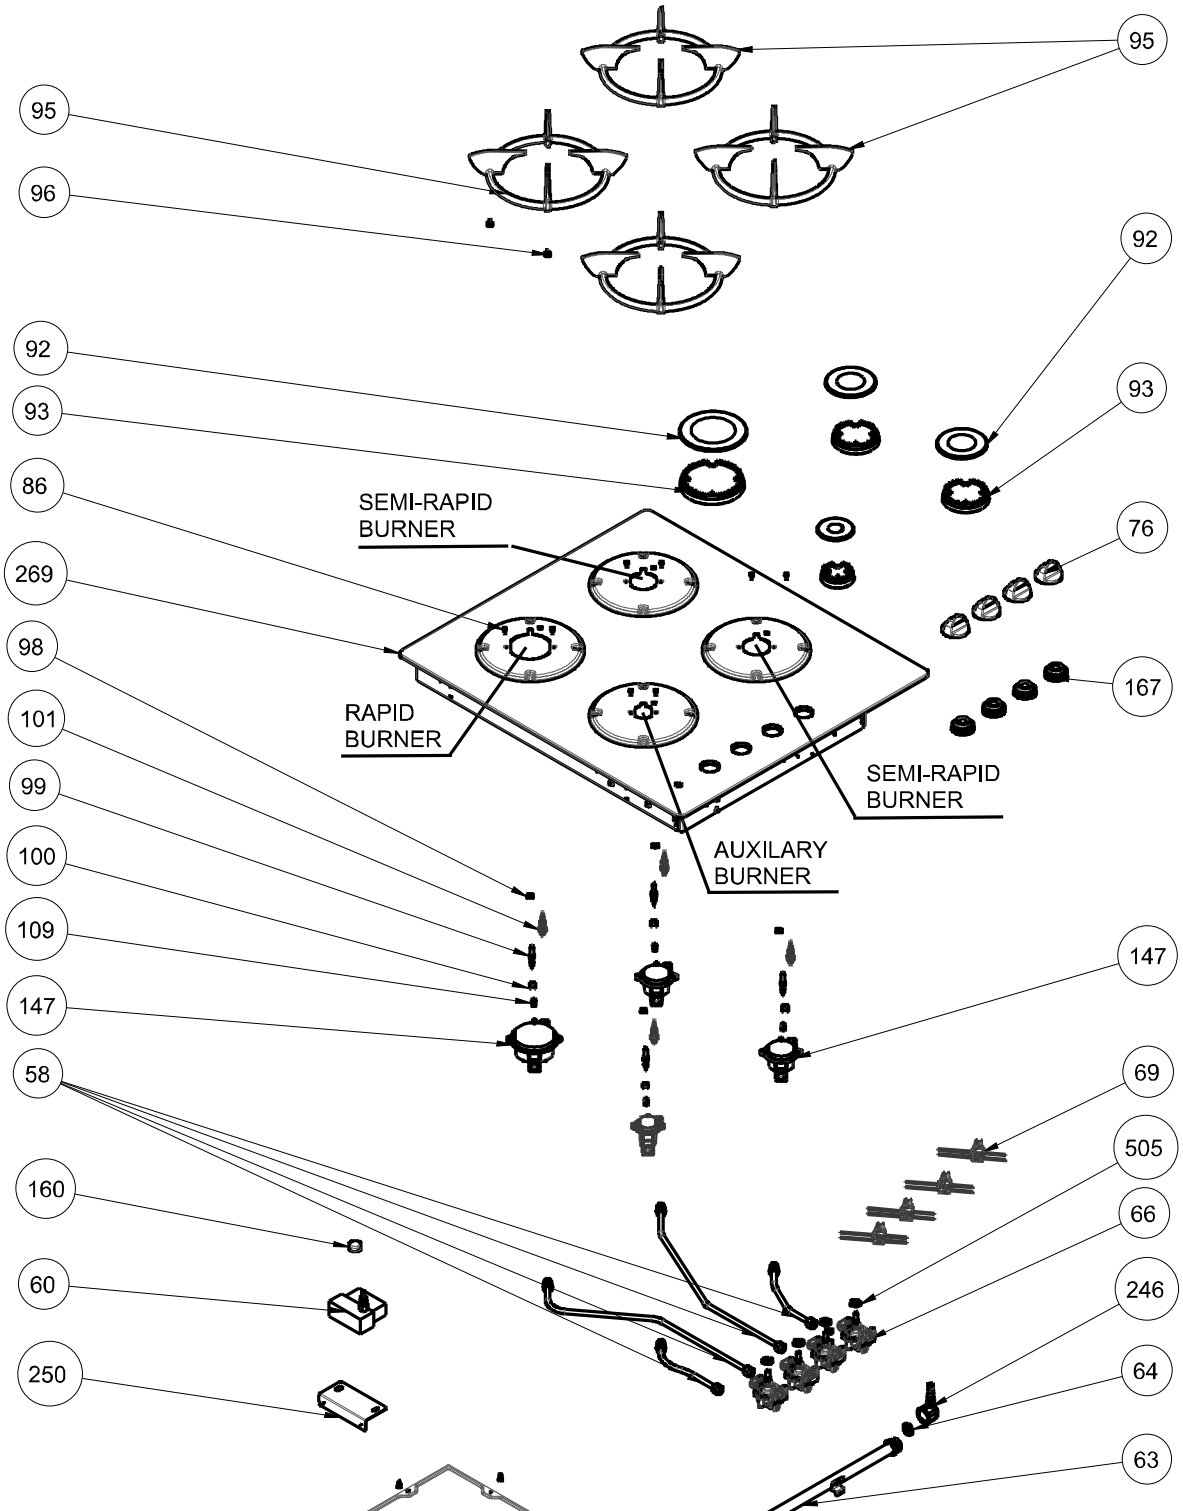
95
95
96
92
92
93
93
86
SEMI-RAPID
BURNER
76
269
98
167
RAPID
BURNER
SEMI-RAPID
BURNER
101
99
AUXILARY
BURNER
100
109
147
147
58
69
505
160
66
246
60
64
250
63

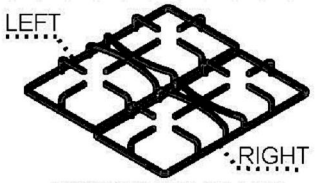

D TYPE ENAMELLED

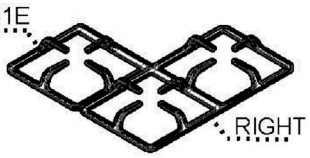

S TYPE CAST IRON

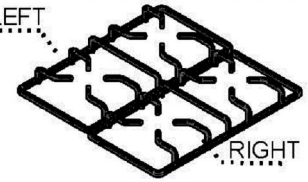

K TYPE ENAMELLED

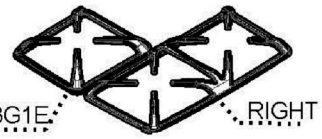

W TYPE CAST IRON

O TYPE ENAMELLED

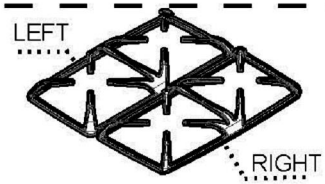

W TYPE CAST IRON

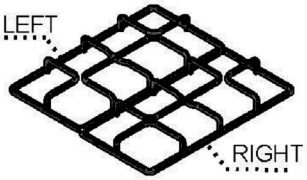

V TYPE ENAMELLED

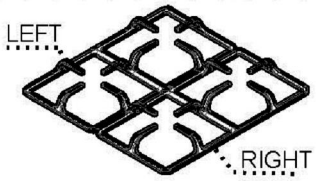

S TYPE CAST IRON

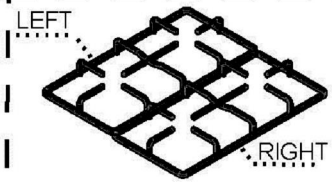

S TYPE ENAMELLED

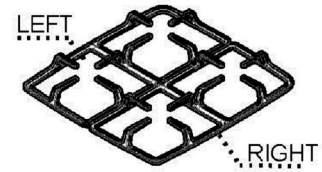

S TYPE CAST IRON

PAN SUPPORTS (OPTIONAL)

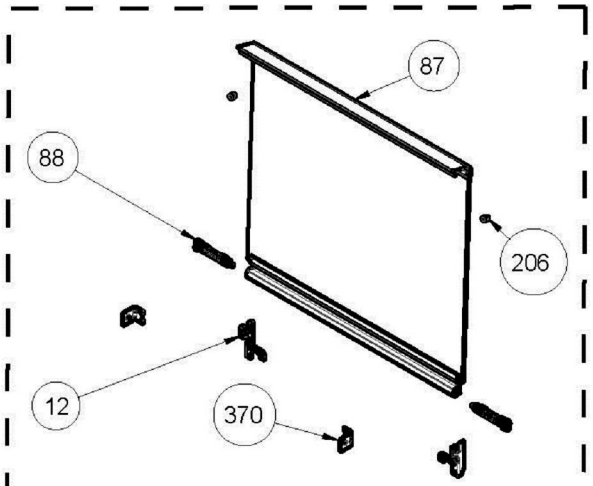

GLASS LID OPTIONAL
(AVAILABLE ONLY FOR FRAMED HOBS)

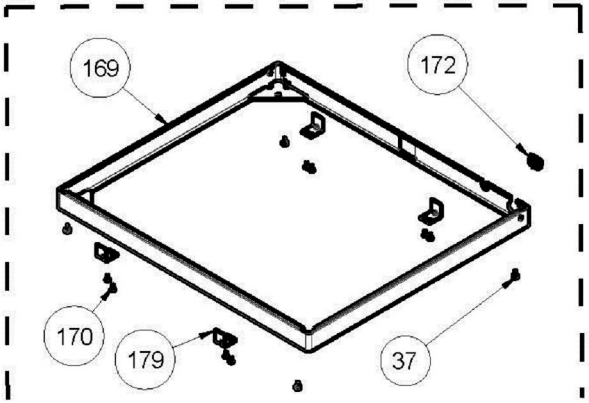

COOKTOP FRAME
(ONLY FOR TABLE-TOP HOBS)

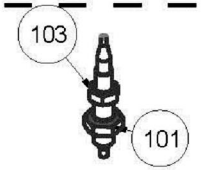

THERMOCOUPLE
(OPTIONAL)

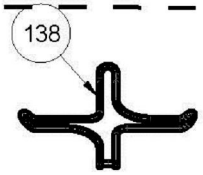

ETHNIC COFFEEPOT
SUPPORT (OPTIONAL)

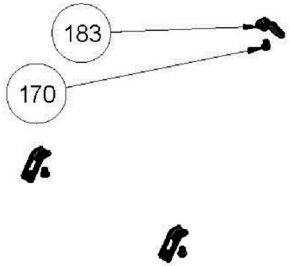

ASSEMBLY BRACKET
(ONLY FOR BUILT-IN HOBS)



KNOBS (ONLY FOR HOB - OPTIONAL)

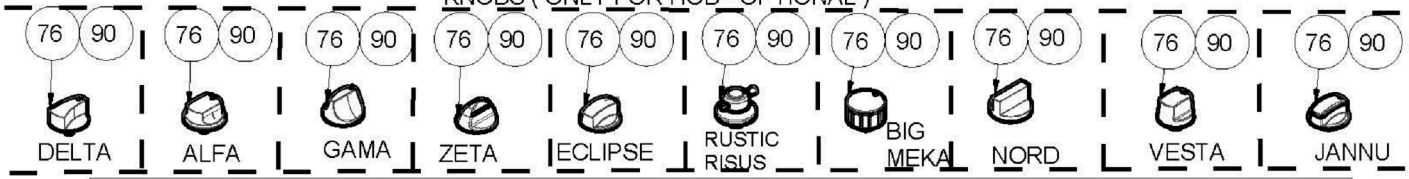

SPARE PART LIST	
POSITION NUMBER	**PART NAME**
4	SCREW (3.9*9.5)
12	GLASS LID HINGE COUNTERPART (RIGHT/LEGHT)
30	TERMINAL BOX
31	POWER CORD
37	DRAWER PANEL STOPER
58	GAS DELIVERY TUBE
60	IGNITOR (SEQUENTAL IGNITION / COUPLED BUTTON)
63	MANIFOLD
64	STRAIGHT HOSE FITTING GASKET
66	COOKTOP VALVE
69	MICROSWITCH HARNESS
71	SCREW (3.9*6.5)
76	KNOB (GAS)
77	SIGNAL LAMP LENS
79	SIGNAL LAMP BODY
81	BLOCK SWITCH
83	COOKTOP VALVE ASSEMBLY BRACKET
84 / 365	COOKTOP VALVE ASSEMBLY BRACKET CONTACT SCREW
86	BURNER BODY CONTACT SCREW
87	GLASS LID ASSEMBLY
88	GLASS LID HINGE (RIGHT/LEFT)
90	KNOB (ELECTRICAL)
91	NUT
92	BURNER CAP (SEMI-RAPID / RAPID / AUXILARY /WOK BURNER)
93	BURNER HEAD (SEMI-RAPID / RAPID / AUXILARY /WOK BURNER)
95	PAN SUPPORT
96	PAN SUPPORT BUMPER
98	SPARK PLUG GASKET
99	SPARK PLUG WITH CABLE
100	SPARK PLUG SEGMENT
101	THERMOCOUPLE
102	COOKTOP
103	THERMOCOUPLE FIXING NUT
105	HOTPLATE
109	INJECTOR (SEMI-RAPID / RAPID / AUXILARY BURNER)
138	ETHNIC COFFEEPOT SUPPORT
147	BURNER BODY (SEMI-RAPID / RAPID / AUXILARY /WOK BURNER)
160	IGNITOR BUTTON
167	KNOB GASKET
168	COOKTOP BOTTOM COVER (GAS)
169	COOKTOP FRAME
170	SCREW (4.2*9.5)