



Philips Consumer Lifestyle

ServiceManual

PRODUCT INFORMATION

General:

- Rechargeable
- World wide automatic voltage selection
- Washable
- Charge indication
- Battery low indication
- Battery full indication
- Travel lock
- Cleaning indicator
- Charge indicator
- Shaving unit replacement indicator

Safety info


- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage : 100 - 240 V / 50 - 60 Hz
- Shaving unit : RQ10 (4222 036 15000)
- Charging time : 1 hour
- Shaving time : up to 21 day's
- SAP coding : RQ1053

DISASSEMBLY- AND RE-ASSEMBLY ADVICE


- Remove shaving unit to prevent damaging during repairing
- Remove pivot cap (pos 3) with a little knife
- Remove screws **A**

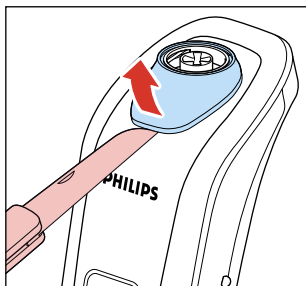


- Remove cover (pos 12)

Start on trimmerside

push left on the housing and right on the cover and make a small opening

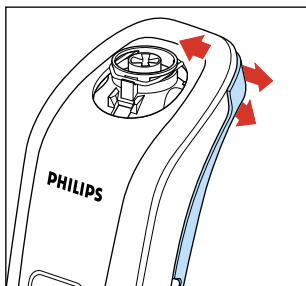

now push right on the housing and left on the cover so you can remove the cover.

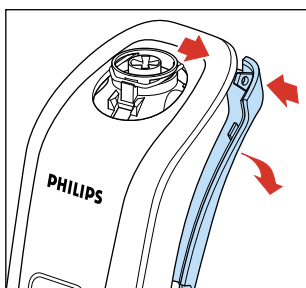


- Remove side grip's
- Remove housing shell (pos 4) start on trimmer side
- Remove deco plate assy (pos 7) snaplock on the side
- Remove screws **B**
- Remove pivot base (pos 8)
- Remove trimmer

REPAIR INSTRUCTIONS

- No specific issues

OPTIONAL (accessories)

- 4222 036 02770 Brush black
- 4222 036 04080 Power plug U1 Str. EUR.
- 4222 036 05160 Power plug U1 Str. NOR
- 4222 036 05120 Power plug U1 Str. AUS/NZ
- 4222 036 04090 Power plug U1 Str. GBR
- 4222 036 05110 Power plug U1 Str. CAN/TW
- 4222 036 03810 Power plug U1 Str. MEX
- 4222 036 04850 Power plug U1 Str. KOR
- 4222 036 03870 Power plug U1 Str. JAP
- 4222 036 10320 Power plug U1 Str. PRC
- 4222 036 03760 Power plug U1 Str. ARG
- 4222 036 15020 Stand HE

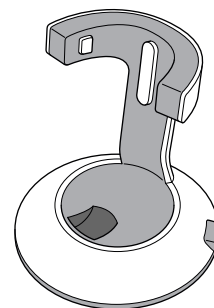

PARTS LIST

Pos	Service code	Description
1	4222 036 14990	Protection cap
2	4222 036 15000	Shaving unit SR1
3	4222 036 15080	Pivot cap SR1
4	4222 036 17340	Housing shell SR1 LE
5	4222 036 15050	Basic body SR1 LE
6	4222 036 14950	Magnet SR1
7	4222 036 15140	Deco Plate assy SR1 LE
8	4222 036 14980	Pivot base SR1
9	4222 036 15010	Trimmer assy SR1 HE/LE (Black knob)
10	4222 036 14940	Pivot Release spring SR1
11	4222 036 16660	Sidepanel (Left) SR1
	4222 036 16670	Sidepanel (Right) SR1
12	4222 036 17350	Cover shell SR1 HE/LE
	4222 036 03540	Screw A (Black)
	4822 502 14545	Screw B

